

3rd attempt – disconnect the Eng + from the HTM

Wire eng battery + to B2B engine in

This works apart from no engine battery voltage display at main panel and no D+ so fridge won't power on 12v

No engine battery display at main display or Zenec panel

B2B voltages correct as 12+ in and 14.4v out

