

4th attempt – replace original engine battery to HTM Eng +
Provide additional connection from HTM back to B2B Eng in +

This works apart from no engine battery voltage display at main panel and no D+ so fridge won't power on 12V

