

F I A T D U C A T O



O W N E R H A N D B O O K

Dear Customer,

Thank you for selecting Fiat and congratulations on your choice of a Fiat Ducato.

We have written this handbook to help you get to know all your new Fiat Ducato features and use it in the best possible way.

You should read it right through before taking the road for the first time. You will find information, tips and important warnings regarding the driving of your vehicle to help you derive the maximum from your Fiat Ducato technological features.

You are recommended to read carefully the warnings and indications, marked with the respective symbols, at the end of the page:



personal safety;



the vehicle wellbeing;



environmental protection.

The enclosed Warranty Booklet lists the services that Fiat offers to its Customers:

- ☐ the Warranty Certificate with terms and conditions for maintaining its validity
- ☐ the range of additional services available to Fiat Customers.

Best regards and good motoring!

**This Owner Handbook describes all Fiat Ducato versions.
As a consequence, you should consider only the information which is related
to the engine and bodywork version of the vehicle you purchased.**

MUST BE READ!

REFUELLING





Only refuel with diesel fuel conforming to the European specification EN590.

The use of other products or mixtures may irreparably damage the engine with invalidation of the warranty due to the damage caused.

ENGINE STARTING



Make sure that the handbrake is engaged; set the gearshift lever to neutral; fully depress the clutch pedal, without pressing the accelerator, then turn the ignition key to MAR and wait for the  and  warning lights to go off; turn the ignition key to AVV and release it as soon as the engine has started.

PARKING ON FLAMMABLE MATERIAL



While working, the catalyst develops a very high temperature. Do not park the vehicle over grass, dry leaves, pine needles or any other inflammable materials: risk of fire.


RESPECTING THE ENVIRONMENT



The vehicle is fitted with a system that allows continuous diagnosis of the components correlated with emissions to ensure better respect for the environment.

ELECTRICAL ACCESSORIES

If, after buying the vehicle, you decide to add electrical accessories (that will gradually drain the battery), visit a Fiat Dealership. They can calculate the overall electrical requirement and check that the vehicle's electric system can support the required load.

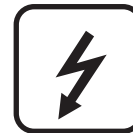

CODE card

Keep the code card in a safe place, not in the vehicle. You should always keep the electronic code written on the CODE card with you.






SCHEDULED SERVICING

Correct maintenance of the vehicle is essential for ensuring it stays in tip-top condition and safeguards its safety features, its environmental friendliness and low running costs for a long time to come.



THE OWNER'S MANUAL CONTAINS...

... information, tips and important warnings regarding the safe, correct driving of your vehicle, and its maintenance. Pay particular attention to the symbols  (personal safety)  (environmental protection)  (vehicle wellbeing).



DASHBOARD AND CONTROLS

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

DASHBOARD (LEFT HAND DRIVE VERSION)	5	SUPPLEMENTARY REAR AIR CONDITIONER	73
DASHBOARD (RIGHT HAND DRIVE VERSION)	6	EXTERNAL LIGHTS	74
SYMBOLS	7	WINDOW WASHING	77
THE FIAT CODE SYSTEM	7	CRUISE CONTROL	79
THE KEYS	8	CEILING LIGHTS	81
ELECTRONIC ALARM	13	CONTROLS	82
IGNITION DEVICE	15	POWER SUPPLY AND FUEL CUT-OFF SWITCH	84
INSTRUMENT PANEL (LEFT HAND DRIVE VERSION)	16	INTERIOR FITTINGS	85
INSTRUMENT PANEL (RIGHT HAND DRIVE VERSION)	17	MULTIMETER	91
INSTRUMENTS	18	SPEED BLOCK	92
DIGITAL DISPLAY	21	DOORS	92
MULTIFUNCTION DISPLAY	26	POWER WINDOWS/WINDOW WINDERS	97
TRIP COMPUTER	35	BONNET	98
FRONT SEATS	37	ROOF RACK/SKI RACK	100
HEAD RESTRAINTS	43	HEADLIGHTS	101
STEERING WHEEL	44	ABS SYSTEM	102
REARVIEW MIRRORS	45	ESP SYSTEM	103
HEATING AND VENTILATION	47	EOBD SYSTEM	106
MANUAL CLIMATE CONTROL SYSTEM	51	PARKING SENSORS	107
AUTOMATIC CLIMATE CONTROL SYSTEM	55	SOUND SYSTEM	108
SUPPLEMENTARY HEATER	65	ACCESSORIES PURCHASED BY THE OWNER	109
SELF-STANDING SUPPLEMENTARY HEATER	66	AT THE FILLING STATION	110
SUPPLEMENTARY REAR HEATER	72	PROTECTING THE ENVIRONMENT	112
		DIESEL PARTICULATE FILTER (DPF)	112

DASHBOARD (LEFT HAND DRIVE VERSION)

The presence and the position of the instruments and warning lights may vary according to the vehicle version.

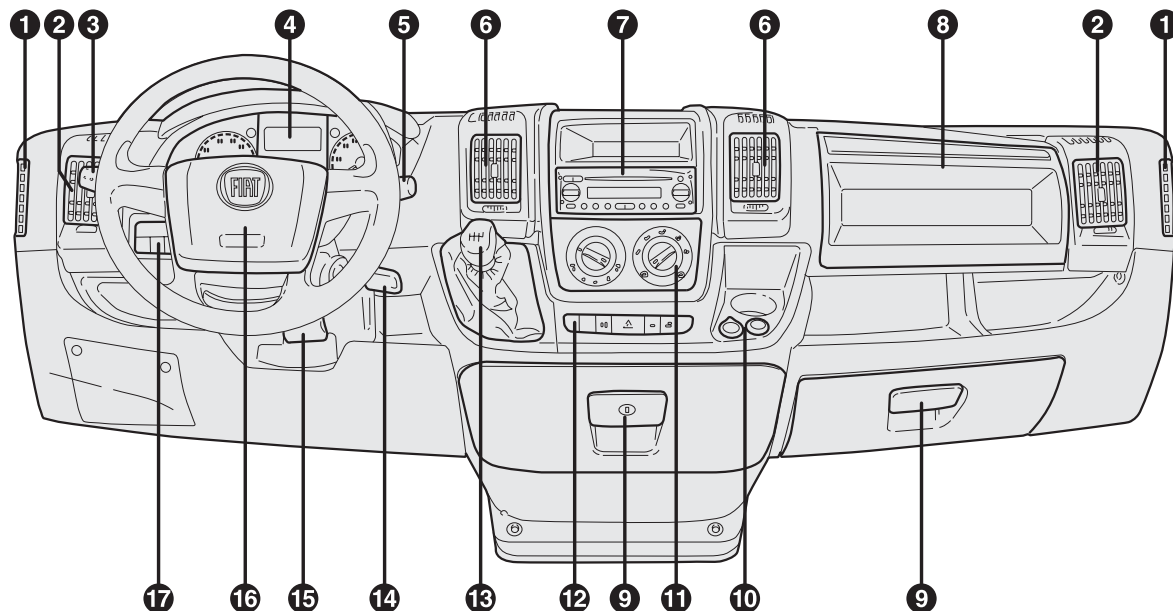



fig. I

F0N0320m

1. Fixed side air vents - **2.** Swivel side air vents - **3.** Left steering column stalk: external lights - **4.** Instrument panel and warning lights - **5.** Right steering column stalk: windscreen, rear window and trip computer controls - **6.** Swivel center air vents - **7.** Sound system (where provided) - **8.** Oddment compartment/Front passenger air bag (where provided) - **9.** Glovebox - **10.** Cigar lighter/12V outlet - **11.** Heating/ventilation/climate controls - **12.** Dashboard controls - **13.** Gear shift lever - **14.** Ignition switch - **15.** Steering wheel adjustment lever - **16.** Driver's air bag - **17.** Control panel: headlights adjustment/digital display/multifunction display.

DASHBOARD (RIGHT HAND DRIVE VERSION)

The presence and the position of the instruments and warning lights may vary according to the vehicle version.

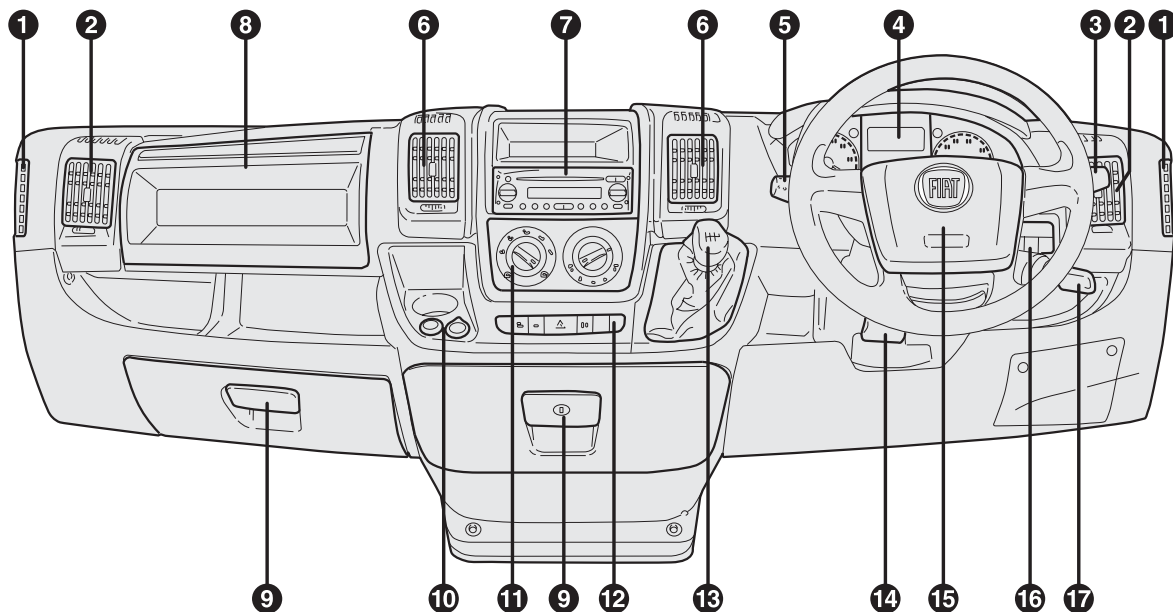

F0N0334m

1. Fixed side air vents - **2.** Swivel side air vents - **3.** Right steering column stalk: windscreen, rear window and trip computer controls - **4.** Instrument panel and warning lights - **5.** Left steering column stalk: external lights - **6.** Swivel center air vents - **7.** Sound system (where provided) - **8.** Oddment compartment/Front passenger air bag (where provided) - **9.** Glovebox - **10.** Cigar lighter/12V outlet - **11.** Heating/ventilation/climate controls - **12.** Dashboard controls - **13.** Gear shift lever - **14.** Steering wheel adjustment lever - **15.** Driver's air bag - **16.** Control panel: headlights adjustment/digital display/multifunction display - **17.** Ignition switch.

SYMBOLS

Special coloured labels have been attached near or actually on some of the components of your Ducato. These labels bear symbols that remind you of the precautions to be taken as regards that particular component.

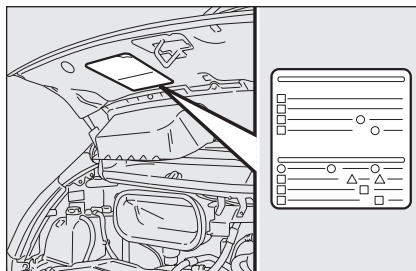


fig. 2

F0N0002m

The plate summarising the symbols used can be found under the bonnet **fig. 2**.

THE FIAT CODE SYSTEM

To further protect your vehicle from theft, it has been fitted with an engine immobilising system. This system is automatically activated when the ignition key is removed.


An electronic device, in fact, is fitted in each ignition key grip. The device transmits a radio-frequency signal when the engine is started through a special aerial built into the ignition switch. The modulate signal, which changes each time the engine is started, is the "password", by means of which the control unit recognises the key and enables to start the engine.

OPERATION

Each time the vehicle is started turning the ignition key to **MAR**, the Fiat CODE system control unit sends a recognition code to the engine electronic control unit to deactivate the inhibitor.

The code is sent only if the Fiat CODE system control unit has recognised the code transmitted from the key.



Each time the ignition key is turned to **STOP**, the Fiat CODE system deactivates the functions of the engine electronic control unit.

If the code has not been recognised correctly, the warning light  turns on accompanied by the related message on the display (see section "Warning lights and messages").

In this case, the key should be moved to the **STOP** position and then back to **MAR**; if the lock continues, possibly try again with the other key provided with the vehicle. If it is still not possible to start the vehicle, contact Fiat Dealership.

IMPORTANT Every key has its own code, which must be memorised by the system control unit. To memorise new keys, up to a maximum of eight, apply to Fiat Dealership.

Warning light coming on when driving

- ☐ If the warning light  turns on, this means that the system is running a self-test (for example for a voltage drop).
- ☐ If the warning light  stays on, contact a Fiat Dealership.



The electronic components inside the key may be damaged if the key is submitted to sharp knocks.

THE KEYS

CODE CARD fig. 3

The vehicle is delivered with two copies of the ignition key and with the CODE card which bears the following:

- A** the electronic code;
- B** the mechanical key code to be given to the Fiat Dealership when ordering duplicate keys.

IMPORTANT In order to ensure perfect efficiency of the electronic devices contained inside the keys, they should never be exposed to direct sunlight.

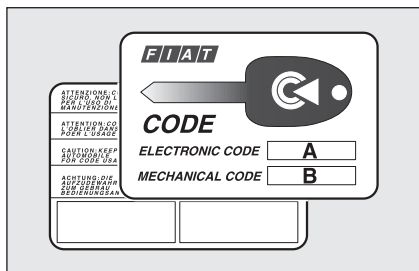


fig. 3

F0N0003m



All the keys and the CODE card must be handed over to the new owner when selling the vehicle.

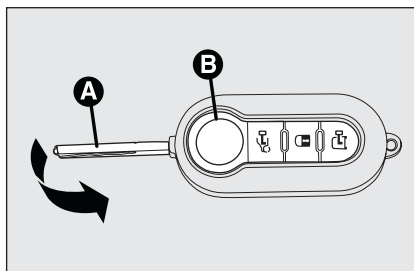


fig. 4

F0N0800m

KEY WITH REMOTE CONTROL fig. 4

The metal insert **A** is retractable and it operates:

- ☐ ignition switch;
- ☐ door locks;
- ☐ fuel filler cap locking/unlocking.

To extract the metal insert, press button **B**.


To refit it proceed as follows:


- ☐ keep button **B** pressed and move the metal insert **A**;
- ☐ release button **B** and turn the metal insert **A** until hearing the proper locking click.




WARNING

Button B should only be pressed when the key is away from the body, in particular from the eyes and from objects that can be spoilt (e.g. clothes). Make sure the key can never be touched by others, especially children, who may inadvertently press the button.

Button  shall be used for opening the front doors.

Button  shall be used for locking all doors.

Button  shall be used for opening the load compartment doors.

When unlocking the doors, the passenger's compartment lights will come on for a preset time.

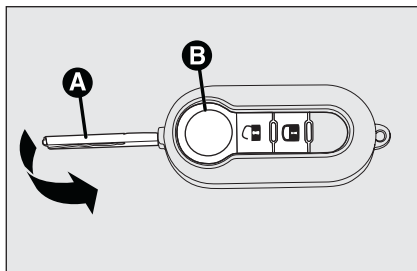


fig. 5

F0N0801m

Certain versions are provided with a key with remote control with two buttons **A** and **B** fig. 5.

Button **A** shall be used for locking all doors.

Button **B** shall be used for unlocking all doors.

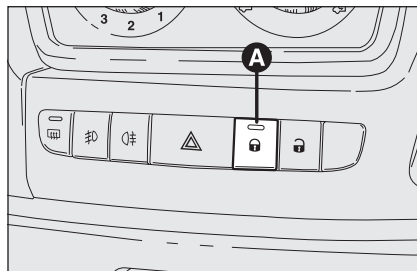


fig. 6

F0N0114m

Dashboards led indications

When locking the doors, led **A**-fig. 6 switches on for about 3 seconds and then starts flashing (deterrence function).

Once doors are locked, if one or more doors or the tailgate are not closed correctly, the led and direction indicators start flashing quickly.

Request for additional remote controls

The system can recognise up to 8 keys. Should a new key with remote control be necessary, contact a Fiat Dealership, taking with you the CODE card and the keys, a personal identity document and the vehicle's ownership documents.

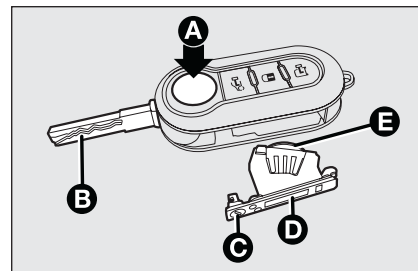


fig. 7

F0N0802m

Replacing the battery of the key with remote control fig. 7

Battery replacement:

- ☐ press button **A** and move the metal insert **B** to the open position;
- ☐ turn the screw **C** to **D** using a fine bit screwdriver;
- ☐ take out the battery case **D** and replace the battery **E** making sure that the bias is correct;
- ☐ refit the battery case **D** inside the key and lock it turning the screw **C** to **D**.



Used batteries are harmful to the environment. They should be disposed of as specified by law in the special containers provided, or take them to a Fiat Dealership, which will deal with their disposal.

KEY WITHOUT REMOTE CONTROL fig. 8

The metal insert of the key **A** is fixed.

The key operates:

- ☐ ignition switch;
- ☐ door locks;
- ☐ fuel filler cap locking/unlocking.

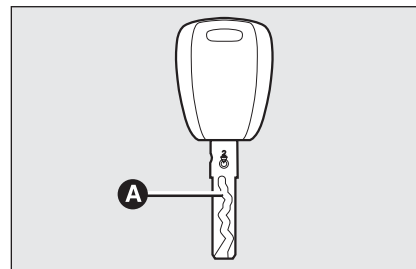








fig. 8

F0N0337m

The main functions that can be activated with the keys (with or without remote control) are the following:

Type of key	Door opening	Door closing from the outside	Dead lock activation (where provided)	Load compartment unlocking	Window opening (where provided)	Window closing (where provided)
Key without remote control	Key turning counterclockwise (driver side)	Key turning clockwise (driver side)	—	—	—	—
Key with remote control	Key turning counterclockwise (driver side)	Key turning clockwise (driver side)	—	—	—	—
	Press briefly button 	Press briefly button 	Double pressing on button 	Press briefly button 	Long press (over 2 seconds) on button 	Long press (over 2 seconds) on button 
Direction indicators flashing (only with key with remote control)	2 flashings	1 flashing	3 flashings	2 flashings	2 flashings	1 flashing
Deterrence led	Turning off	Turning on glowing steadily for about 3 seconds followed by deterrence led flashing	Double flashing, followed by deterrence led flashing	Deterrence led flashing	Turning off	Deterrence led flashing

IMPORTANT Window opening operation is a consequence of a door unlocking control; window closing operation is a consequence of a door locking control.

ELECTRONIC ALARM (where provided)

The alarm, provided in addition to all the remote control functions described previously is controlled by the receiver set under the dashboard near the fuse box.

WHEN THE ALARM IS TRIGGERED

The alarm comes into action in the following cases:

- ☐ unlawful opening of one of the doors or engine bonnet (perimetral protection);
- ☐ attempt to start the engine (key turned to **MAR**);
- ☐ battery cables cutting;
- ☐ abnormal raising/sloping of the vehicle.

Depending on the markets, the cutting in of the alarm causes operation of the siren and direction indicators (for about 26 seconds). The ways of operating and the number of cycles may vary depending on the markets.

A maximum number of sound/sight cycles is however envisaged; at the end of these cycles the system will resume its regular operation.

Anti-raising protection can be cut off by pressing the corresponding button (see paragraph “Anti-raising sensor” on the following pages).

IMPORTANT The engine immobiliser function is guaranteed by the Fiat CODE system, which is automatically activated when the key is removed from the ignition device.

HOW TO ACTIVATE THE ALARM

With the doors, bonnet and load compartment shut and ignition key to **STOP** or removed, point the key with remote control or removed, point the key with remote control in the direction of the vehicle, then press and release the button “lock”.

With the exception of certain markets, the system sounds a “beep” and the doors are locked.

Engagement of the alarm is preceded by a self-diagnostic test. If a fault is detected the system sounds a further warning “beep”.

In this case, switch the alarm off by pressing button “door unlock/load compartment unlock”, check that the doors and bonnet are properly shut, then switch the alarm on again by pressing button “lock”.

The door and bonnet not properly shut will be excluded from the alarm control.

If the doors, bonnet and load compartment are shut correctly and the warning “beep” is repeated, the system self-diagnostics has detected a system operating fault. It is therefore necessary to contact a Fiat Dealership.

IMPORTANT Operating the central door locking system with the metal insert of the key will not activate the alarm.

IMPORTANT The alarm is built in compliance with the law and regulations of the different destination countries.

HOW TO DEACTIVATE THE ALARM

Press button “door unlock/load compartment unlock” of the key with remote control.

The system will react as follows (with the exception of certain markets):

- ☐ two brief flashes of the direction indicators;
- ☐ two brief “beeps”;
- ☐ door unlocking.

IMPORTANT Operating the central door opening system with the metal insert of the key will not activate the alarm.

ANTI-RAISING SENSOR

The anti-raising sensor detects any abnormal vehicle raising/sloping, even partial (e.g.: attempt to remove a wheel).

This sensor can detect the smallest vehicle sideslip angle changes, both longitudinally and transversally.

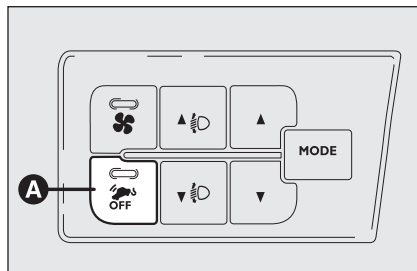



fig. 8a

F0N0232m

Anti-raising protection deactivation

To deactivate the anti-raising protection (for example when towing the vehicle with alarm on) press button **A**-fig. 8a set on the control panel; protection stays on until activating the central door opening again.

INDICATIONS OF ATTEMPTS TO BREAK IN

Any attempt to break in is indicated by turning on of the dedicated warning light  on the instrument panel with the relevant message on the display, if any (see section “Warning lights and messages”).

HOW TO CUT OFF THE ALARM SYSTEM

To deactivate the alarm system completely (for instance during prolonged inactivity of the vehicle) simply lock the vehicle using the emergency locking.

IMPORTANT To cut-out the alarm if remote control batteries are down or the system is failing, fit the key into the ignition switch and turn it to **MAR**.

IGNITION DEVICE

The key can be turned to 4 different positions **fig. 9**:

- ☐ **STOP**: engine off, key can be removed, steering column locked. Certain electrical devices (e.g.: sound system, central door locking...) can work.
- ☐ **MAR**: driving position. All electrical devices are powered.
- ☐ **AVV**: engine starting (unstable position).

The ignition switch is fitted with an electronic safety system that, in the event the engine is not started, turns back the ignition key to **STOP** before repeating the starting operation.



WARNING

If the ignition device is tampered with (e.g.: attempted theft), have it checked over by a Fiat Dealership as soon as possible.

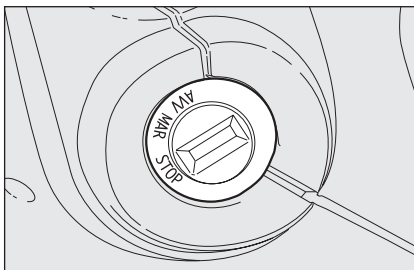


fig. 9

F0N0007m



WARNING

When getting out of the vehicle, always remove the key to prevent any occupants from accidentally activating the controls. Remember to engage the handbrake and if the vehicle is parked on uphill slope to engage the first gear. If the vehicle is facing downhill, engage the reverse gear. Never leave unsupervised children in the vehicle.



WARNING

Never remove the ignition key while the vehicle is moving. The steering wheel would automatically lock as soon as you try to turn it. This also applies when the vehicle is being towed.



WARNING

It is absolutely forbidden to carry out whatever after-market operation involving steering system or steering column modifications (e.g.: installation of anti-theft device) that could badly affect performance and safety, cause the lapse of warranty and also result in non-compliance of the vehicle with homologation requirements.

STEERING COLUMN LOCK


Engaging

When the key is at **STOP**, remove the key and turn the steering wheel until it locks.

Disengaging


Rock the steering wheel slightly as you turn the ignition key to **MAR**.

INSTRUMENT PANEL (LEFT HAND DRIVE VERSION)

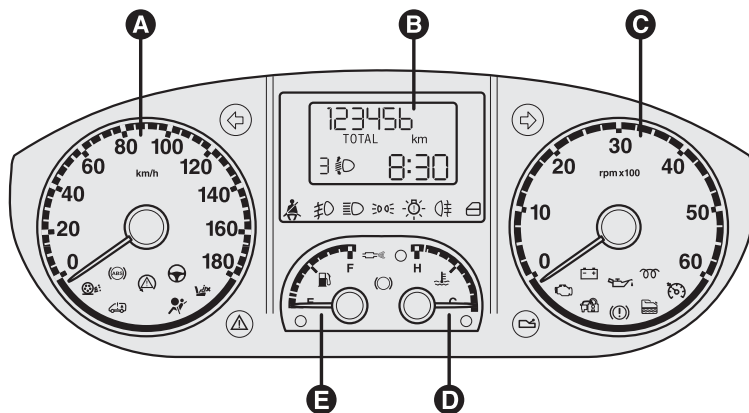

F0N0330m

fig. 10

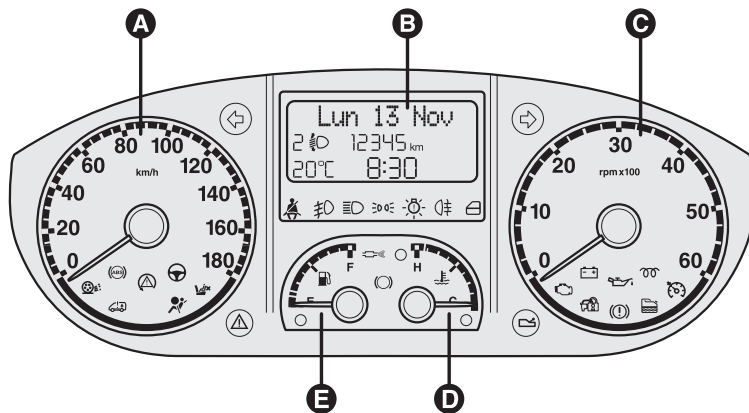

F0N0331m

fig. 11

Versions with digital display

- A** Speedometer (speed indicator)
- B** Digital display
- C** Rev counter
- D** Engine coolant temperature gauge and excessive temperature warning light
- E** Fuel level gauge with reserve warning light

Versions with multifunction display

- A** Speedometer (speed indicator)
- B** Multifunction display
- C** Rev counter
- D** Engine coolant temperature gauge and excessive temperature warning light
- E** Fuel level gauge with reserve warning light

INSTRUMENT PANEL (RIGHT HAND DRIVE VERSION)

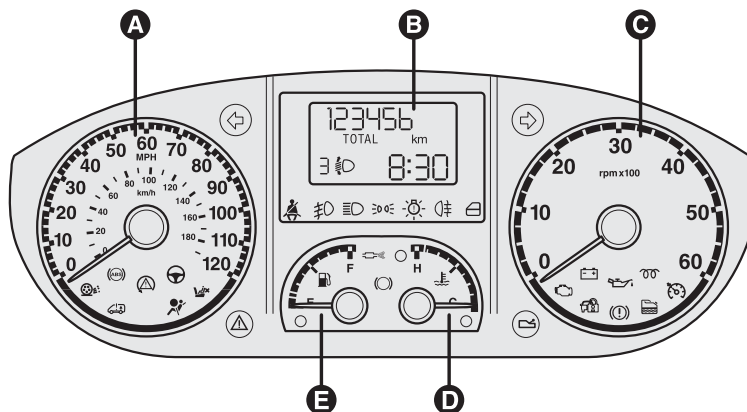


fig. 11/a

F0N0335m

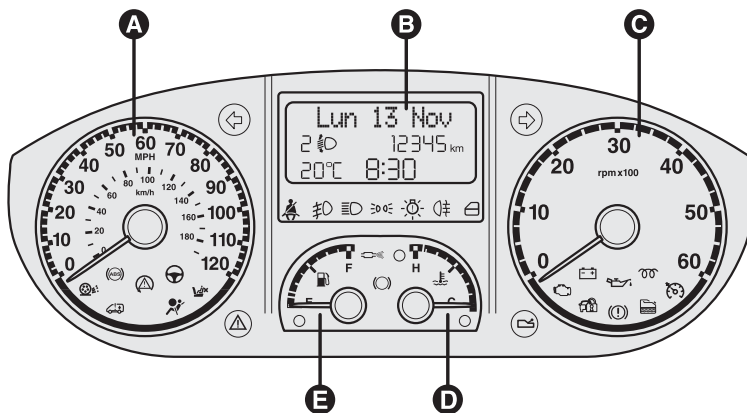


fig. 11/b

F0N0336m

Versions with digital display

- A Speedometer (speed indicator)
- B Digital display
- C Rev counter
- D Engine coolant temperature gauge and excessive temperature warning light
- E Fuel level gauge with reserve warning light

Versions with multifunction display

- A Speedometer (speed indicator)
- B Multifunction display
- C Rev counter
- D Engine coolant temperature gauge and excessive temperature warning light
- E Fuel level gauge with reserve warning light

INSTRUMENTS

Instrument background color and type may vary according to the version.

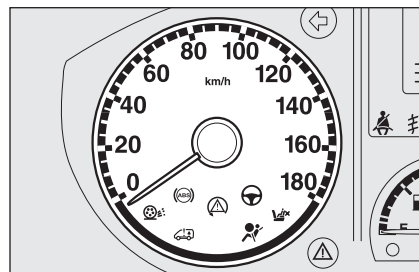


fig. 12

SPEEDOMETER fig. 12

It shows the engine speed.

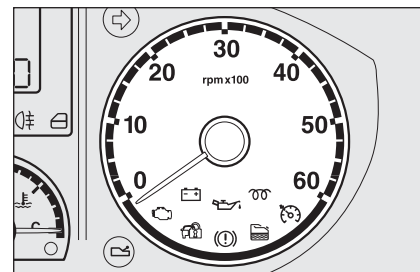


fig. 13

REV COUNTER fig. 13

Rev counter shows engine rpm.

IMPORTANT The electronic injection control system gradually shuts off the flow of fuel when the engine is “over-revving” resulting in a gradual loss of engine power.

When the engine is idling, the rev counter may indicate a gradual or sudden highering of the speed.

This is normal and takes place for example when activating the climate control system or the fan. In these events a slight increase in engine idling preserves the battery charge.

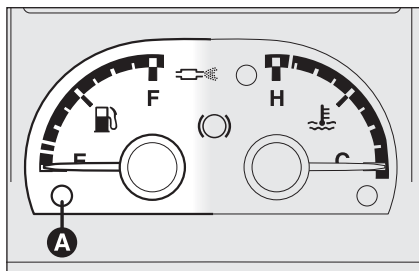


fig. 14

FUEL LEVEL GAUGE fig. 14

This shows the amount of fuel left in the fuel tank.

E tank empty.

F full tank (see the indications given in paragraph "At the filling station").

The warning light **A** turns on to indicate that approximately 10/12 litres (according to versions) of fuel are left in the tank.

Do not travel with the fuel tank almost empty: the gaps in fuel delivery could damage the catalyst.

IMPORTANT The needle sets to **E** with warning light **A** flashing to indicate that the system is failing. In this event contact Fiat Dealership to have the system checked.

IMPORTANT Do not turn the supplementary heater (Webasto) on, under fuel reserve conditions.

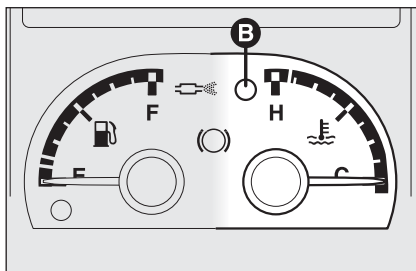


fig. 15

ENGINE COOLANT TEMPERATURE GAUGE fig. 15

This shows the temperature of the engine coolant fluid and begins working when the fluid temperature exceeds approx. 50°C.

Under normal conditions, the needle should hover around the middle of the scale according to the working conditions.

C Low engine coolant temperature.

H High engine coolant temperature.

The turning on of the warning light **B** (on certain versions with a message on the multifunction display) indicates that the coolant fluid temperature is too high; in this case, stop the engine and contact a Fiat at Dealership.



If the needle reaches the red area, stop the engine immediately and contact a Fiat Dealership.

ENGINE OIL LEVEL GAUGE (where provided)

This gauge shows the engine oil level.

Versions with digital display

Turning the ignition key to **MAR**, the display will show the engine oil amount by displaying five symbols.




Partial gradual turning off of the symbols indicates oil decrease.

If the oil level falls below the preset limit (topping up is therefore required), the five dashes will start flashing on the display.

The oil level is correct when 4 or 5 symbols are turned on. If the fifth symbol does not turn on, it shall not be considered as a failure or low oil level in the sump.

IMPORTANT Proper engine oil level shall however be checked by means of the dipstick (see paragraph "Checking levels" in section "Vehicle maintenance").

Few seconds after, engine oil amount symbols will disappear from the display, and:

- ☐ if scheduled servicing interval is near to come, the display will show the distance to cover and the instrument panel warning light  will turn on. When reaching the scheduled servicing interval the display will show some dashes.
- ☐ then, if engine oil change interval is near to come, the display will show on the top of the screen the distance to cover to next oil change together with message "OIL" displayed on the bottom of the screen. When reaching the scheduled servicing interval the display will show five dashes.

Versions with multifunction display

Turning the ignition key to **MAR** the display will show the oil level by the turning on/off of five symbols.




Partial gradual turning off of the symbols indicates oil decrease.

The oil level is correct when 4 or 5 symbols are turned on. If the fifth symbol does not turn on, it shall not be considered as a failure or low oil level in the sump.

When the oil level falls below the preset limit the display will show the dedicated message to warn the driver that topping up is required.

IMPORTANT Proper engine oil level shall however be checked by means of the dipstick (see paragraph "Checking levels" in section "Vehicle maintenance").

Few seconds after, engine oil amount symbols will disappear from the display, and:

- ☐ if scheduled servicing interval is near to come, the display will show the distance to cover and symbol . When reaching the scheduled servicing interval the display will show a dedicated message.
- ☐ then, if engine oil change interval is near to come, the display will show the distance to cover to next oil change. When reaching the scheduled servicing interval the display will show a dedicated message.

DIGITAL DISPLAY

STANDARD SCREEN fig. 16

The standard screen shows the following indications:

- A** Headlight aiming position (only with dipped beam headlights on).
- B** Clock (always displayed, even with ignition key removed and front doors closed).
- C** Odometer (covered km or miles) and computer Trip information.

Note With key removed (when opening one of the front doors) the display will turn on and show for a few seconds the km or mi covered.

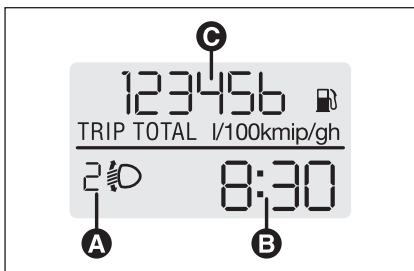


fig. 16

FON0016m

CONTROL BUTTONS fig. 17

▲ To scroll the displayed menu and the related options upwards or to increase the value displayed.

MODE Press briefly to display the menu and/or to go to next screen or to confirm the required menu option.
Long press to go back to the standard screen.

▼ To scroll the displayed menu and the related options downwards or to decrease the value displayed.

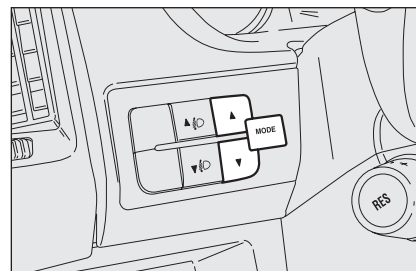


fig. 17

FON0017m

Note Buttons ▲ and ▼ activate different functions according to the following situations:

Setup menu

- to scroll the menu options upwards and downwards;
- to increase or decrease values during settings.

SETUP MENU fig. 18

The menu comprises a series of functions arranged in a “circular fashion” which can be selected through buttons ▲ and ▼ to access the different select operations and settings (setup) given in the following paragraphs.

The setup menu can be activated by pressing briefly button **MODE**.

Single presses on buttons ▲ and ▼ will scroll the setup menu options.

Handling modes differ with each other according to the characteristic of the option selected.

Selecting a menu option

- press briefly button **MODE** to select the menu option to set;
- press buttons ▲ and ▼ (by single presses) to select the new setting;
- press briefly button **MODE** to store the new setting and to go back to the previously selected menu option.

Selecting “Set Clock”


- briefly press button **MODE** to select the first value to change (hours);
- press buttons ▲ and ▼ (by single presses) to select the new setting;
- briefly press button **MODE** to store the new setting and to go to the next setup menu option (minutes);
- after setting the values with the same procedure, you’ll go back to the menu option previously selected.

Press the button **MODE** for long

- to quit the set up menu if you are in the menu;
- to quit the displayed menu if you are setting an option;
- to save only the settings stored yet (and confirmed by pressing button **MODE**).

The setup menu displaying is timed; when quitting the menu due to timing expiry, only settings stored yet by the user (and confirmed by pressing briefly button **MODE**) will be saved.

Briefly press button **MODE** to start surfing from the standard screen. To surf the menu use buttons ▲ or ▼. **Note** For safety reasons, when the vehicle is running, it is possible to access only the reduced menu (for setting "SPEEd"). When the vehicle is stationary access to the whole menu is enabled.

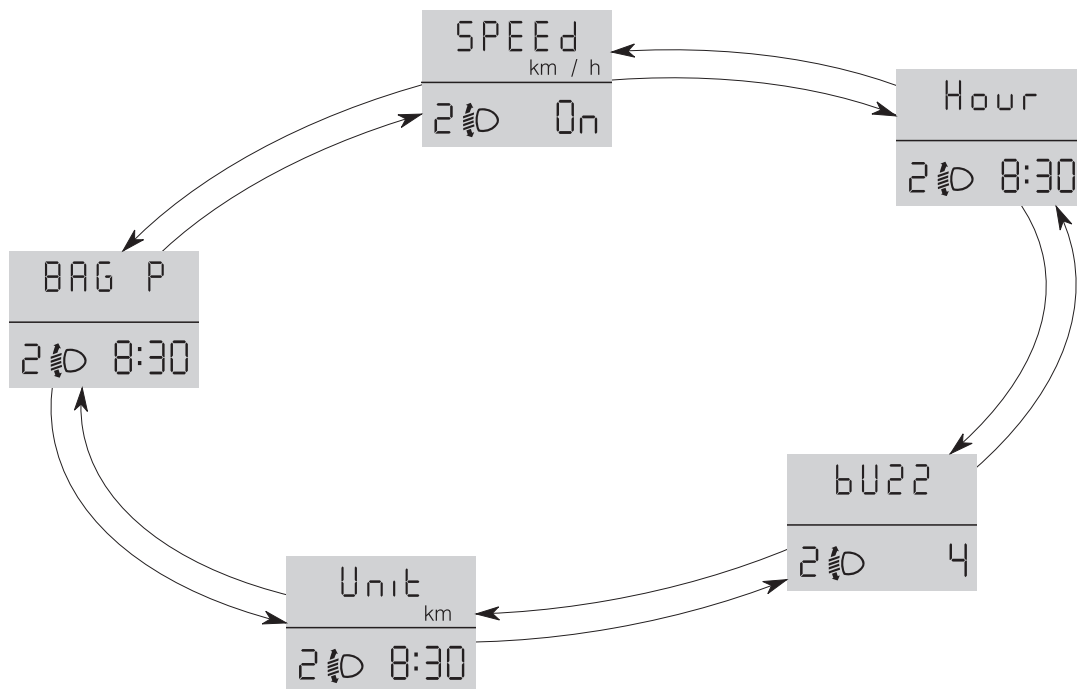

F0N1007g

fig. 18

Setting the speed limit (SPEED)

With this function it is possible to set the vehicle speed limit (km/h or mph), when this limit is exceeded the driver is immediately alerted (see section “Warning lights and messages”).

To set the speed limit, proceed as follows:

- briefly press button **MODE**, the display will show the wording (SPEED) and the unit (km/h) or (mph) previously set;
- press button ▲ or ▼ to select speed limit activation (On) or deactivation (OFF);
- if the function has been activated (On), press buttons ▲ or ▼ to select the required speed limit and then press **MODE** to confirm;

Note The possible setting is between 30 and 200 km/h, or between 20 and 125 mph depending on the unit set previously (see paragraph “Setting the distance unit (Unit)”) described later. Every press on button ▲/▼ increases/decreases by 5 units. Keeping the button ▲/▼ pressed obtains the automatic fast increase or decrease. When you are near the required setting complete adjustment by single presses.

- briefly press button **MODE** to go back to the menu screen or press the button for long to go back to the standard screen without storing settings.

Setting the clock (Hour)

With this function it is possible to set the clock.

To set the required unit proceed as follows:

- briefly press button **MODE**, “hours” will flash on the display;
- press button ▲ or ▼ for setting;
- briefly press button **MODE**, “minutes” will flash on the display;
- press button ▲ or ▼ for setting;
- briefly press button **MODE** to go back to the menu screen or press the button for long to go back to the standard screen without storing settings.

Adjusting the buzzer volume (bUZZ)

This function enables to adjust the volume of the buzzer accompanying any failure/warning indication.

To adjust the volume proceed as follows:

- briefly press button **MODE**, the display will show the wording (bUZZ);
- press button ▲ or ▼ to select the required volume (volume can be adjusted according to 8 levels).
- briefly press button **MODE** to go back to the menu screen or press the button for long to go back to the standard screen without storing settings.

Setting the distance unit (Unit)

With this function it is possible to set the unit.

To set the required unit proceed as follows:


- briefly press button **MODE**, the display will show the wording (Unit) and the previously set unit (km) or (mi);
- press button ▲ or ▼ to select the required distance unit.
- briefly press button **MODE** to go back to the menu screen or press the button for long to go back to the standard screen without storing settings.

Front passenger's air bag and side bag (where provided) activation/deactivation (BAG P)

This function shall be used to activate/deactivate the front passenger's air bag.

Proceed as follows:

- ☐ press button **MODE** and after displaying the message (BAG P OFF) (to deactivate) or (BAG P On) (to activate) by pressing buttons ▲ or ▼, press again button **MODE**;
- ☐ the confirmation request message will be displayed;
- ☐ press buttons ▲ or ▼ to select (YES) (confirming activation/deactivation) or (no) (to abort);
- ☐ briefly press button **MODE** to confirm setting and to go back to the menu screen or press the button for long to go back to the standard screen without storing settings.

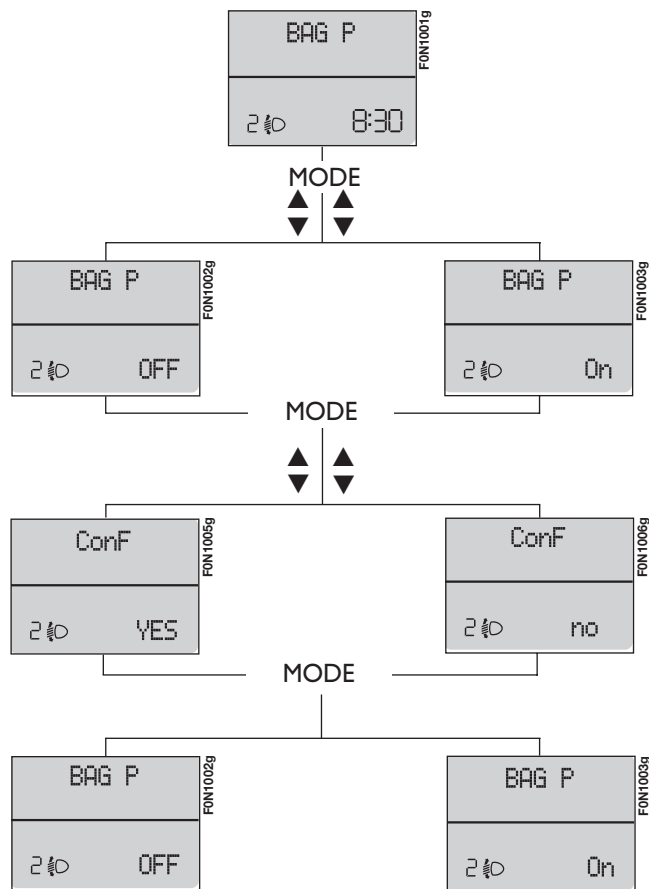

MULTIFUNCTION DISPLAY (where provided)

The multifunction display shows useful information necessary when driving, in particular:

INFORMATION ON “STANDARD” SCREEN fig. 19

The standard screen shows the following indications:

- A** Date.
- B** Odometer (covered km or miles).
- C** Clock (always displayed, even with ignition key removed and front doors closed).
- D** External temperature.
- E** Headlight aiming position (only with dipped beam headlights on).

Note When opening one of the front doors, the display will turn on and show for a few seconds the clock and the km or mi covered.

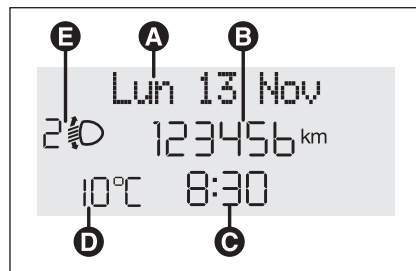


fig. 19

F0N0018m

CONTROL BUTTONS fig. 20

- ▲ To scroll the displayed menu and the related options upwards or to increase the value displayed.

MODE Press briefly to display the menu and/or to go to next screen or to confirm the required menu option.
Long press to go back to the standard screen.

- ▼ To scroll the displayed menu and the related options downwards or to decrease the value displayed.

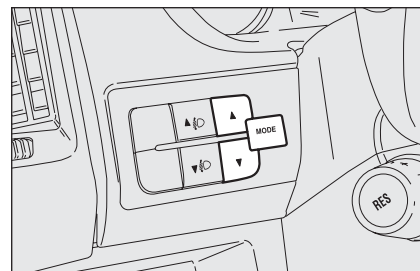


fig. 20

F0N0017m

Note Buttons ▲ and ▼ activate different functions according to the following situations:

To adjust light inside the passenger compartment

– with sidelights on and standard screen active, enable to adjust the light intensity from inside the vehicle

Setup menu

– to scroll the menu options upwards and downwards;
– to increase or decrease values during settings.

SETUP MENU fig. 21

The menu comprises a series of functions arranged in a “circular fashion” which can be selected through buttons **+** and **–** to access the different select operations and settings (setup) given in the following paragraphs. For certain options (Hour and Unit) a submenu is provided.

The setup menu can be activated by pressing briefly button **MODE**.

Single presses on buttons **▲** or **▼** will scroll the setup menu options.

Handling modes differ with each other according to the characteristic of the option selected.

Selecting an option of the main menu without submenu:

- press briefly button **MODE** to select the main menu option to set;
- press buttons **▲** or **▼** (by single presses) to select the new setting;
- press briefly button **MODE** to store the new setting and to go back to the main menu option previously selected.

Selecting an option of the main menu with submenu:

- press briefly button **+** to display the first submenu option;
- press buttons **▲** or **▼** (by single presses) to scroll all the submenu options;
- press briefly button **MODE** to select the displayed submenu option and to open the relevant setup menu;
- press buttons **▲** or **▼** (by single presses) to select the new setting for this submenu option;
- press briefly button **MODE** to store the new setting and to go back to the previously selected submenu option.

Selecting “Set Date” and “Set time”:


- briefly press button **MODE** to select the first value to change (e.g. hours / minutes or year / month / day);
- press buttons **▲** or **▼** (by single presses) to select the new setting;
- briefly press button **MODE** to store the new setting and to go to the next setup menu option, if this is the last one you will go back to the previously selected option of the main menu.

Press button MODE for long:

- to quit the set up menu if you are in the main menu;
- to quit the main menu if you are at another point of the menu (e.g.: at submenu option setting level, at submenu level or at main menu option setting level);
- to save only the settings stored yet (and confirmed by pressing button **MODE**).

The setup menu displaying is timed; when quitting the menu due to timing expiry, only settings stored yet by the user (and confirmed by pressing briefly button **MODE**) will be saved.

Example:

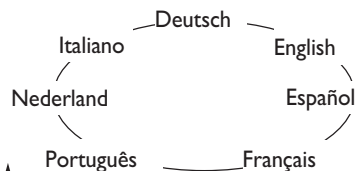

Briefly press button **MODE** to start surfing from the standard screen. To surf the menu use buttons ▲ or ▼. **Note** For safety reasons, when the vehicle is running, it is possible to access only the reduced menu (for setting the “Speed Beep”). When the vehicle is stationary access to the whole menu is enabled.

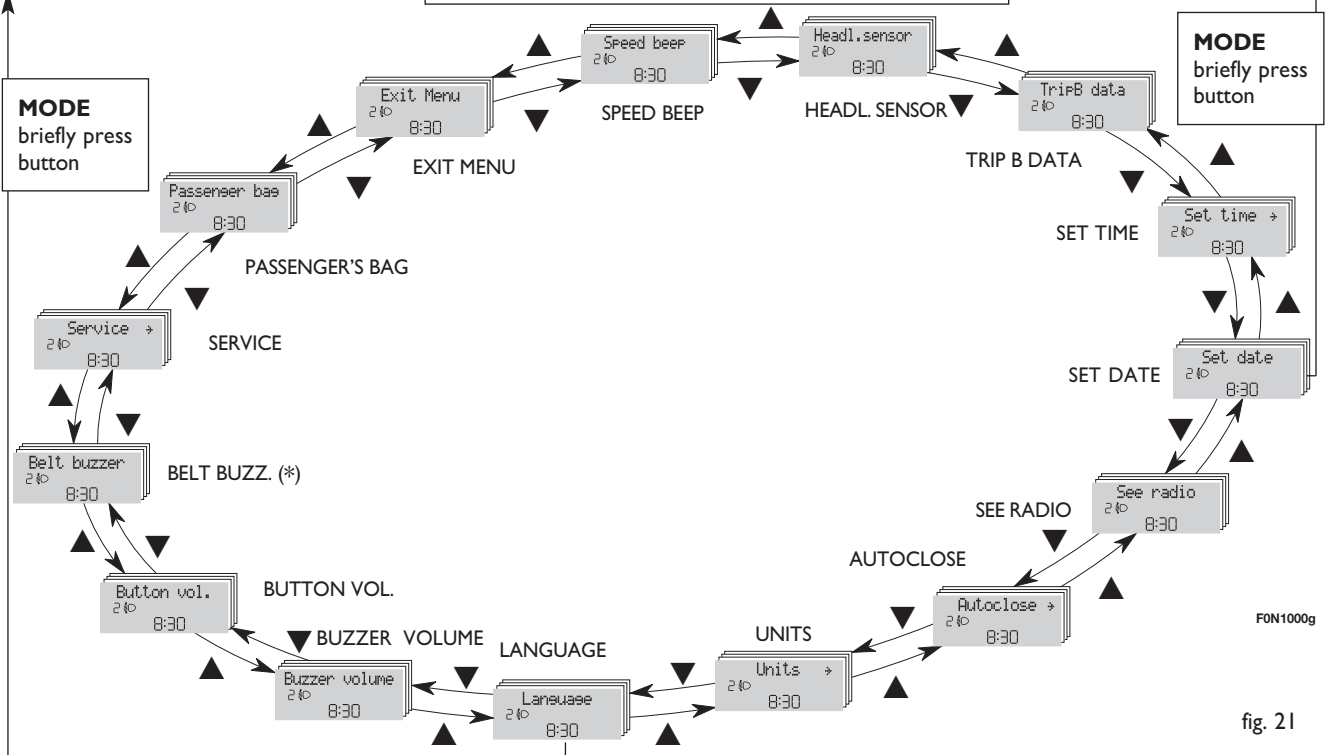


fig. 21

(*) This function can be only displayed after deactivating the S.B.R. system at Fiat Dealership.

Speed limit (Speed Beep)

With this function it is possible to set the vehicle speed limit (km/h or mph); when this limit is exceeded the driver is immediately alerted (see section “Warning lights and messages”).

To set the speed limit, proceed as follows:

- briefly press button **MODE**, the display will show the wording (Speed Beep);
- press button ▲ or ▼ to select speed limit activation (On) or deactivation (Off);
- if the function has been activated (On), press buttons ▲ or ▼ to select the required speed limit and then press **MODE** to confirm.

Note The possible setting is between 30 and 200 km/h, or between 20 and 125 mph depending on the unit set previously (see paragraph “Setting the distance unit (Units)”) described later. Every press on button ▲ / ▼ increases/decreases by 5 units. Keeping the button ▲ / ▼ pressed obtains the automatic fast increase or decrease. When you are near the required setting complete adjustment by single presses.

– briefly press button **MODE** to go back to the menu screen or press the button for long to go back to the standard screen without storing settings.

To cancel the setting, proceed as follows:

- briefly press button **MODE**: (On) will flash on the display;
- press button ▼: (Off) will flash on the display;
- briefly press button **MODE** to go back to the menu screen or press the button for long to go back to the standard screen without storing settings.

Headlight sensor sensitivity adjustment (where provided)

With this function it is possible to adjust the light sensor sensitivity according to 3 levels.

To set the required sensitivity level proceed as follows:

- briefly press button **MODE**, the previously set sensitivity “level” will flash on the display;

– press button ▲ or ▼ for setting;

– briefly press button **MODE** to go back to the menu screen or press the button for long to go back to the standard screen without storing settings.

Trip B On/Off (tripB data)

Through this option it is possible to activate (On) or deactivate (Off) the Trip B (partial trip).

For further information see “Trip computer”.

For activation / deactivation, proceed as follows:

- briefly press button **MODE**: (On) or (Off) will flash on the display (according to previous setting);
- press button ▲ or ▼ for setting;
- briefly press button **MODE** to go back to the menu screen or press the button for long to go back to the standard screen without storing settings.

Set clock (Set time)

This function enables to set the clock through two sub-menus: "Time" and "Mode".

Proceed as follows:

- briefly press button **MODE**, the display will show the two sub-menus "Time" and "Mode";
- press button ▲ or ▼ to surf the two sub-menus;
- select the required option and then press button **MODE**;
- *if selecting "Time"*: briefly press button **MODE**, "hours" will flash on the display;
- press button ▲ or ▼ for setting;
- briefly press button **MODE**, "minutes" will flash on the display;
- press button ▲ or ▼ for setting;

– *if selecting "Mode"*: briefly press button **MODE**, "24h" or "12h" mode will flash on the display;

– press button ▲ or ▼ to select "24h" or "12h".

After setting, briefly press button **MODE** to go back to the submenu screen or press the button for long to go back to the main menu screen without storing settings.

– press again button **MODE** for long to go back to the standard screen or to the main menu according to the current menu level.

Set date (Set Date)

This function enables to update the date (year - month - day).

To correct the date proceed as follows:

- briefly press button **MODE**, "day" will flash on the display;
- press button ▲ or ▼ for setting;
- briefly press button **MODE**, "month" will flash on the display;
- press button ▲ or ▼ for setting;
- briefly press button **MODE**, "year" will flash on the display;
- press button ▲ or ▼ for setting.

Note Every press on button ▲ or ▼ increases/decreases by 1 unit. Keeping the button pressed obtains automatic fast increase or decrease. When you are near the required setting complete adjustment by single presses.

– briefly press button **MODE** to go back to the menu screen or press the button for long to go back to the standard screen without storing settings.

Audio repetition (See radio)

With this function the display repeats information relevant to the sound system.

- Radio: selected radio station frequency or RDS message, automatic tuning activation or AutoStore;
- audio CD, MP3 CD: track number;
- CD Changer: CD number and track number;

To activate (On) or to deactivate (Off) sound system info displaying proceed as follows:

- briefly press button **MODE**: (On) or (Off) will flash on the display (according to previous setting);
- press button ▲ or ▼ for setting;
- briefly press button **MODE** to go back to the menu screen or press the button for long to go back to the standard screen without storing settings.

Automatic door locking with vehicle running (Autoclose)

When activated (On), this function locks automatically the doors when the vehicle speed exceeds 20 km/h.

To activate (On) or to deactivate (Off) this function proceed as follows:

- briefly press button **MODE** to display the submenu;
- briefly press button **MODE** : (On) or (Off) will flash on the display (according to previous setting);
- press button ▲ or ▼ for setting;
- briefly press button **MODE** to go back to the menu screen or press the button for long to go back to the standard screen without storing settings;
- press again button **MODE** for long to go back to the standard screen or to the main menu according to the current menu level.

Set unit (Units)

With this function it is possible to set the units through three sub-menus: “Distances”, “Consumption” and “Temperature”.

To set the required unit proceed as follows:

- briefly press button **MODE**, to display the three sub-menus;
- press button ▲ or ▼ to surf the three sub-menus;
- select the required sub-menu and then press briefly button **MODE**;
- if selecting “Distances”: briefly press button **MODE** the display will show “km” or “mi” (according to previous setting);
- press button ▲ or ▼ for setting;
- if selecting “Consumption”: briefly press button **MODE** the display will show “km/l”, “l/100km” or “mpg” (according to previous setting);

If the distance unit set is “km” the fuel consumption unit will be displayed in km/l or l/100km.

If the distance unit set is “mi” the fuel consumption unit will be displayed in “mpg”.

- press button ▲ or ▼ for setting;
- if selecting “Temperature”: briefly press button **MODE**, the display will show “°C” or “°F” (according to previous setting);
- press button ▲ or ▼ for setting;

After setting, briefly press button **MODE** to go back to the submenu screen or press the button for long to go back to the main menu screen without storing settings.

- press again button **MODE** for long to go back to the standard screen or to the main menu according to the current menu level.

Selecting the language (Language)

Display messages can be shown (after setting) in different languages: Italian, German, English, Spanish, French, Portuguese and Dutch.

To set the required language proceed as follows:

- briefly press button **MODE**: the previously set “language” will flash on the display;
- press button ▲ or ▼ for setting;
- briefly press button **MODE** to go back to the menu screen or press the button for long to go back to the standard screen without storing settings.

Adjusting the failure/warning buzzer volume (Buzzer Volume)

With this function the volume of the buzzer accompanying any failure/warning indication can be adjusted according to 8 levels.

To adjust the volume proceed as follows:

- briefly press button **MODE**: the previously set volume “level” will flash on the display;
- press button ▲ or ▼ for setting;
- briefly press button **MODE** to go back to the menu screen or press the button for long to go back to the standard screen without storing settings.

Adjusting the button volume (Button Vol.)

With this function the volume of the roger-beep accompanying the activation of buttons **MODE**, **▲** and **▼** can be adjusted according to 8 levels.

To adjust the volume proceed as follows:

- briefly press button **MODE**: the previously set volume “level” will flash on the display;
- press button **▲** or **▼** for setting;
- briefly press button **MODE** to go back to the menu screen or press the button for long to go back to the standard screen without storing settings.

S.B.R. buzzer reactivation (Belt Buzzer)

This function can be only displayed after Fiat Dealership has deactivated the S.B.R. system (see paragraph “S.B.R. system” in section “Safety devices”).

Scheduled Servicing (Service)

Through this function it is possible to display information connected to proper vehicle servicing.

Proceed as follows:

- briefly press button **MODE**: service in km or mi, according to previous setting, will be displayed (see paragraph “Units”);
- briefly press button **MODE** to go back to the menu screen or press the button for long to go back to the standard screen.


Note The “Service schedule” plans different service intervals according to engine models; service interval is displayed automatically, with the ignition key at **MAR**, starting from 2,000 km (or 1,240 mi) from this deadline and it is shown again every 200 km (or 124 mi). Oil change warning messages are displayed in the same way. Use buttons **▲** and **▼** to display alternately service schedule info and engine oil change info. Below 200 km servicing indications are displayed more frequently. Service indications will be displayed in km or mi according to previous unit setting. When a programmed maintenance interval (coupon) is near to come, turning the ignition key to **MAR**, the display will show the message “Service” followed by the number of km/mi to go before vehicle servicing. Contact a Fiat Dealership to carry out any service operation provided by the “Service schedule” and to reset the display.

Front passenger's air bag and side bag where provided) activation/deactivation (Passenger's Bag)

This function shall be used to activate/deactivate the front passenger's air bag.

Proceed as follows:

- ☐ press button **MODE** and, after displaying of messages (Bag pass: Off) (to deactivate) or (Bag pass: On) (to activate) by pressing buttons ▲ and ▼, press again button **MODE**;
- ☐ display will show the confirmation message;
- ☐ press buttons ▲ or ▼ to select (Yes) (to confirm activation/deactivation) or (No) (to abort);
- ☐ briefly press button **MODE**, to display the confirmation message and to go back to the menu screen or press the button for long to go back to the standard screen without storing settings.

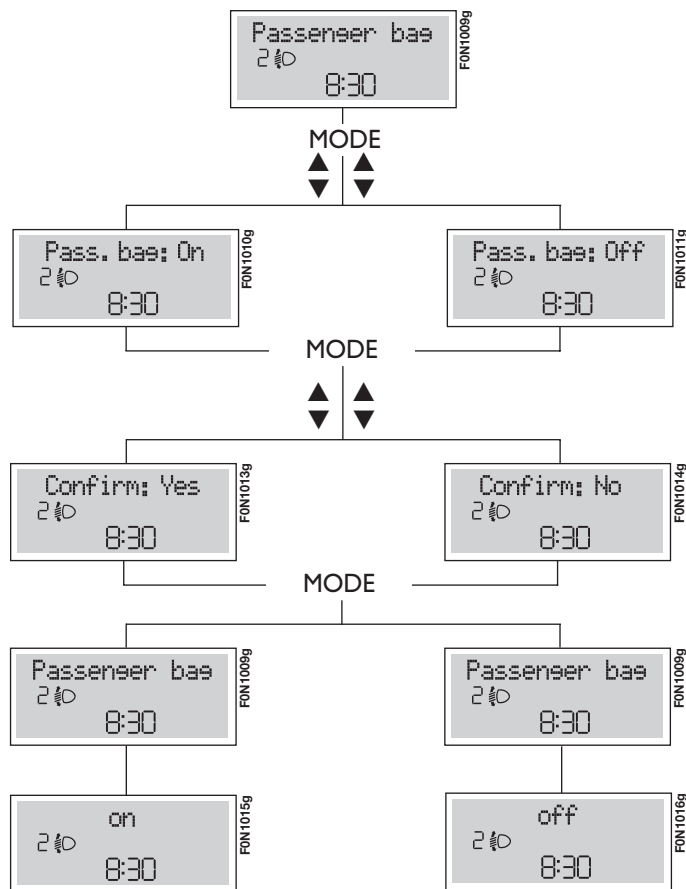

Exit Menu

This is the last function that closes the circular setting cycle listed in the initial menu screen.

Briefly press button **MODE** to go back to the standard screen without storing settings.

Press button ▼ to return to the first menu option (Speed Beep).

TRIP COMPUTER

General features

The “Trip computer” displays information (with ignition key at **MAR**), relating to the operating status of the vehicle. This function comprises two separate and independent trips: “Trip A” and “Trip B” concerning the “complete mission” of the vehicle (journey).

Both functions are resettable (reset - start of new mission).

“Trip A” shall be used to display the figures relating to:

- External temperature
- Range
- Trip distance
- Average consumption
- Instant consumption
- Average speed
- Travel time (driving time).

“Trip B”, available on multifunction display only, shall be used to display the figures relating to:

- Trip distance B
- Average consumption B
- Average speed B
- Travel time B (driving time).

Note “Trip B” function can be excluded (see paragraph “Trip B On/Off”). “Range” and “Instant consumption” cannot be reset.

Values displayed

External temperature

It indicates the external temperature of the driver compartment.

Range

This value shows the distance in km (or mi) that the vehicle can still cover before needing fuel, assuming that driving conditions are kept unvaried. The display will show “----” in the following cases:

- value lower than 50 km (or 30 mi)
- vehicle left parked with engine running for long.

Trip distance

This value shows the distance covered from the start of the new mission.

Average consumption

This value shows the average consumption from the start of the new mission.

Instant consumption

This value shows instant fuel consumption (this value is updated second by second). If parking the vehicle with engine on, the display will show “----”.

Average speed

This value shows the vehicle average speed as a function of the overall time elapsed since the start of the new mission.

Travel time

This value shows the time elapsed since the start of the new mission.

IMPORTANT Lacking information, Trip computer values are displayed with “----”. When normal operating condition is reset, calculation of different units will restart regularly. Values displayed before the failure will not be reset.

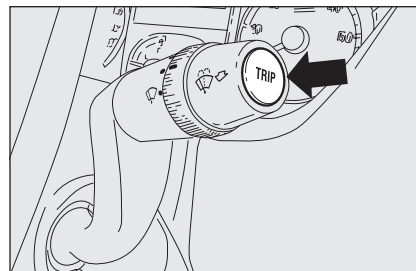


fig. 22

FON0019m

TRIP button fig. 22

Button **TRIP**, set on the top of the right steering column stalk, shall be used (with ignition key at **MAR**) to display and to reset the previously described values to start a new mission:

- short push to display the different values
- long push to reset and then start a new mission.

New mission

Reset can be:

- “manual” resetting by the user, by pressing the relevant button;
- “automatic” resetting, when the “Trip distance” reaches 3999,9 km or 9999,9 km or when the “Travel time” reaches 99.59 (99 hours and 59 minutes);

– after disconnecting/reconnecting the battery.

IMPORTANT The reset operation in the presence of the screens concerning the “Trip A” makes it possible to reset only the information associated with this function.

IMPORTANT The reset operation in the presence of the screens concerning the “Trip B” makes it possible to reset only the information associated with this function.

Start of journey procedure

With ignition key at **MAR**, press and keep button **TRIP** pressed for over 2 seconds to reset.

Exit Trip

To quit the Trip function: keep button **MODE** pressed for over 2 seconds.

FRONT SEATS



WARNING

Only make adjustments when the vehicle is stationary.



Fabric upholstery of your Fiat Ducato is purpose-made to withstand common wear resulting from normal use of the vehicle. It is however absolutely necessary to prevent hard and/or prolonged scratching/scraping caused by clothing accessories like metallic buckles, studs, "Velcro" fixings, etc. that stressing locally the fabric could break yarns and damage the upholstery as a consequence.

Moving the seat backwards or forwards fig. 23

Lift the lever **A** and push the seat forwards or backwards: in the driving position the arms should rest on the rim of the steering wheel.

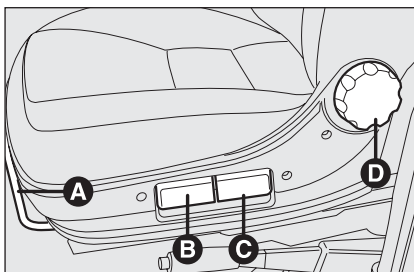


fig. 23

FON0118m



WARNING

Once you have released the lever, check that the seat is firmly locked in the runners by trying to move it back and forth. Failure to lock the seat in place could result in the seat moving suddenly and the driver losing control of the vehicle.

Seat height adjustment

To raise the seat: (being seated), move lever **B** (front seat part) or lever **C** (rear seat part) upwards and unload your weight on the seat part to be raised.

To lower the seat: (being seated), move lever **B** (front seat part) or lever **C** (rear seat part) upwards and load your weight on the seat part to be lowered.

Back rest angle adjustment fig. 23

Turn knob **D**.



WARNING

For maximum safety, keep the back of your seat upright, lean back into it and make sure the seat belt fits closely across your chest and hips.

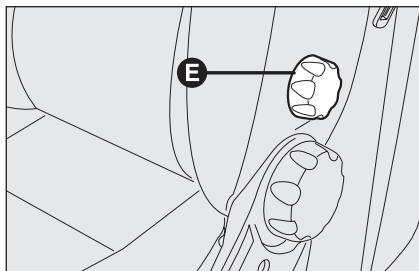


fig. 24

F0N0147m

Lumbar adjustment

This feature ensures better back support.

To adjust, turn the knob **E-fig. 24**

SEAT WITH SHOCK ABSORBER

This seat features suspension with mechanical springing system and hydraulic shock absorbers to guarantee top comfort and safety since the springing system enables to absorb any shock due to bad surface roads.

See previous paragraph “Front seats” for moving the seat backwards or forwards and for height, seat back, lumbar and armrest adjustment.

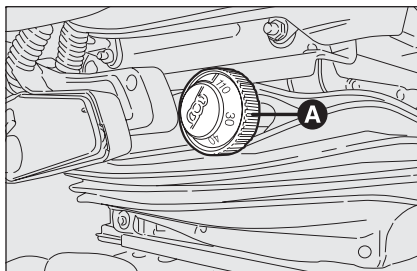


fig. 25

F0N0139m

Setting seat shock absorbers/weight

Use the adjusting knob **A-fig. 25** to set the required adjustment according to your weight, settings range between 40 kg and 130 kg.

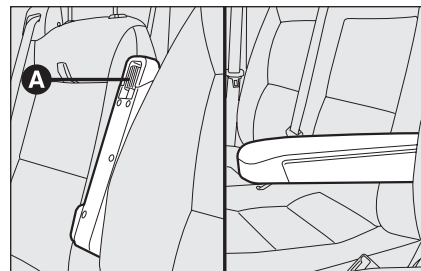


fig. 26

F0N0148m

SEATS WITH ADJUSTABLE ARMRESTS

The driver's seat can be fitted with an adjustable armrest that can be raised or lowered. To adjust it, operate the small wheel **A-fig. 26**.



WARNING

Make sure armrests are up-right before fastening the front seats belts (see paragraph “Seat belts”).



WARNING

Make sure the outer armrest (door side) is completely up-right before unfastening the seat belts and getting out of the vehicle.



WARNING

Should it be absolutely necessary to carry a child seat on the front passenger's seat, make sure to deactivate the front passenger's air bag, to fasten the passenger's seat belt and to lower completely the armrests to prevent their accidental moving.

SEAT WITH ROTATING BASE (where provided)

The seat can be turned through 180° towards the facing seat

To turn the seat, operate control **A**-fig. 27.

Before turning the seat it must be first moved forward and only after adjusted in longitudinal direction **fig. 27a**.

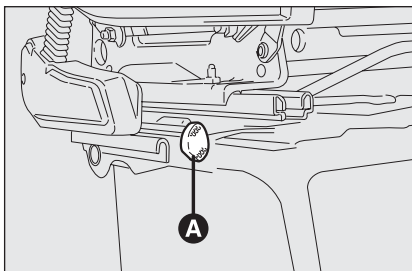


fig. 27

F0N0187m

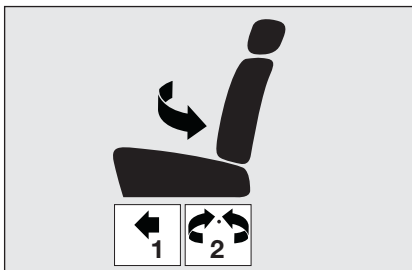


fig. 27a

F0N0700m



WARNING

Ensure the seat is locked in driving position before driving off in the vehicle

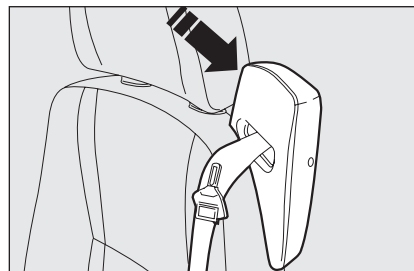


fig. 28

F0N0173m

REVOLVING SEAT WITH INTEGRAL SEAT BELT (where provided)

The seat is fitted with seat belts with three anchorage points **fig. 28**, two adjustable arm-rests (for adjustment see paragraph "Seats with adjustable armrests") and a height-adjustable head restraint (see "Head restraint" paragraph for adjustment).



WARNING

Only make adjustments when the vehicle is stationary. Specially when revolving the seat, make sure it is not interfering with the handbrake lever.

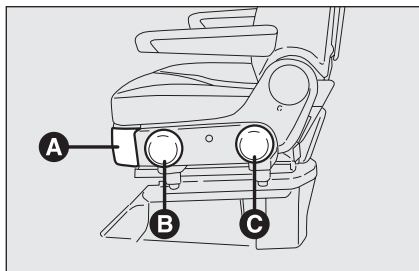


fig. 29

F0N0174m

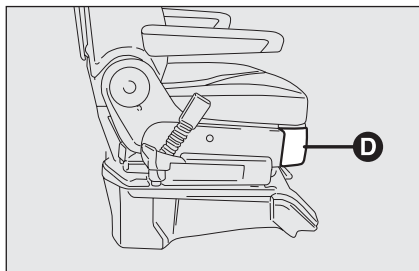


fig. 30a

F0N0175m

Back rest angle adjustment

Operate lever **A**-fig. 29.

Seat height adjustment fig. 29

Operate controls **B** or **C** to raise/lower the front/rear section of the seat respectively.

Revolving the seat

The seat can be turned 180° toward the facing seat and 35° toward the door.

May be locked in driving position and to 180°.

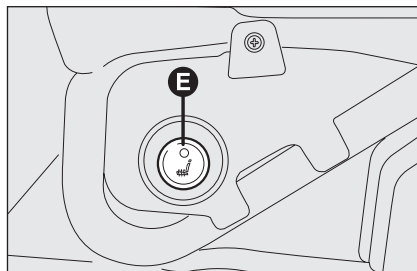


fig. 30b

F0N0213m

To revolve the seat, operate lever **D**-fig. 30a (set on the right side of the seat).

Before turning the seat it must be first moved forward and only after adjusted in longitudinal direction fig. 27a.



WARNING

Ensure the seat is locked in driving position before driving off in the vehicle

Seat warming fig. 30b (where provided)

With ignition key at **MAR**, press button **E** to switch the seat warming on/off. The led on the button will light up when the function is on.

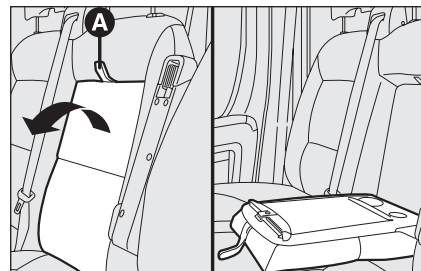


fig. 30c

F0N0149m

FOLDING SHELF ON BENCH SEAT (where provided) fig. 30c

The seat is fitted with a folding shelf that may be used as a work surface for papers.

To use, pull tab **A** and lower the shelf.

The shelf incorporates two glass holders and a clip board for documents.



WARNING

Do not position heavy weights on the shelf with the vehicle in motion because the items could be thrown against the vehicle occupants in the event of sudden braking or impact, causing severe injury.

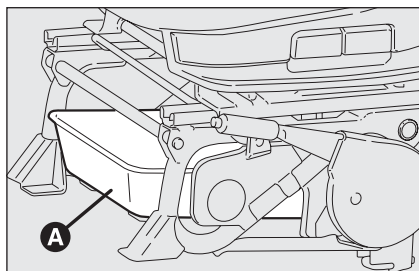


fig. 30d

F0N0237m

UNDER-SEAT BASKET (where provided)

The basket under the driver's seat **A**-fig. 30d may be removed easily by withdrawing from the hooks on the support base.



WARNING

Do not position heavy weights inside the basket with the vehicle in motion because the items could be thrown against the vehicle occupants in the event of sudden braking or impact, causing severe injury.

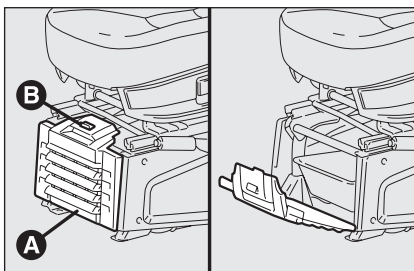


fig. 30e

F0N0238m

SEAT BASE PLASTIC COVERS (where provided) fig. 30e

Front trim **A** may be opened by operating the release handle **B** in the upper part.

This gives access to the under-seat basket (see paragraph "Under-seat basket")

The seat must be as far back as possible to facilitate front trim opening and access to the basket.

To allow removal of the front trim, the trim must be turned forward as far as possible and withdrawn from the hooks present in the lower part by pulling toward the front of the vehicle.

PANORAMA VERSIONS

Passengers' seats back rest angle adjustment fig. 31

Turn knob **A**.

Access to the second row seats fig. 31

For accessing the second seat row, operate lever **B** of the external right side seat of the first row and fold the back of the seat forward guiding it with your left hand.

Moving the seat back to standard position the seat will lock into the locking device without using the lever again.

On Panorama 2nd row complete seat both side seats are fixed.

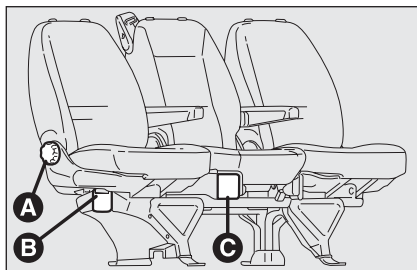


fig. 31

F0N0227m

Tilting the central seat back (2nd - 3rd row) fig. 31

Raise lever **C** and tilt the seat back forward.

On the back of the central seat back there is a stiff surface acting as armrest and table with glass/can holders.

Use the same lever to reposition the seat back.

When folding the back of the central seat of the second row, remove the head restraint in order to make the first row central seat back adjustment easier.

COMBI VERSIONS

Easy Entry position

Raise lever **A**-fig. 32 and tilt the seat back forward.

Pack position

Proceed as follows:

- from the easy entry position, take the head restraints out;
- raise lever **B**-fig. 33 (set under lever **A**) with your right hand;
- turn the back 5° towards the rear area;
- tilt the back forwards with your left hand.

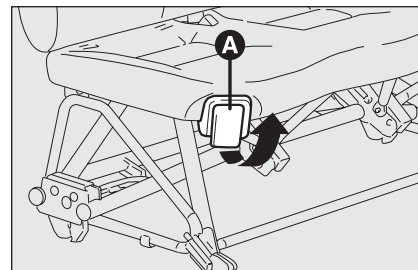


fig. 32

F0N0228m



WARNING

Never travel seated in the 3rd row with the 2nd row bench tilted. Never position objects on the tilted back of 2nd row bench seat: in the event of crash or sudden brake objects could be ejected against vehicle occupants and cause serious injuries. For further info see the adhesive label located under the bench.

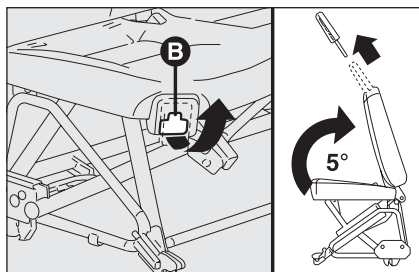


fig. 33

F0N0229m

Removing the bench

IMPORTANT Two persons are required to remove the bench.

To remove the bench proceed as follows:

- from pack position, turn levers **C** and **D**-fig. 34 forward (as specified on the adhesive label located on the lower crossmember)
- raise forward the seat base;
- set the seat in vertical position
- from vertical position, turn levers **E** and **F**-fig. 35 upwards;
- raise the bench from the floor and remove it.

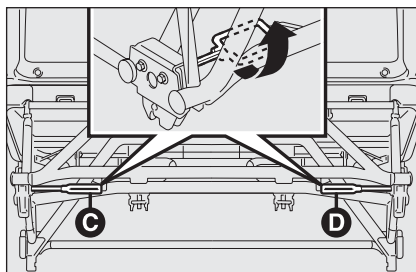


fig. 34

F0N0230m

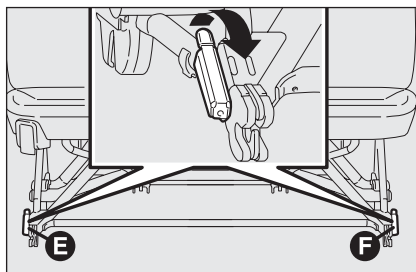


fig. 35

F0N0231m



WARNING

When refitting the bench make sure it is properly secured into floor runners.

HEAD RESTRAINTS

FRONT fig. 36

On certain versions head restraints are adjustable in height and they lock automatically in the required position.

To adjust head restraints

- ☐ to raise: raise the head restraint until hearing the locking click.

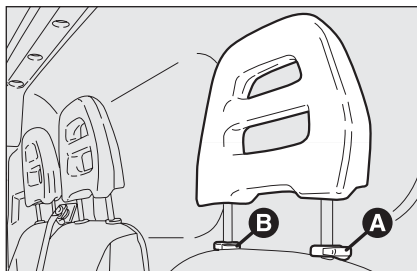


fig. 36

F0N0020m

- ☐ to lower: press button **A** and lower the head restraint.

To lift out front head restraints: press at the same time buttons **A** and **B** set on both sides and take them out.

**WARNING**

Remember that the head restraints should be adjusted to support the back of your head and not your neck. Only in this position do they exert their protective action

To optimise head restraint protective action, adjust the seat back upright and keep your head as close as possible to the head restraint.

STEERING WHEEL

The steering wheel can be adjusted axially.

Proceed as follows:

- ☐ release the lever **A**-fig. 37 pulling it towards the steering wheel (position 2).
- ☐ adjust the steering wheel as required;
- ☐ lock the lever **A** pushing it forwards (position 1);

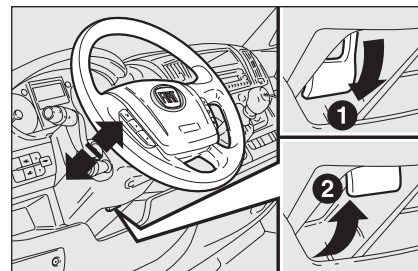


fig. 37

F0N0321m

**WARNING**

Any adjustment of the steering wheel position must be carried out only with the vehicle stationary and the engine turned off.

**WARNING**

It is absolutely forbidden to carry out whatever after-market operation involving steering system or steering column modifications (e.g.: installation of anti-theft device) that could badly affect performance and safety, cause the lapse of warranty and also result in non-compliance of the vehicle with homologation requirements.

REARVIEW MIRRORS

DRIVING MIRROR fig. 38

The mirror is fitted with a safety device that causes it to be released in the event of a violent crash.

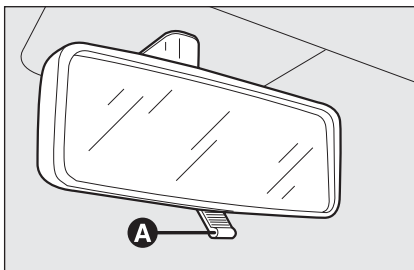


fig. 38

F0N0022m

It can be moved using the lever **A** to two different positions: normal or antiglare.

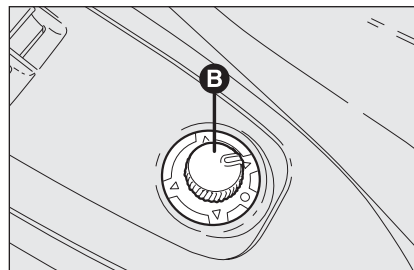


fig. 39

F0N0024m

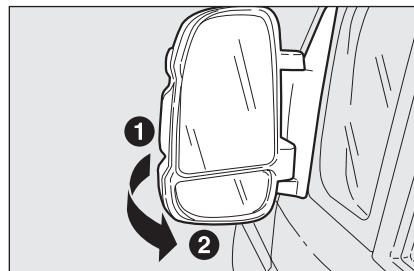


fig. 40

F0N0023m

DOOR MIRRORS

Adjustment fig. 39

Manual adjustment

Adjust each of the two mirrors directly by hand.



WARNING

The reflecting surface of the lower part of the mirror is parabolic to increase the range. Consequently, the dimension of the reflected image is reduced, giving the impression that the object is more distant than it is in fact.

Electrical adjustment

The mirrors can only be adjusted electrically when the key is at **MAR**. To adjust mirrors, turn knob **B** to one of the following four positions:

► 1 left mirror, ◄ 2 right mirror, ► 3 left wide-angle, ◄ 4 right wide-angle

Once the knob has been positioned, move it in the direction indicated by the arrows to adjust the reflecting surface of the selected mirror.

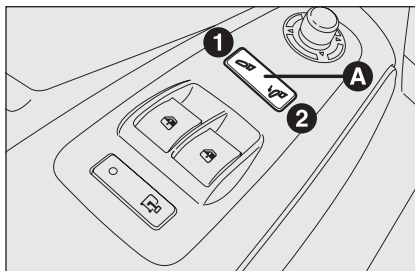


fig. 41

F0N0159m

Folding

When required (for example when the mirror causes difficulty in narrow spaces) it is possible to fold the mirror moving it from position **1**-fig. 40 to position **2**.




When driving the mirrors shall always be in position 1-fig. 40.

Powered folding (where provided)

Press the swinging button **A**-fig. 41 side **1** to set the mirror in driving position and side **2** to fold the mirror.

IMPORTANT If the mirror is folded by hand it shall be returned to driving position by hand. If the mirror is folded electrically it can be returned to driving position electrically.

Demisting/defrosting (where provided)

Mirrors are fitted with resistors that will activate when turning the heated rear window on (by pressing button .

IMPORTANT This function is timed and it will turn off automatically a few minutes later.



WARNING

As the driver's door mirror is curved, it may slightly alter the perception of distance.

HEATING AND VENTILATION

F0N0322m

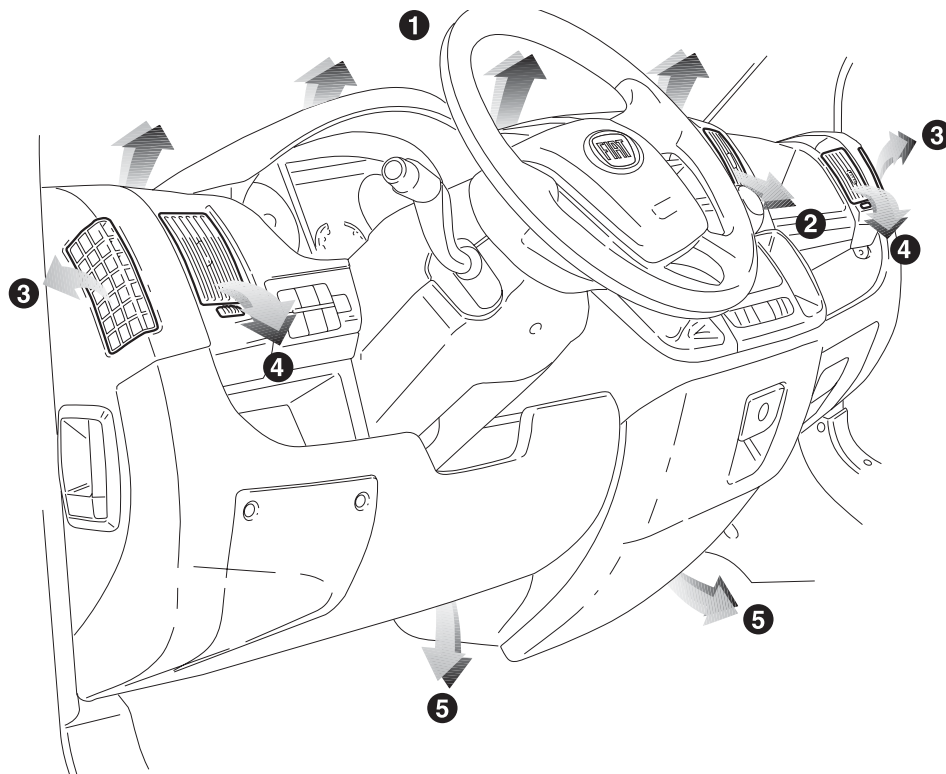


fig. 42

1. Fixed upper vent - 2. Central swivel vents - 3. Fixed side vents - 4. Side swivel vents - 5. Lower vents for front seats.

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

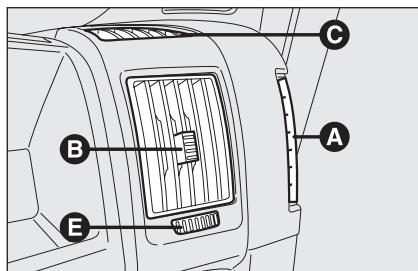


fig. 43

F0N0026m

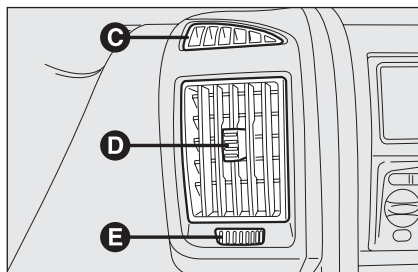


fig. 44

F0N0027m

ADJUSTABLE AND SWIVEL SIDE AND CENTRAL VENTS fig. 43-44

- A** Fixed vents for side windows.
- B** Side swivel vents.
- C** Fixed vents.
- D** Central swivel vents.
- E** Control for directing air flow.

Vents **A** and **C** are fixed.

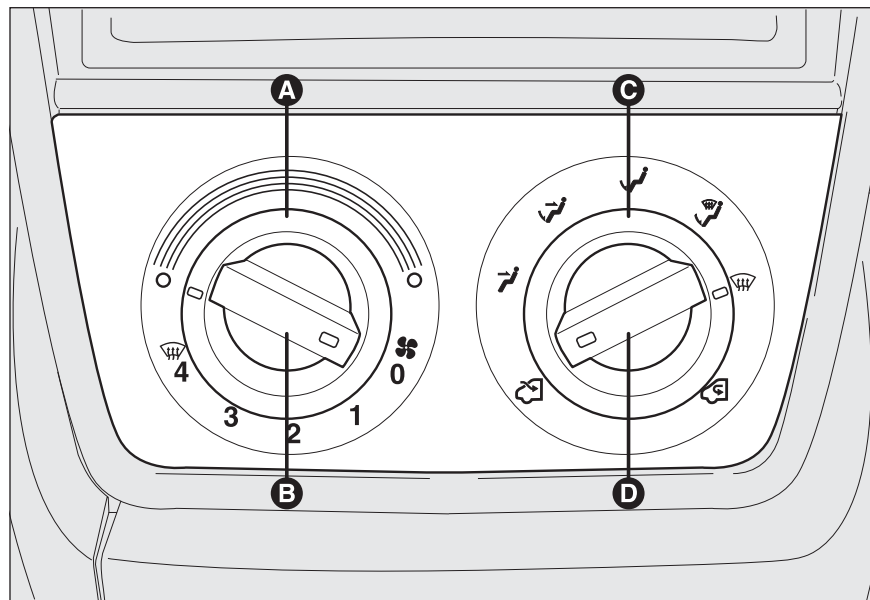


fig. 45

F0N0028m

CONTROLS fig. 45

Air temperature slider **A** (mixing hot and cold air)

Red section = hot air

Blue section = cold air


Fan activation / speed adjustment knob **B**


0 = fan off


1-2-3 = fan speed


4 = max. fan speed

Air distribution slider C

 to convey air to the centre and side vents;

 to warm the feet and convey cooler air to the dashboard vents, in intermediate temperature conditions;

 to heat with outside harsh temperature: to convey as much air as possible to the feet;

 to warm the feet and at the same time demist the windscreen;

 for quick windscreen demisting.



Air recirculation on/off knob D

Turn knob **D** to  to turn air recirculation on.

Turn knob **D** to  to turn air recirculation off.

VENTILATION

To ventilate the passenger's compartment properly proceed as follows:

- ☐ turn slider **A** to blue section;
- ☐ turn air recirculation off by turning knob **D** to ;
- ☐ turn slider **C** to ;
- ☐ turn knob **B** to the required speed.




WARMING THE PASSENGER COMPARTMENT


Proceed as follows:

- ☐ turn slider **A** to red section;
- ☐ turn knob **C** to the required position;
- ☐ turn knob **B** to the required speed.

FAST HEATING

For fast heating of the passenger compartment, proceed as follows:

- ☐ turn slider **A** to red section;
- ☐ turn air recirculation on by turning knob **D** to ;
- ☐ turn slider **C** to ;
- ☐ turn knob **B** to 4  (max. fan speed).

Then use the controls to keep the required comfort conditions and turn knob **D** to  to turn air recirculation off and to prevent misting up.

IMPORTANT With cold engine, you have to wait for a few minutes to let the system fluid reach the operating temperature.

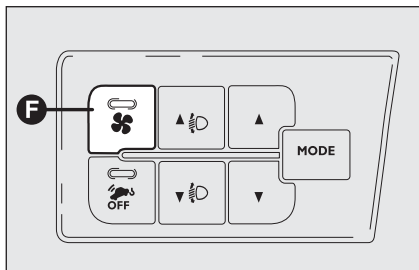


fig. 46

F0N0185m

FRONT WINDOW FAST DEMISTING/ DEFROSTING (WINDSCREEN AND SIDE WINDOWS)

Proceed as follows:

- ☐ turn slider **A** to red section;
- ☐ turn air recirculation off by turning knob **D** to ;
- ☐ turn slider **C** to ;
- ☐ turn knob **B** to 4 (max. fan speed).

IMPORTANT to guarantee fast demisting/defrosting if the additional heater (under the seat or rear for Panorama and Combi versions) is on, turn it off by pressing button **F** (led off) located on the control panel **fig. 46**.

After demisting/defrosting, operate the controls to restore the required comfort.

Window demisting

In the event of considerable outside moisture and/or rain and/or considerable differences in temperature inside and outside the passenger compartment, perform the following preventive demisting procedure:

- ☐ turn slider **A** to red section;
- ☐ turn air recirculation off by turning knob **D** to ;
- ☐ turn slider **C** to or to if the windows do not demist;
- ☐ turn knob **B** to 2nd speed.

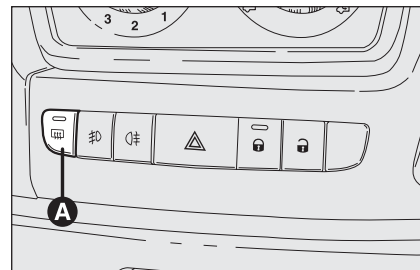


fig. 47

F0N0043m

HEATED REAR WINDOW AND DOOR MIRROR DEMISTING/DEFROSTING (where provided) **fig. 47**

Press button **A** to start this function; when this function is on the button led is on.

This function is timed and switches off automatically after 20 minutes. To cut out this function press again button **A**.

IMPORTANT Do not apply stickers on the inside of the rear window over the heating filaments to avoid damage that might cause it to stop working properly.

AIR RECIRCULATION

Turn knob **D** to .

This function is particularly useful when the outside air is heavily polluted (in a traffic jam, tunnel etc.). However, it is better not to use it for long periods, especially if there are several people in the vehicle.

IMPORTANT The inside air recirculation system makes it possible to reach the required “heating” or “cooling” conditions faster.

Do not use the air recirculation function on rainy/cold days as it would considerably increase the possibility of the windows misting inside.

MANUAL CLIMATE CONTROL SYSTEM (where provided)


CONTROLS fig. 48

Air temperature slider **A** (mixing hot and cold air)

Red section = hot air

Blue section = cold air

Fan activation /speed adjustment knob **B**

 **0** = fan off

1-2-3 = fan speed

4  = max. fan speed

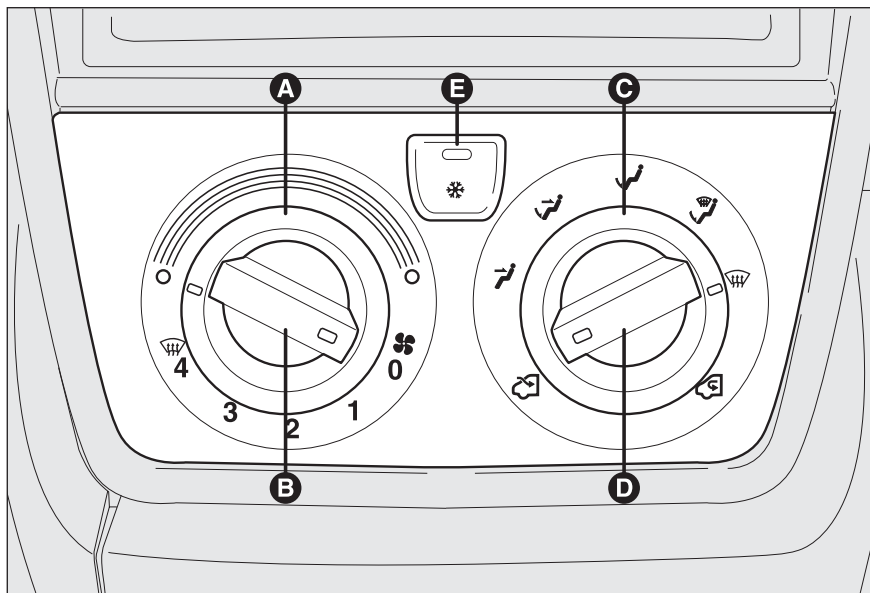


fig. 48

F0N0029m

Air distribution slider C

to convey air to the centre and side vents;

to warm the feet and convey cooler air to the dashboard vents, in intermediate temperature conditions;

to heat with outside harsh temperature: to convey as much air as possible to the feet;

to warm the feet and at the same time demist the windscreen;

for quick windscreen demisting.

Air recirculation on/off knob D

Press the button (button led on) to turn air recirculation on.

Press the button again (button led off) to turn air recirculation off.

Climate control system on/off button E

Press the button (button led on) to turn climate control system on.

Press the button again (button led off) to turn climate control system off.




VENTILATION

To ventilate the passenger's compartment properly proceed as follows:


- ☐ turn slider **A** to blue section;
- ☐ turn air recirculation off by turning knob **D** to
- ☐ turn slider **C** to
- ☐ turn knob **B** to the required speed.

CLIMATE CONTROL (cooling)

For fast cooling of the passenger compartment, proceed as follows:

- ☐ turn slider **A** to blue section;
- ☐ turn air recirculation on by turning knob **D** to ;
- ☐ turn slider **C** to ;
- ☐ press button **E** to turn the climate control system on; the button led **E** will turn on;
- ☐ turn knob **B** to 4  (max. fan speed).

Cooling adjustment

- ☐ turn slider **A** to the right to raise temperature;
- ☐ turn air recirculation off by turning knob **D** to ;
- ☐ turn knob **B** to reduce the fan speed.

IMPORTANT Pressing conditioner compressor button **E**, will activate the function only if at last the first fan speed is selected (knob **B**).




WARMING THE PASSENGER COMPARTMENT


Proceed as follows:

- ☐ turn slider **A** to red section;
- ☐ turn slider **C** to the required symbol;
- ☐ turn knob **B** to the required speed.

FAST HEATING

For fast heating of the passenger compartment, proceed as follows:




- ☐ turn slider **A** to red section;
- ☐ turn air recirculation on by turning knob **D** to ;
- ☐ turn slider **C** to ;
- ☐ turn knob **B** to 4  (max. fan speed).

Then use the controls to keep the required comfort conditions and turn knob **D** to  to turn air recirculation off (button led off).

IMPORTANT With cold engine, you have to wait for a few minutes to let the system fluid reach the operating temperature.

FRONT WINDOW FAST DEMISTING/DEFROSTING (WINDSCREEN AND SIDE WINDOWS)

Proceed as follows:

- ☐ turn slider **A** to red section;
- ☐ turn knob **B** to 4  (max. fan speed);
- ☐ turn slider **C** to ;
- ☐ turn air recirculation off by turning knob **D** to .

IMPORTANT to guarantee fast demisting/defrosting if the additional heater/conditioner (under the seat or rear for Panorama and Combi versions) is on, turn it off by pressing button **F** (led off) located on the control panel **fig. 49**.

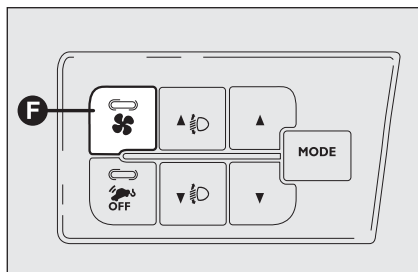


fig. 49

F0N0185m

After demisting/defrosting, operate the controls to keep the required comfort.

IMPORTANT The climate control system is very useful to speed up demisting since it dehumidifies the air. Set controls to demisting function and switch on the climate control system by pressing button **E**; the knob led will turn on.

Window demisting

In the event of considerable outside moisture and/or rain and/or considerable differences in temperature inside and outside the passenger compartment, perform the following preventive demisting procedure:

- ☐ turn slider **A** to red section;
- ☐ turn air recirculation off by turning knob **D** to ;
- ☐ turn slider **C** to or to if the windows do not demist;
- ☐ turn knob **B** to 2nd speed.

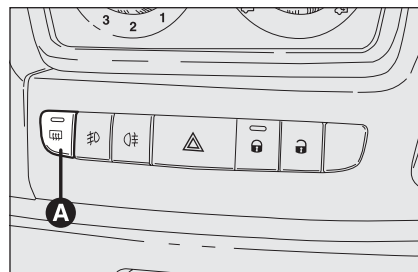


fig. 50

F0N0043m

IMPORTANT The climate control system is very useful to prevent window misting up in presence of high humidity since it dehumidifies the air.

HEATED REAR WINDOW AND DOOR MIRROR DEMISTING/DEFROSTING (where provided) fig. 50

Press button **A** to start this function; when this function is on the button led is on.

This function is timed and switches off automatically after 20 minutes. To cut out this function press again button **A**.

IMPORTANT Do not apply stickers on the inside of the rear window over the heating filaments to avoid damage that might cause it to stop working properly.

AIR RECIRCULATION

Turn knob **D** to .

This function is particularly useful when the outside air is heavily polluted (in a traffic jam, tunnel etc.). However, it is better not to use it for long periods, especially if there several people in the vehicle.

IMPORTANT The inside air recirculation system makes it possible (according to the selected operating modes) to reach the required "heating" or "cooling" conditions faster.

Do not use the air recirculation function on rainy/cold days as it would considerably increase the possibility of the windows misting inside.

LOOKING AFTER THE SYSTEM

During winter, the climate control system must be turned on at least once a month for about 10 minutes. Before summer, have the system checked at a Fiat Dealership.



The system is filled with R134a refrigerant which will not pollute the environment in the event of leakage. Under no circumstances should R12 fluid be used as it is incompatible with the system components.

AUTOMATIC CLIMATE CONTROL SYSTEM (where provided)

GENERAL

The vehicle is fitted with an automatic climate control system which makes it possible to adjust air flow, air temperature and air distribution in the passenger's compartment. Temperature control is based on the "equivalent temperature" logic, i.e.: the system continuously works to keep constant the comfort inside the passenger compartment and to compensate any variation of the outside climate conditions, including sunshine detected by a proper sensor provided for the purpose.

The climate control system automatically controls and adjusts the following parameters and functions:

- ☐ air temperature at vents;
- ☐ air distribution at vents;
- ☐ fan speed (continuous air flow variation);
- ☐ compressor activation (to cool/dehumidify air);
- ☐ air recirculation.

All the above functions can be changed manually by selecting the required function/s and by changing the set parameters. In this way the automatic control is deactivated; the system will resume automatic control only for safety reasons (e.g. risk of window misting up).

Manual selections prevail over automatic ones and remain in storage until the user decides to resume automatic control by pressing again button AUTO, except when the system cuts in for particular safety conditions.

The control of functions not changed manually remains automatic.

The temperature of the air admitted to the passenger compartment is always controlled automatically according to the temperatures set on the display (except when the system is off or under certain conditions when the compressor is off).

The following parameters and functions can be set or changed manually:

- ☐ air temperatures;
- ☐ fan speed (continuous variation);
- ☐ air distribution on seven levels;
- ☐ climate control compressor on/off;
- ☐ fast demisting/defrosting;
- ☐ air recirculation;
- ☐ system turning off;

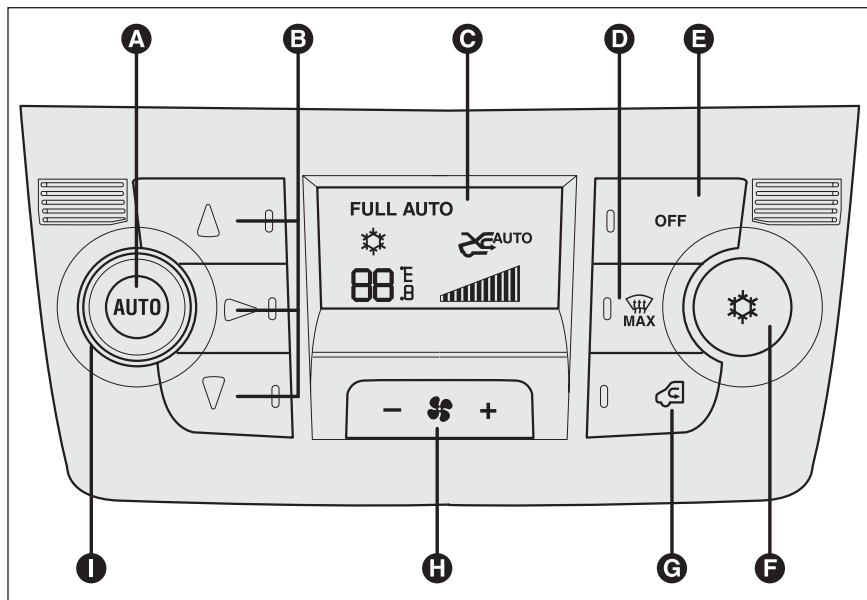


fig. 5I

F0N0200m

CONTROLS fig. 5I



- | | |
|--|--|
| A AUTO button, automatic functions control. | E System OFF button. |
| B Air distribution button. | F Climate control compressor on/off button. |
| C Display . | G Air recirculation button. |
| D MAX DEF function button. | H Buttons for adjusting fan speed |
| | I Knob for adjusting temperature. |

SWITCHING THE CLIMATE CONTROL SYSTEM ON

The system can be started in different ways, but it is advisable to press the AUTO button and then to turn the knob to set the temperatures required on the display.

This way the system will start working completely automatically to reach the comfort temperature as quickly as possible. The system will set air temperature, quantity and distribution and it will control the air recirculation function and the activation of conditioner compressor.


During fully automatic operation, the only manual settings required are the following:

- ☐  air recirculation, to keep it always on or off;
- ☐  to speed up demisting/defrosting of windscreen, front side windows, rear window and door mirrors;

During full automatic system operation, you can change at any time set temperature, air distribution and fan speed by using the relevant buttons or knobs: the system will automatically change its settings to adjust to the new requirements.

During FULL AUTO operation, changing air distribution and/or flow and/or compressor activation and/or air recirculation will make the FULL wording disappear. In this way functions will pass from automatic control to manual control until pressing again the AUTO button. With one or more functions engaged manually, the adjustment of the temperature of the air admitted to the passenger compartment continues to be controlled automatically by the system, except with the climate control compressor off: under this condition in fact, the temperature of the air admitted to the passenger compartment cannot be lower than outside air temperature.

CONTROLS

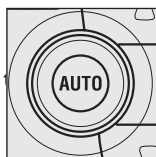

Air temperature adjusting knob (I)

Turning the knob clockwise or counter-clockwise, respectively raises or lowers the temperature of the air required in the passenger compartment.

Set temperature is shown on the display.

Turning the knob fully clockwise or counter-clockwise until it reaches the extreme selections HI or LO, the maximum heating or cooling functions are respectively engaged:

☐ HI function (highest heating power):

this is turned on by rotating the temperature knob clockwise and passing the max. temperature value (32 °C).

This function can be engaged when requiring to heat the passenger compartment as quickly as possible, exploiting the maximum potential of the system. Under these conditions, the system is no longer controlled by the automatic temperature adjustment system and sets air mixing to maximum heating by modulating speed and air distribution.

More particularly, max. fan speed will not be immediately engaged if coolant is not hot enough; this to prevent admitting air that is not warm enough to the passenger compartment.

All manual settings are possible with this function on.


To switch the function off, simply turn the knob counter-clockwise and set the required temperature.

☐ LO function (highest cooling power):

this is turned on by rotating the temperature knob counter-clockwise and passing the min. temperature value (16 °C).

This function can be engaged when requiring to cool the passenger compartment as quickly as possible, exploiting the maximum potential of the system. Under these conditions, the system is no longer controlled by the automatic temperature adjustment system and sets air mixing to maximum cooling by modulating speed and air distribution. All manual settings are possible with this function on.

To switch the function off, simply turn the knob clockwise and set the required temperature.

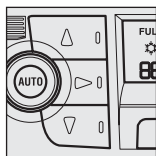

Air distribution buttons (B)

Pressing these buttons it is possible to choose manually one of the seven possible air distributions:

- ▲ Air flow to the windscreen and front side window vents to demist or defrost them.
- Air flow at central and side dashboard vents to ventilate the chest and the face during the hot season.
- ▼ Air flow towards the front and rear lower parts of the passenger compartment. Due to the natural tendency of heat to spread upwards, this type of distribution allows heating of the passenger compartment in the shortest time, also giving a prompt feeling of warmth.

- Splitting of the air flow between the vents to the lower part of the passenger compartment (warmest air) and the dashboard centre and side outlets (coolest air). This air flow distribution is particularly useful in spring and autumn when the sun is shining.


- ▲ Splitting of the air flow between the windscreen and front side window demisting/defrosting vents and the lower part of the passenger compartment. This type of air distribution allows satisfactory heating of the passenger compartment while preventing possible misting of the windows.

- Splitting of the air flow between the windscreen and front side window demisting/defrosting vents and the dashboard centre and side outlets. This air flow distribution enables to obtain satisfactory cooling of the passenger's compartment and to keep the required cooling condition in summer.

- ▲ Splitting of the air flow between the windscreen and front side window demisting/defrosting vents, dashboard centre and side outlets and the lower part of the passenger compartment. This air flow distribution enables to keep good overall comfort conditions both in summer and in winter.

Lighting up of the relevant button leads shows the type of air distribution selected.

To restore automatic air distribution control after a manual selection, press button AUTO.

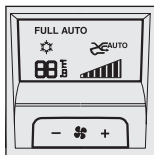

Fan speed adjusting buttons (H)

Press button **H** ends to increase or to decrease the fan speed and therefore the amount of air admitted into the passenger compartment, the system will however keep the required temperature.


The fan speed is shown by the lit bars on the display

- ☐ Max fan speed = all bars lit
- ☐ Min fan speed = one bar lit.

The fan can be cut off only if the climate control compressor has been switched off pressing button **F**-fig. 51.

IMPORTANT To restore automatic fan speed control after a manual adjustment, press button **AUTO**.

IMPORTANT At high vehicle speed, the dynamic effect increases the air flow inside the passenger compartment that will not be directly correlated with the lit fan speed bars.

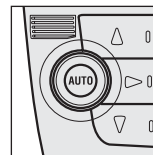

AUTO button (A) (automatic operation)


Pressing the **AUTO** button the system automatically adjusts the amount and distribution of the air admitted to the passenger compartment, cancelling all the previous manual adjustments.

This condition is indicated by the message **FULL AUTO** on the front display.

Manual operation of at least one automatic function (air recirculation, air distribution, fan speed or climate control compressor off) will cause **FULL** message going off the display. This means that automatic control is not complete (except temperature control which is always automatic).



IMPORTANT If it is no longer possible to reach and maintain the required passenger compartment temperature due to manual function operation, the set temperature flashes to indicate that the system is experiencing difficulties and the AUTO message then goes off.

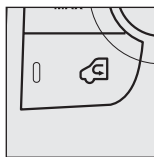To restore system automatic control at any time, after one or more manual adjustments, press button AUTO.



Air recirculation on/off button (G)

Air recirculation works according to the following operating logics:

- ☐ forced switching on (inside air recirculation always on), indicated by the turning on of the led on the button **G** and by symbol  on the display;
- ☐ forced switching off (air recirculation always off with air inlet from the outside), indicated by the turning off of the led on the button and by symbol  on the display.


The above operating conditions are obtained by pressing in sequence the air recirculation button **G**.

IMPORTANT The inside air recirculation system makes it possible to reach the required heating or cooling conditions faster.

It is however inadvisable to use it on rainy/cold days as it would considerably increase the possibility of the windows misting inside, especially if the climate control system is off.

With low outdoor temperatures, recirculation is turned off (with air intake from outside) to prevent possible misting.

It is inadvisable to use the inside air recirculation function with low outside temperature as windows may mist over quickly.

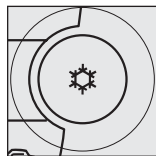

Climate control compressor on/off button (F)

Press pushbutton ☼ to turn off the climate control system compressor if it was on previously and the logo on the display is turned off. When the pushbutton is pressed with the led off, control of compressor activation is restored to automatic control by the system. This condition is indicated by the logo lighting up on the display.

When turning the compressor off, the system will deactivate air recirculation to prevent window misting up. Although the system is able to keep the required temperature, the wording FULL will disappear from the display. If the system is no longer able to keep the required temperature, temperature figures will flash and the wording AUTO will disappear from the display.

IMPORTANT With the climate control compressor off, it is not possible to admit air to the passenger compartment with a temperature below the outside temperature; moreover, under certain environmental conditions, windows could mist up fastly since air is not dehumidified.


The switching off of the climate control compressor remains in storage even when the engine has been stopped.

To restore automatic control for switching on the climate control compressor, press again button ☼ (in this event the system will just work as heater) or press button AUTO.

With the compressor off, if the outside temperature is higher than set, the system is not able to meet the request. This is indicated by the temperature setting flashing, after which the AUTO message is turned off.

With the compressor disabled, it is possible to zero the fan speed manually (no bars displayed).

With the compressor enabled and the engine started, the fan speed may only drop to minimum (one bar displayed).

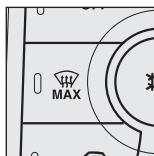

Fast window demisting/defrosting button (D)

Press this button: the climate control system will automatically switch on all the functions required for fast windscreen and front side window demisting/defrosting, that is:

- ☐ switches on climate control compressor when climatic conditions are suitable;
- ☐ air recirculation off;
- ☐ maximum air temperature HI on both areas;
- ☐ activates proper fan speed according to engine coolant temperature to limit the flow into the passenger compartment of air not warm enough to demist the windows;
- ☐ directs air flow to windscreen and front side windows vents;
- ☐ turns heated rear window on

IMPORTANT Fast demisting/defrosting function stays on for about 3 minutes, since engine coolant temperature reaches a temperature suitable for fast window demisting.

When the max. demisting/defrosting function is on, the button led and the heated rear window button led will turn on; FULL AUTO wording on the display will turn off.

When the max. demisting/defrosting function is on, the only manual operations possible are manual adjustment of the fan speed and switching heated rear window off.

To restore the operating conditions of the system prior to function activation, just press one of the following buttons: button **B**, air recirculation button **G**, compressor button **F** or button AUTO **A**.


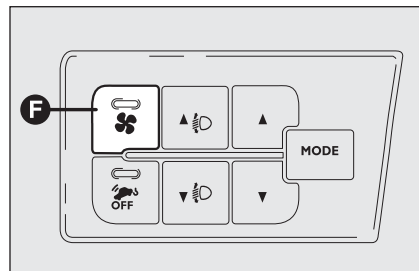


fig. 52

IMPORTANT to guarantee fast demisting/defrosting if the additional heater/ conditioner (under the rear seat for Panorama and Combi versions) is on, turn it off by pressing button **F** (led off) located on the control panel **fig. 52**.

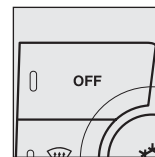

Switching the system OFF (E)

Press button **E** to turn the system off, also the display will turn off.

When turned off the system conditions are the following:

- ☐ display off;
- ☐ air recirculation on, the passenger's compartment is isolated from the outside (recirculation led on);
- ☐ conditioner compressor off;
- ☐ fan off.

Press **AUTO** to turn the system in automatic mode.

SUPPLEMENTARY HEATER (where provided)

Certain versions are also fitted a supplementary heater set under the driver's seat. To activate the supplementary heater fan press button **F** set on the control panel **fig. 53**.

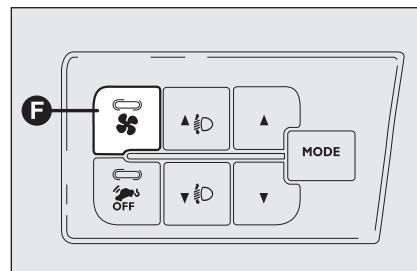


fig. 53

F0N0185m

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

SELF-STANDING SUPPLEMENTARY HEATER

(where provided)

Fiat Ducato can be equipped, upon request, with two different self-standing heaters: one is totally automatic whereas the other is programmable.

AUTOMATIC VERSION

The supplementary heater will activate automatically with engine turned on and proper engine coolant and outside temperature conditions. Deactivation is always automatic.

IMPORTANT During periods of low temperature when the device is activated, check that the fuel level is higher than the reserve. Otherwise the device could lock and require the assistance of the Fiat Dealership.



WARNING

The heater burns fuel in the same way as the engine, though, of course, to a lesser degree and therefore to avoid intoxication and suffocation, never use the supplementary heater in closed areas, garages or workshops not equipped with specific exhaust evacuation devices even for short periods of time.

The system consists of:

- ☐ diesel burner to heat coolant with exhaust fume muffler;
- ☐ metering pump connected to the vehicle fuel pipes to feed the burner;
- ☐ heat exchanger connected to the engine cooling system pipes;

PROGRAMMABLE VERSION

The supplementary heater is totally independent from the engine and can be used to:

- ☐ heat the passenger compartment when the engine is off;
- ☐ defrost the windows;
- ☐ heat the engine coolant and consequently the engine before starting.

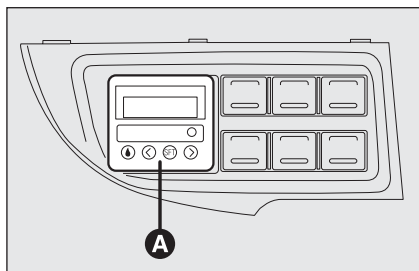


fig. 54

F0N0150m

- ☐ control unit connected to the heater/ventilation unit for automatic operation;
- ☐ electronic control unit to check and adjusted the integrated heater burner;
- ☐ digital timer **A**-fig. 54 to start the heater manually or to program staring time.

In cold weather, the supplementary heater warms and circulates constant temperature fluid in the engine cooling system for the time required to ensure optimal engine ignition and passenger compartment temperature conditions.

The heater can be started automatically (programmed by means of the digital timer) or manually by pressing the “heat now” button on the timer.

When the heater is turned on (automatically or manually), the electronic control unit operates the fluid circulation pump and safely ignites the burner according to preset and controlled modes.

The electronic control unit also controls the circulation pump delivery in order to reduce initial heating time. When the system is operating, the control unit operates the heater unit fan to the second speed.

Thermal power is adjusted automatically by the control unit according to the engine coolant temperature.


IMPORTANT The heater is equipped with a thermal switch which cuts off the heater in the event of overheating caused by low or leaking coolant. In this case, press the program selection button to start the heater again after repairing the cooling system fault and/or topping up the fluid.


The heater can turn itself off after engine ignition or if the flame goes out. In this case, turn the heater off manually and attempt to turn it back on again. If you cannot turn the heater on, contact a Fiat Dealership.


Turning the heater on

If an automatic climate control system is fitted, the control unit sets air temperature and distribution when the parking heater is turned on.

When a manual heater/climate control system is fitted, to achieve peak heater performance, check that the passenger compartment heater/ventilation unit air temperature knob is in “warm air” position.

For preferential passenger compartment preheating, turn the air distribution knob to position .

For preferential windscreen demisting, set the air distribution knob to position .

To obtain both functions, set the air distribution knob to position .

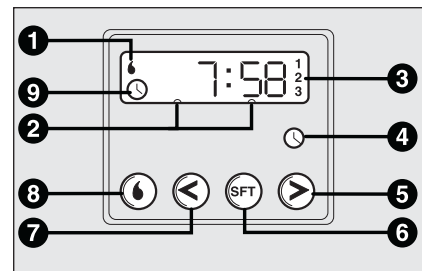


fig. 55

F0N0151m

Digital timer fig. 55

- 1) Heater cycle warning light
- 2) Display light
- 3) Clock pre-set recall number
- 4) Clock button
- 5) Hour “forward” button
- 6) Program selection button
- 7) Hour “back” button
- 8) Heat now button
- 9) Display/adjust time warning light

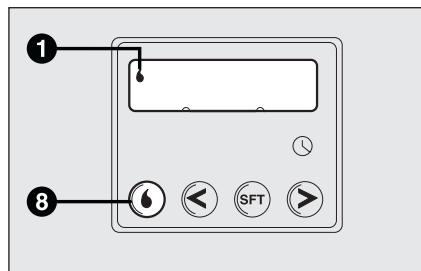


fig. 56

F0N0152m

“Heat now” function fig. 56

To turn the heater on manually, press timer button 8. The display and warning light 1 will stay on while the heater is in use.

Programming the heater

Before programming the heater, set the clock.

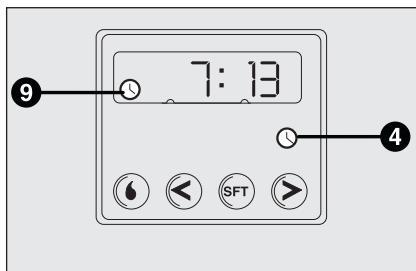


fig. 57

F0N0153m

Setting the clock

- ☐ Press button 4: display and warning light 9-fig. 57 will light up.
- ☐ Within 10 seconds, press button 5 or 7 to select the correct time.

When the display is turned off, the current time will be stored.

Keeping button 5 or 7 pressed will fast forward or backward the clock.

Reading the clock fig. 48

To read the clock, press button 4: current time will be displayed for approximately 10 seconds. Warning light 9 will turn on.

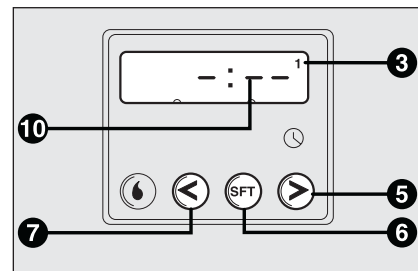


fig. 58

F0N0154m

Programmed heating fig. 58

Heater ignition can be delayed from 1 minute to 24 hours. Three different times can be programmed but only one will be activated for each pre-warming cycle.

To program starting time:

- ☐ press button 6: either symbol 10 or the previously programmed time and number 3 (corresponding to the pre-set function recalled) will light up for 10 seconds;

IMPORTANT To recall other preset times, press button **6** within 10 seconds.

– press button **5** or **7** within 10 seconds to select the starting time required.

IMPORTANT Time is stored when:

- ☐ starting time goes off;
- ☐ number **3** is displayed;
- ☐ the display turns on.

IMPORTANT At turning on:

- ☐ warning light corresponding to flame I on the display will turn on;
- ☐ number **3** will turn off.

Deleting a programmed starting time fig. 58

To delete the programmed starting time, press button **6** briefly: the display light will go off and number **3** corresponding to the selected preset time will disappear.

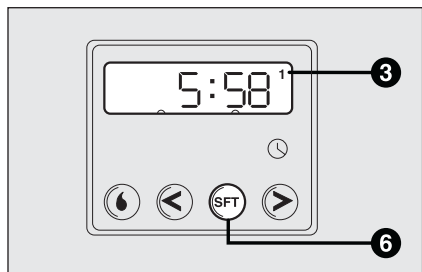


fig. 59

F0N0155m

Recalling a pre-set time fig. 59

Press button **6** repeatedly until the required preset starting time appears on the display (number **3**). After 10 seconds, the time will disappear (it will stay stored), number **3** and the display will light up.

IMPORTANT To change or delete preset times, follow the instructions in the paragraphs above.

Turning the heater off

According to the operation mode (automatic or manual), the heater can be turned off:

- ☐ **automatically**, after the preset period of time (60 minutes when the display light is red);
- ☐ **manually** by pressing again button “heat now” on the timer (flame I button).

In each case, the heater warning light, the display and the passenger compartment fan will be turned off and the heater flame will be blown out.

The coolant circulation pump will run for approximately two minutes after the heater has been turned off to dispose of as much heat as possible. During this phase the heater can, however, be turned on.



WARNING

The heater burns fuel in the same way as the engine, though, of course, to a lesser degree and therefore to avoid intoxication and suffocation, never use the supplementary heater in closed areas, garages or workshops not equipped with specific exhaust evacuation devices even for short periods of time.

IMPORTANT The parking heater goes off when the battery voltage is low to enable the vehicle to be started up.

IMPORTANT Before turning on the device, ensure that the fuel level is higher than the reserve. Otherwise the device could lock and require the assistance of the Fiat Dealership.

- ☐ Always remember to turn the heater off when refuelling or standing in service stations to avoid fires and explosions.
- ☐ Do not park the vehicle over inflammable material such as paper, dry grass or leaves: fire risk!
- ☐ The temperature near the heater must never exceed 120°C (e.g. during painting operations in a workshop oven). Higher temperatures could damage the electronic control unit components.
- ☐ When the engine is off, the heater takes power from the battery: it is consequently important to run the engine for a certain period of time in order to restore the battery charge.
- ☐ Follow the prescriptions in section "Vehicle maintenance" at paragraph "Engine coolant level" to check the coolant level. The coolant in the circuit must contain at least 10% antifreeze fluid.
- ☐ Maintenance and repairs must always be carried out by a Fiat Dealership and only genuine spare parts must be used.

MAINTENANCE

Have the heater checked at a Fiat Dealership periodically (always before winter). This will ensure safe and cheap running and long appliance life.

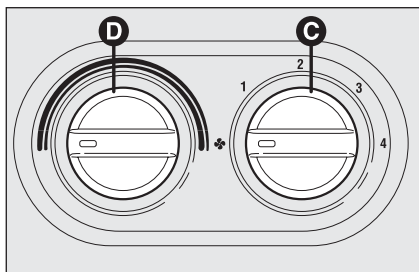


fig. 60

F0N0233m

SUPPLEMENTARY REAR HEATER

(where provided for Panorama and Combi versions)

Panorama and Combi versions are provided with main plus (optional) supplementary heater with control located on the headlining above the second seat row **fig. 60**.

To turn the heater on, press button **F-fig. 61** on the control panel.

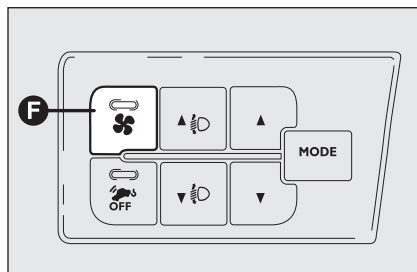


fig. 61

F0N0185m

- ☐ Turn knob **D** to position “all cold” (ring to blue sector) to make air at ambient temperature flow out from rear lower vents (located under the 2nd-3rd row seats for Panorama versions and from the grille on left wheelhouse side for Combi versions).

- ☐ Turn knob **D** to position “all warm” (ring to red sector) to make warm air (with stabilised engine rpm) flow out from rear lower vents (located under the 2nd-3rd row seats for Panorama versions and from the grille on left wheelhouse side for Combi versions).

SUPPLEMENTARY REAR AIR CONDITIONER

(where provided for Panorama and Combi versions)

Panorama and Combi versions are provided with main plus (optional) supplementary heater/air conditioner with control located on the headlining above the second seat row **fig. 60**.

For turning on, press button **F-fig. 61** on the control panel, the supplementary air conditioner works only if the main one is on.

- ☐ Turn knob **D** to position “all cold” (ring to blue sector) to make cold air flow out from the vents located on the roof.
- ☐ Turn knob **D** to position “all warm” (ring to red sector) to make warm air (with stabilised engine rpm) flow out from rear lower vents (located under the 2nd-3rd row seats for Panorama versions and from the grille on left wheel-house side for Combi versions).
- ☐ Turning knob **D** to intermediate positions will distribute air flow between roof vents and lower vents, changing air temperature.

IMPORTANT Turning the main conditioner compressor on (pressing button **E**), although the supplementary conditioner fan is at **0**, will automatically activate the 1st speed to prevent the formation of ice and damages to the component as a consequence.

EXTERNAL LIGHTS

The left-hand stalk operates most of the external lights.

The external lights can only be switched on when the ignition key is at **ON**.

LIGHTS SWITCHED OFF fig. 62

Knurled ring turned to ○.

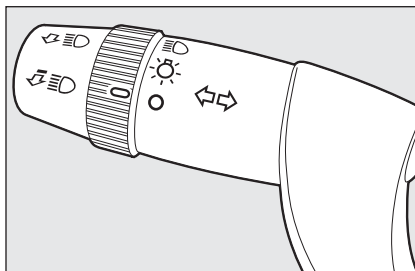


fig. 62

F0N0030m

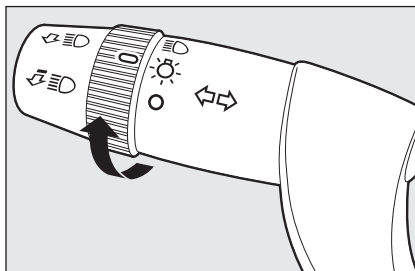


fig. 63

F0N0031m

SIDE/TAILLIGHTS fig. 63

Turn the knurled ring to ☀.

Instrument panel warning light ☀ will turn on.

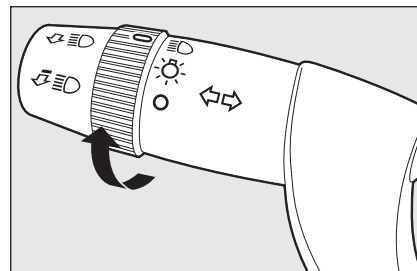


fig. 64

F0N0032m

DIPPED BEAM HEADLIGHTS

fig. 64

Turn the knurled ring to ☾.

Instrument panel warning light ☾ will turn on.

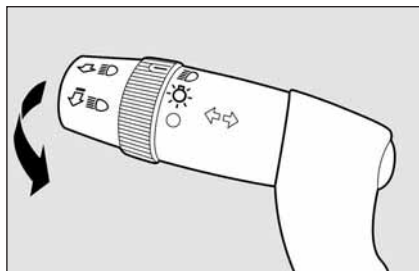




fig. 65

F0N0033m

MAIN BEAM HEADLIGHTS fig. 65

When the knurled ring is at  pull the lever towards the steering wheel (2nd unstable position).

The warning light  on the instrument cluster will come on at the same time.

To turn the main beams off, pull again the lever towards the steering wheel (dipped beams will turn on again).

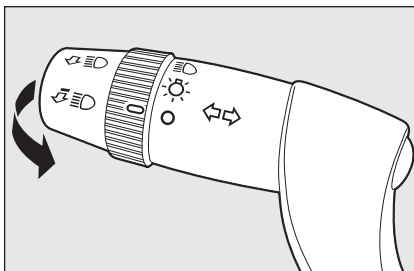





fig. 66


F0N0034m

FLASHING THE HEADLIGHTS fig. 66

Pull the stalk towards the steering wheel (1st unstable position) regardless of the position of the knurled ring. The warning light  on the instrument panel will turn on.

PARKING LIGHTS

These lights can only be turned on with ignition key at **STOP** or removed, by moving the left stalk knurled ring first to  or .

The warning light  on the instrument cluster will come on at the same time.






fig. 67

F0N0035m

DIRECTION INDICATORS fig. 67

Move the stalk to (stable) position:

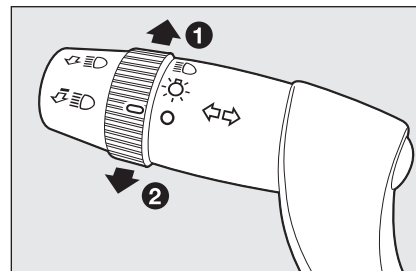- ☐ up (position 1): right-hand direction indicator;
- ☐ down (position 2): left-hand direction indicator.

Instrument panel warning light  or  will flash.

Indicators are switched off automatically when the steering wheel is straightened.

Lane change function

If you want to signal that you want to change lane, move the left stalk to unstable position for less than half a second. The direction indicator of the selected side activates for 5 blinks and then automatically turns off.

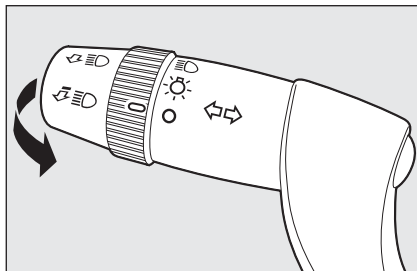


fig. 68

F0N0036m


“FOLLOW ME HOME” DEVICE

This function allows the illumination of the space in front of the vehicle for a preset period of time.

Activation fig. 68

With the ignition key at **OFF** or removed, pull the stalk towards the steering wheel within 2 minutes from when the engine is turned off.

At each single movement of the stalk, the staying on of the lights is extended by 30 seconds up to a maximum of 210 seconds; then the lights are switched off automatically.

Each time the stalk is operated, the instrument panel warning light  will turn on together with a message on the display (see section “Warning lights and messages”) until the function is active. The warning light comes on the first time the stalk is operated and will stay on up to automatic function deactivation. Each operation of the stalk will extend just the lights switching on time.

Deactivation

Keep the stalk pulled towards the steering wheel for more than 2 seconds.

AUTOMATIC HEADLIGHTS SENSOR (daylight sensor) (where provided)

It detects the changes of the external light intensity of the vehicle according to the light sensitivity set: the greater the sensitivity is, the smaller the amount of external light necessary to control the switching-on of the external headlights will be. The daylight sensor sensitivity can be adjusted by the “Set-up menu” of the display.

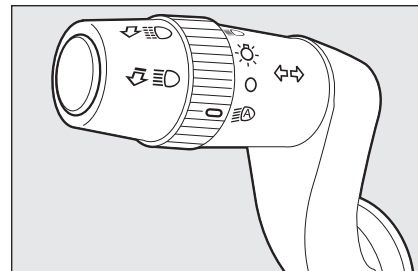



fig. 69

F0N0037m

Activation fig. 69

Turn the knurled ring to : in this way, the automatic activation of the side/tail-lights and dipped beam headlights is simultaneously enabled according to the external luminosity.

Deactivation

As a result of the sensor control, the dipped beam headlights will switch off and, after about 10 seconds, sidelights will switch off too.

The sensor is not able to detect the fog presence, lights shall therefore be switched on manually.

WINDOW WASHING

WINDSCREEN WASHER/WIPER

This device can only work when the ignition key is at **ON**.

The right stalk can be moved to five different positions **fig. 70**:

A: windscreen wiper off

B: flick wipe.

With the stalk in position **B**, turning the knurled ring **F** four possible intermittent speeds are obtained:

 = very slow intermittent

-- = slow intermittent

--- = intermittent medium

---- = fast intermittent

C: continuous slow;

D: continuous fast;

E: fast temporary (unstable position).

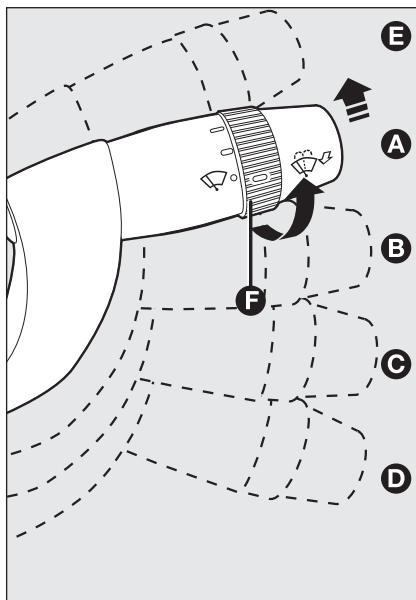


fig. 70

Operation in position **E** is limited to the time the stalk is held in this position. When the stalk is released, it returns to position **A** automatically stopping the wiper.

IMPORTANT Replace wiper blades as specified in section "Vehicle maintenance".

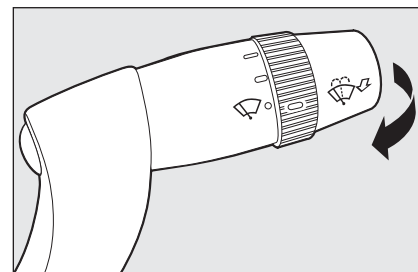


fig. 71



Never use the window wiper to remove ice or snow from the windscreen. In these conditions, the wiper is submitted to excessive effort that results in motor protection cutting in and wiper operation inhibition for few seconds as a consequence. If operation is not restored contact Fiat Dealership.

"Smart washing" function

Pulling the stalk towards the steering wheel (unstable position) operates the windscreen washer **fig. 71**.

Keeping the stalk pulled for more than half a second, with just one movement it is possible to operate the washer jet and the wiper at the same time.

The wiper stops working four strokes after releasing the stalk.

A further stroke after five seconds completes the wiping operation.

RAIN SENSOR (where provided)

The rain sensor is located behind the driving mirror in contact with the windscreen and has the purpose of automatically adjusting, during the intermittent operation, the frequency of the windscreen wiper strokes as to the rain intensity.

IMPORTANT Keep clean the glass in the sensor area.

Activation fig. 72

Move the right-hand stalk downwards by one position **B**.

The activation of the rain sensor is signalled by a control acquisition “stroke”.

Turning the knurled ring **F** it is possible to increase the sensitivity of the rain sensor.

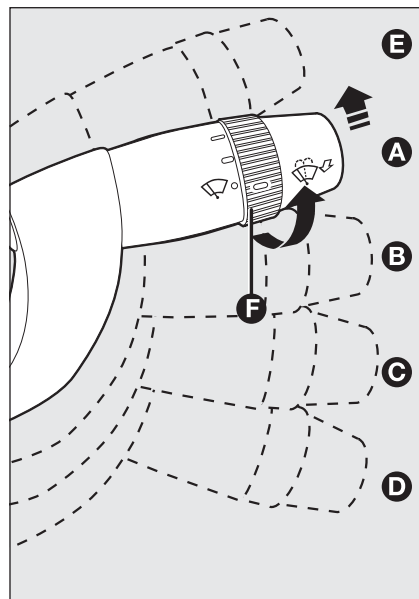


fig. 72

The increase of the sensitivity of the rain sensor is signalled by a control and acquisition “stroke”.

Operating the windscreen washer with the rain sensor activated the normal washing cycle is performed at the end of which the rain sensor resumes its normal automatic function.

Deactivation fig. 72

Move the stalk off **B** or turn the ignition key to **OFF**. At next engine starting (key at **ON**), the sensor will not be reactivated even if the stalk is at **B**. In this event, to activate the rain sensor you have to move the stalk to **A** or **C** and then again to **B** or turn the knurled ring. Rain sensor activation will be indicated by at least one wiper “stroke” even if the windscreen is dry. The rain sensor is capable of recognizing and adapting automatically to the difference between day and night.



WARNING

Streaks of water may cause unrequired blade moving.

HEADLIGHT WASHER (where provided)

Headlight washers are “retractable”, i.e.: they are located inside the front bumpers and they are activated when (with dipped beams on) the windscreen washer is operated.

IMPORTANT Check at regular intervals correct operation and cleanness of nozzles.

CRUISE CONTROL (where provided)

It is a device able to support the driver, with electronic control, which allows driving at speed over 30 km/h on long and straight dry roads (e.g.: motorways), at a desired speed, without pressing the accelerator pedal. Therefore it is not suggested to use this device on extra-urban roads with traffic. Do not use it in town

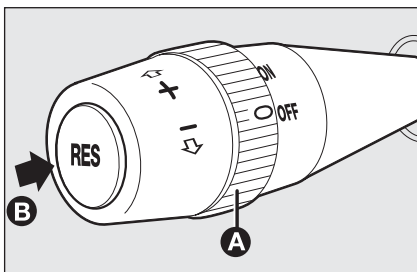


fig. 73


F0N0040m

DEVICE ENGAGEMENT fig. 73

Turn knurled ring **A** to ON.

The Cruise Control cannot be engaged in first or reverse gear. It is advisable to engage it in 4th or higher gears.

Travelling downhill with the device engaged, the vehicle speed may increase more than the memorised one.

When the device is activated the warning light  turns on together with the relevant message on the instrument panel.

TO MEMORISE SPEED

Proceed as follows:

- ☐ turn the knurled ring **A** to ON and press the accelerator pedal to the required speed;
- ☐ move the stalk upwards (+) for at least one second, then release it. The vehicle speed is memorised and it is therefore possible to release the accelerator pedal.

In the case of need (when overtaking for instance) acceleration is possible simply pressing the accelerator pedal: releasing the accelerator pedal, the vehicle will return to the speed memorised previously.

TO RESET THE MEMORISED SPEED

If the device has been disengaged for example pressing the brake or clutch pedal, the memorised speed can be reset as follows:

- ☐ accelerate gradually until reaching a speed approaching the one memorised;
- ☐ engage the gear selected at the time of speed memorising;
- ☐ press button **RES B**.

TO INCREASE THE MEMORISED SPEED

The speed memorised can be increased in two ways:

- ☐ pressing the accelerator and then memorising the new speed reached;
- or
- ☐ moving the stalk upwards (+).

Each operation of the stalk will correspond to a slight increase in speed (about 1 km/h), while keeping the stalk upwards will correspond to a continuous speed increase.

TO REDUCE MEMORISED SPEED

The speed memorised can be increased in two ways:

- ☐ disengaging the device and then memorising the new speed;
- or
- ☐ moving the stalk downwards (−) until reaching the new speed which will be memorised automatically.

Each operation of the stalk will correspond to a slight reduction in speed (about 1 km/h), while keeping the stalk downwards will correspond to a continuous speed reduction.

DEVICE DISENGAGEMENT

The device can be disengaged in the following ways:

- ☐ turning the knurled ring **A** to OFF;
- ☐ turning the engine off;
- ☐ pressing the brake pedal or engaging the hand brake;
- ☐ pressing the clutch pedal;
- ☐ shifting gear with automatic transmission in sequential mode;
- ☐ with vehicle speed below the preset limit;
- ☐ pressing the accelerator pedal; in this case the system is not really disengaged but the request for acceleration takes priority over the system. The cruise control is however active and it will not be necessary to press button **RES** to resume previous conditions after ending acceleration.

The device is automatically deactivated in one of the following cases:

- ☐ ABS or ESP system cut-in;
- ☐ system failure.



WARNING

When travelling with the device on, never set the gearshift lever to neutral.



WARNING

*In the event of device malfunction or failure, turn the knurled ring **A** to OFF and contact a Fiat Dealership after checking the protection fuse integrity.*

CEILING LIGHTS

FRONT CEILING LIGHT WITH SPOT LIGHTS

Switch **A**-fig. 74 turn on/off these lights. With switch **A** in central position, lights **C** and **D** will turn on/off when opening/closing the front doors. With switch **A** pressed on the left side, lights **C** and **D** will always stay off. With switch **A** pressed on the right side, lights **C** and **D** will always stay on. Light turning on/off is gradual.

Switch **B** performs the spot function; with light off, it will turn on:

- ☐ light **C** if pressed on the left side;
- ☐ light **D** if pressed on the right side.

IMPORTANT Before getting out of the vehicle, make sure the switch is at central position: lights off with doors closed in order to avoid draining the battery.

In any case, if the switch is left inadvertently to the On position, the lights will turn off automatically 15 minutes after turning the engine off.

Ceiling light timing

On certain versions to facilitate getting in/out of the vehicle at night or with poor lighting, 2 different timed switching on modes have been provided.

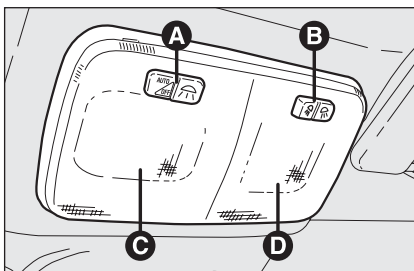


fig. 74

FON0041m

LIGHT TIMING WHEN GETTING INTO THE VEHICLE

Lights will turn on as follows:

- ☐ for about 10 seconds when opening front doors;
- ☐ for about 3 minutes when opening one of the side doors;
- ☐ for about 10 seconds when closing the doors.

Timing will stop when turning the ignition key to **MAR**.

LIGHT TIMING WHEN GETTING OUT OF THE VEHICLE

After removing the key from the ignition switch, the ceiling lights will turn on as follows:

- ☐ within 2 minutes from turning the engine off for about 10 seconds;
- ☐ when opening one of the side doors for about 3 minutes;
- ☐ when closing one of the doors for about 10 seconds.

Timing will stop automatically when locking the doors.

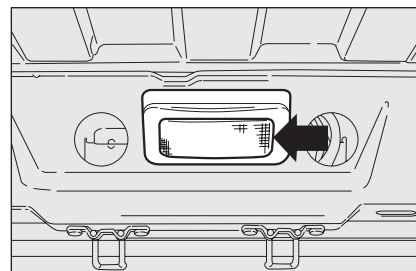


fig. 75

FON0042m

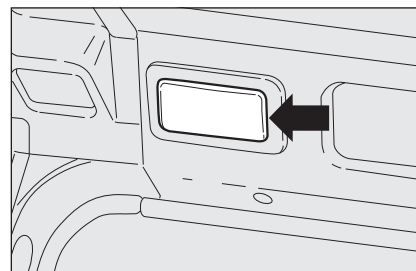


fig. 76

FON00219m

LOAD COMPARTMENT CEILING LIGHT fig. 75

It is located above the rear door, to turn it on press the lens as shown in the figure.

LOAD COMPARTMENT SIDE CEILING LIGHT (where provided) fig. 76

To turn it on press the lens as shown in the figure.

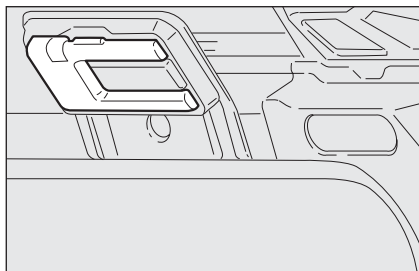


fig. 77

F0N0220m

REMOVABLE CEILING LIGHT (where provided) fig. 77

This ceiling light can be both used as fix light and as removable electric torch. When the removable ceiling light is connected to the fix support, the electric torch cell is recharged automatically. Ceiling light recharge with the vehicle at a standstill and ignition key at **STOP** or removed is limited to 15 minutes.

CONTROLS

HAZARD LIGHTS fig. 78

They turn on by pressing switch **A**, regardless of the position of the ignition key.

With device on, indicator lamps and flash on the instrument panel.

Press the switch again to turn the lights off.

The use of hazard lights is governed by the Highway Code of the country you are in. Keep to the rules.

Emergency braking

In the event of emergency braking the emergency lights automatically turn on and at the same time the lights and turn on on the dashboard.

The function automatically turns off when the emergency braking stops.

This function complies with the current applicable laws.

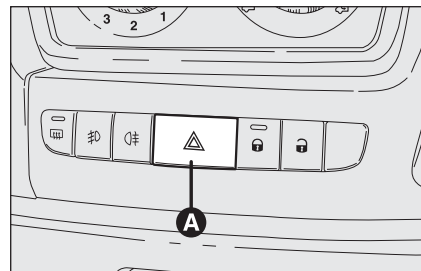


fig. 78

F0N0044m

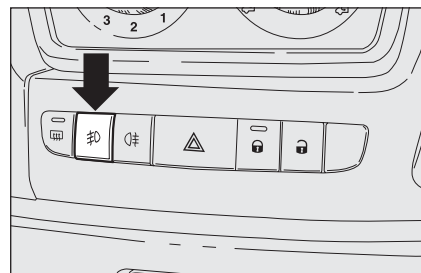


fig. 79

F0N0045m

FRONT FOG LIGHTS (where provided) fig. 79

To turn front fog lights on, press button . To activate these lights it is necessary to have the side/taillights switched on.

Warning light on the instrument panel will turn on.

Press the button again to turn the lights off. The use of front fog lights is governed by the Highway Code of the country you are in. Keep to the rules.

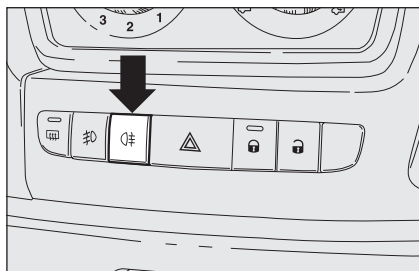




fig. 80

F0N0046m

REAR FOG LIGHT fig. 80



Press button , to turn these lights on if it is necessary to have the dipped beam headlights or the front fog lights (where provided) switched on.


Warning light  on the instrument panel will turn on.

Press the button again to turn the light off or turn off dipped beams and/or front fog lights (where provided).

The use of rear fog lights is governed by the Highway Code of the country you are in. Keep to the rules.

PARKING LIGHTS

These lights can only be turned on with ignition key at **STOP** or removed, by moving the left stalk knurled ring first to  and then to .

The warning light  on the instrument cluster will come on at the same time.

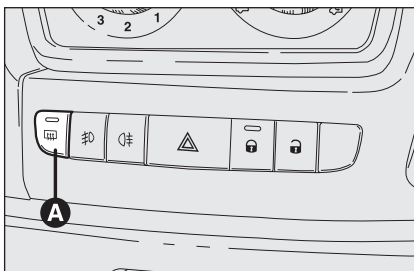


fig. 81

F0N0043m

HEATED REAR WINDOW (where provided) fig. 81

Press button **A** to turn on this function. This function will turn off automatically after about 20 minutes.

BATTERY DISCONNECTION FUNCTION (DISCONNECTOR) (where provided)

The battery disconnection function is enabled with the ignition key in the **BATT** position, as illustrated on the dedicated plate located in the area illustrated in **fig. 81b**. To turn the ignition key to the **BATT** position, press button **A** (red) **fig. 81a**. The battery will be disconnected, by interrupting the earth lead, about 45 seconds after the key is turned to the **BATT** position.

This 45 second period is necessary to:

- ☐ allow the driver to get out of the vehicle and lock the doors using the remote control;

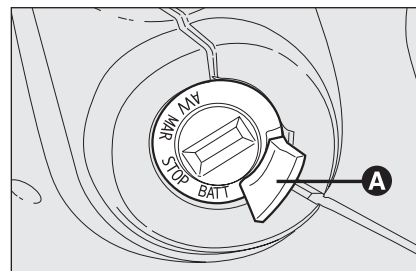


fig. 81a

F0N0810m

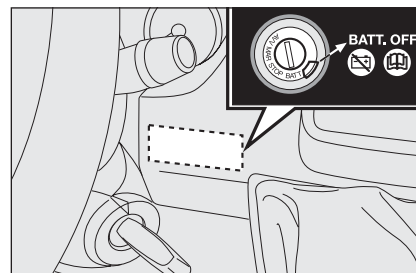


fig. 81b

F0N0811m

- ☐ guarantee that all the vehicle electrical systems have been deactivated.

With the battery disconnected, access to the vehicle will only be possible by unlocking the driver's door using the mechanical lock. To restore the battery connection, insert the ignition key and turn it to the **MAR** position, the vehicle can be started normally at this point. When the battery has been disconnected it may be necessary to reset some of the electrical devices (e.g. the clock, date, etc.).

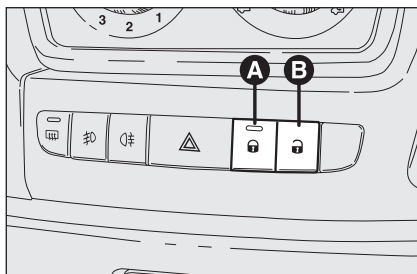


fig. 82

F0N0047m

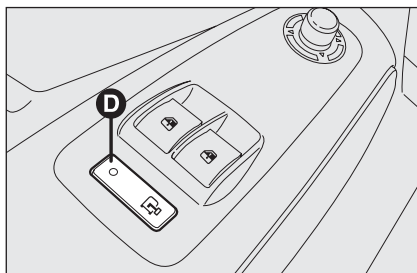


fig. 83

F0N0132m

DOOR LOCK fig. 82

To lock all doors at the same time, press button **A**, located on the central console control panel, regardless of the position of the ignition key. Press button **B** to unlock the doors.

The window control panel features a button **D** for independent locking/unlocking of the load compartment fig. 83.

POWER SUPPLY AND FUEL CUT-OFF SWITCH

The vehicle is fitted with a safety switch that in the event of a crash comes into operation by cutting off fuel and turning off the engine as a consequence. When the inertial switch cuts in, fuel supply is stopped and hazard and sidelights will turn on, for turning off press button **A**. An additional safety switch is also fitted, that in the event of a crash comes into operation by cutting off the power supply. These two safety switches therefore prevent dangerous fuel leaks due to fuel line cracking and sparks or electric discharges due to damaging or malfunctioning of the electric components of the vehicle in the event of a crash.

IMPORTANT After a crash, remember to remove the key from the ignition device to prevent battery run-down.

If, after a crash no fuel leaks or damages to the electric devices (e.g. headlights) are found and the vehicle can be started again, reset the fuel cut-off switch and the power supply cut-off switch (where provided). Follow the instructions given below.

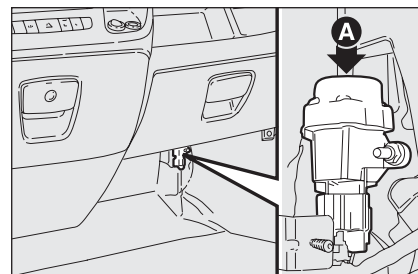


fig. 84

F0N0048m



WARNING

If, after a crash, you smell fuel or see leaks from the fuel system, do not reset the switches to avoid fire risk.

Resetting the fuel cut-off switch fig. 84

To reset the fuel cut-off switch, press button **A**.

Resetting the power supply cut-off switch (Schoolbus/Minibus) fig. 85

The switch is located on the battery positive terminal.

To reset the power supply cut-off switch, proceed as follows:

- ☐ press button **A** to reset the fuel cut-off switch;
- ☐ press button **B** to reset the power supply switch.

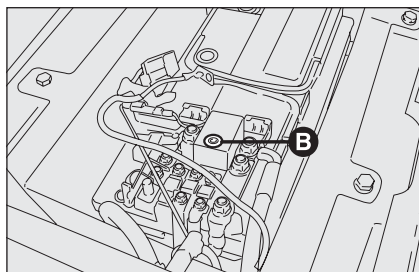


fig. 85

F0N0127m



WARNING

Before resetting the power supply cut-off switch carefully inspect the vehicle for fuel leaks or damages to electric devices (e.g. headlights).



WARNING

Before resetting the fuel cut-off switch carefully inspect the vehicle for fuel leaks or damages to electric devices (e.g. headlights).

IMPORTANT For models other than Schoolbus/Minibus, button **B** is replaced by a proper fuse; to replace it contact Fiat Dealership

INTERIOR EQUIPMENT

UPPER ODDMENT COMPARTMENT - REFRIGERATED COMPARTMENT (where provided) fig. 86

To use it, lift the lid as shown in the figure.

If the climate control system is fitted, the compartment (with bottle holder recess) can be cooled/warmed through a power outlet connected to the climate control system.

GLOVEBOX fig. 87

To open the glovebox operate handle **A**.

GLOVEBOX WITH LOCK fig. 88

To lock/unlock it, turn the key clockwise/counterclockwise. To open it operate the relevant handle.

This compartment is suitable to house a portable computer.

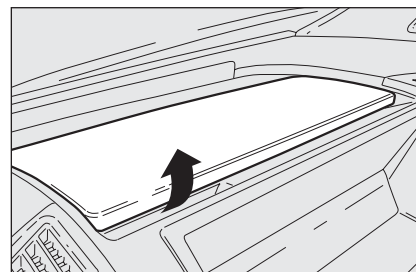


fig. 86

F0N0049m

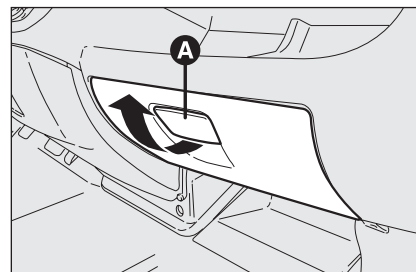


fig. 87

F0N0050m

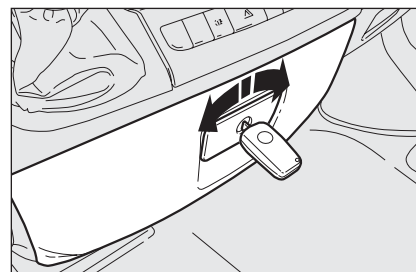


fig. 88

F0N0051m

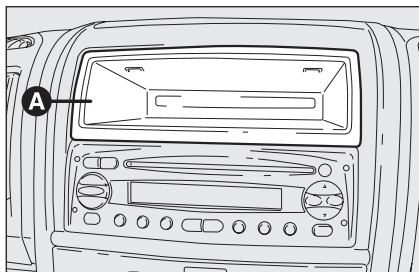


fig. 89

F0N0052m

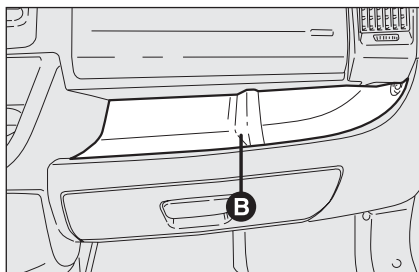


fig. 90

F0N0053m

ODDMENT COMPARTMENTS

Oddment compartment **A**-fig. 89 is located in the middle of the dashboard.

Oddment compartment **B**-fig. 90 is located on the right side of the dashboard, above the glovebox.

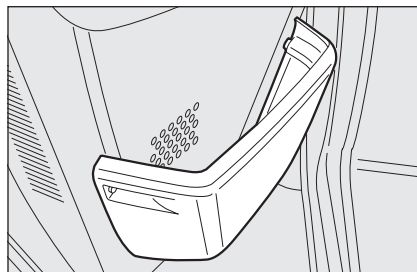


fig. 91

F0N0128m

DOOR POCKETS fig. 91

Document / map pockets are located in door panels.

ODDMENT COMPARTMENT UNDER THE FRONT PASSENGER'S SEAT

To use it, proceed as follows:

- ☐ Open lid **A** and remove it as shown in fig. 92:
- ☐ turn the locking knob **B** counter-clockwise and remove it to extract the compartment.

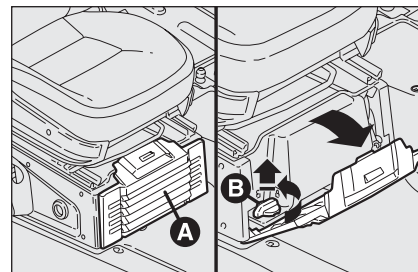


fig. 92

F0N0134m

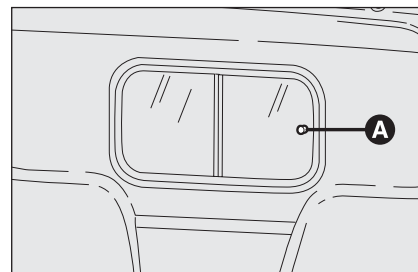


fig. 93

F0N0218m

REAR SEPARATION PANEL

The vehicle can be fitted with fixed rear separation panel or it can be provided with sliding glass.

To open/close the sliding glass fig. 93 use the relevant knob **A**.

Special versions are provided with a protection grid located on the separation panel glass inside the load compartment.

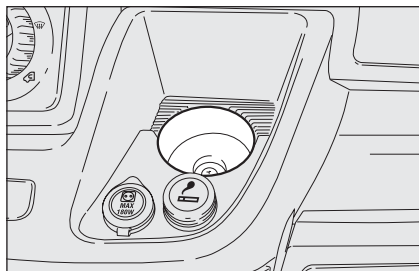


fig. 94

F0N0054m

GLASS HOLDER - CAN HOLDER fig. 94

Glass - can holder recesses are located on the central panel.

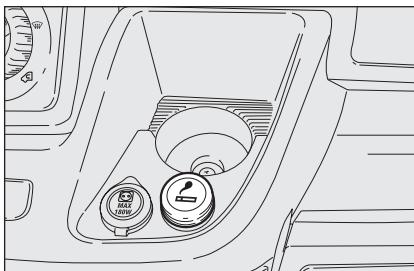


fig. 95

F0N0055m

CIGAR LIGHTER fig. 95

It is located in the central panel.

Press button **A** to switch on the cigar lighter with ignition key at **MAR**.

After about 15 seconds the button will return to its initial position and is ready for use.

IMPORTANT Always check that the cigar lighter has turned off.



WARNING

The cigar lighter gets very hot. Handle it with care and make sure that it is not used by children: danger of fire and/or burns.

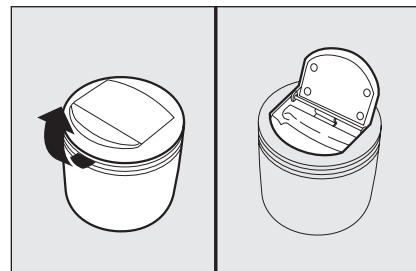


fig. 96

F0N0146m

ASHTRAY fig. 96

The ashtray is a removable plastic box that can be fitted into the glass/can recesses on the central panel.

IMPORTANT Do not use the ashtray as waste paper basket: it might set on fire in contact with cigarette stubs.

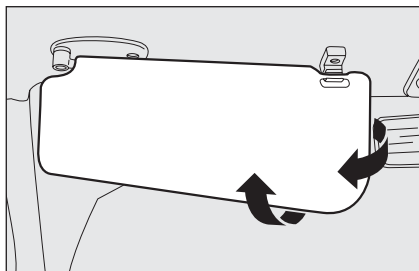


fig. 97

F0N0056m

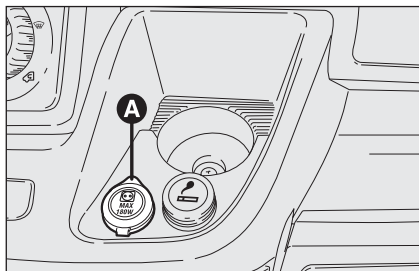


fig. 98

F0N0057m

SUN VISORS fig. 97

These are positioned to the sides of the rear-view mirror. They can swing to the sides and up or down.

CURRENT OUTLET (where provided)

It is located on the central panel, near the cigar lighter **fig. 98**.

To use it open cap **A**.

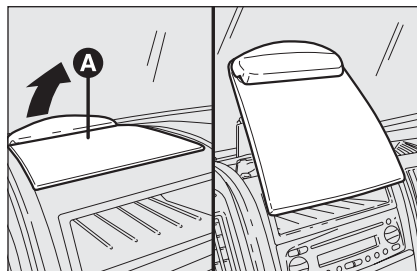


fig. 99

F0N0058m

WRITING/READING DESK (where provided)

In the middle of the dashboard, above the sound system compartment, is fitted a writing desk **A-fig. 99** that, on certain versions can be used as a reading desk by lifting its rear part and then resting it on the dashboard as shown in the figure.

On versions fitted with passenger's air bag, the writing/reading desk is fix.

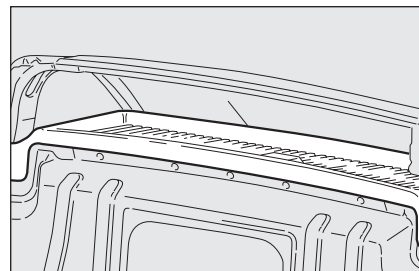


fig. 100

F0N0190m

STOWING SPACE ABOVE THE CAB fig. 100 (where provided)

It is set above the driver's cab and it has been designed to stow light items.

Max. admissible:

- localised load 10 kg
- load distributed on the whole shelf surface 20 kg



WARNING

Never use the writing desk in vertical position when travelling.

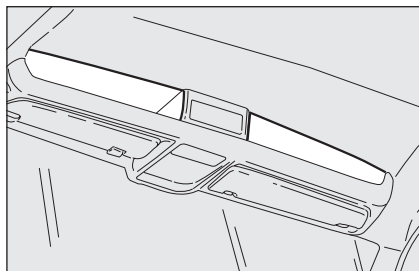


fig. 101

F0N0191m

ODDMENT COMPARTMENT IN THE CAB (CAPUCINE) fig. 101 (where provided)

This oddment compartment is set above the sun visors and it has been designed to offer prompt stowing for light items (e.g. documents, road maps, etc. ...)

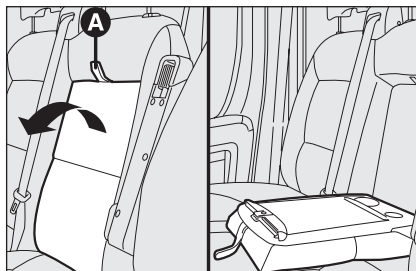


fig. 102

F0N0149m

FOLDING TOP (where provided)

To use it, pull tab **A**-fig. 102 and lower the folding top.

It houses two recesses for glasses/cans and tabletop with paper clip.

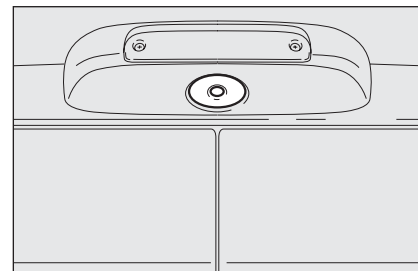


fig. 103

F0N0217m

REARVIEW CAMERA AND DISPLAY SYSTEM (where provided)

The parking camera system **fig. 103** enables the driver to see the area at the back of the vehicle on the display **A**-fig. 104 set in the passenger compartment.

The system consists of a camera with a plastic case installed on the rear cross member on the roof that houses also the third brake light, and a display with a plastic case housed in the top oddment compartment.

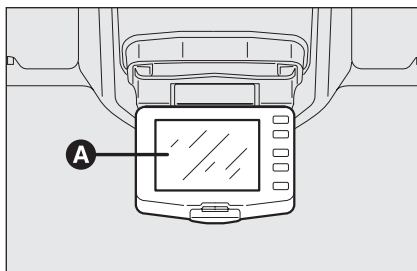


fig. 104

F0N0214m

The display is provided with buttons (On/Off, brightness, background brightness). To use it, press the release button and set the display to open position.

The rearview display is adjusted and oriented like mirror and when it is not used it shall be stowed into the top oddment compartment.

ACTIVATION

The system activates with ignition key fitted when engaging reverse or pressing the relevant button. With reverse engaged and vehicle moving, the system will work up to a max. speed of about 15km/h and it will deactivate if 18km/h speed is exceeded. Displayed image will stay on for approx. 5 seconds after disengaging reverse.

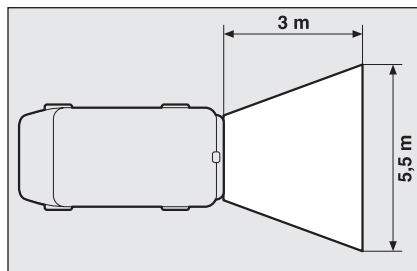


fig. 105

F0N0215m

GENERAL DIRECTIONS

Visible range

The visible range varies according to vehicle conditions (including full load condition), vehicle characteristics and weather conditions (daylight, rain, snow and fog); with poor light or in full load conditions the range of visibility may be reduced.

The camera covers a range of approx. 3 m length and approx. 5.5 m max. width
fig. 105.

Instructions for use

To clean the camera use a soft cloth when the protecting glass is dirty or frozen (outside). Never use other tools for cleaning it to prevent scratching the glass.

To clean the display use also a dry soft cloth. Dust can be removed using proper brushes provided for the purpose. Never use detergents.

The display glass may break if blown. In this event do not touch the leaking fluid. Rinse immediately with water and soap in case of accidental contact.

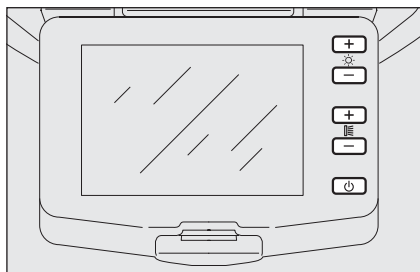


fig. 106

F0N0216m

USER INTERFACE

Display user interface consists of the following **fig. 106**:

- ☐ Brightness adjustment: 2 buttons
- ☐ Background brightness adjustment: 2 buttons
- ☐ ON/OFF button: to display camera images although reverse is not engaged

To go back to initial configuration, keep the ON/OFF button pressed for about 3 seconds with system off. In this event the ON/OFF button will flash twice to confirm the operation.

TEXT MESSAGES ON THE DISPLAY

Text messages will be displayed in the following conditions:

- ☐ 5 seconds after engaging reverse a warning message will be displayed.
- ☐ When exceeding 18 km/h speed and only the activation button is ON, the camera image will disappear and a message indicating system stand-by will be displayed for about 5 seconds.
- ☐ When exceeding 18 km/h speed and reverse is engaged, the camera image will disappear and a warning message will be displayed until speed slows down to 15 km/h. In this case camera image is displayed again.

The system enables to change the language of the display messages. To set the required language, with system off: press at the same time the ON/OFF button and any other button, then select the required language scrolling the menu using the ON/OFF button. After selecting the required language, wait for approx. 3 seconds to store it.

MULTIMETER

See the booklet provided by the multimeter Manufacturer for more detailed information on operation and use.

Multimeter installation is compulsory if the vehicle weight (with or without the trailer) exceeds 3.5 tons.

IMPORTANT Changes to the instrument or to the signal transmission system which effects the instrument recordings, especially for fraudulent purposes, may be a criminal offence.

IMPORTANT When a macrograph is fitted and the vehicle has been parked for longer than 5 days, it is advisable to disconnect the battery negative terminal to preserve the charge status.

IMPORTANT

Do not use abrasive detergents or solvents to clean the device. To clean its external surface, use a wet cloth or special products for cleaning synthetic materials.

The multimeter is installed and sealed with lead by authorised personnel: access to the device and relevant power and recording cables is forbidden.

The vehicle owner is responsible for governing the instrument use. The inspection must be carried out at least every two years and will include a test to confirm correct operation.

After the inspection, check that the plate is updated with specified data.

SPEED BLOCK (where provided)


The vehicle is available with a speed restriction function that can be set, by the user, at one of 4 pre-set levels: 90, 100, 110, 130 km/h. To activate/deactivate this function, go to a Fiat Dealership. After the operation a label will be stuck on the windscreen containing the maximum set speed.


WARNING The speedometer may show a top speed that is higher than the actual one set by the Dealership as provided for by legislation.

DOORS

CENTRAL DOOR LOCKING/UNLOCKING SYSTEM

Locking from the outside

With the doors closed, press the button  on the remote control **fig. 107** or fit and turn clockwise the metal insert into the driver's door lock.

Door locking is only possible if all the doors are closed. Opening one or more doors by pressing the button  on the remote control **fig. 107**, will make the direction indicators and the button led **A** **fig. 110** flash quickly for about 3 seconds.

With this function active, buttons **A** and **B** **fig. 110** are disabled.

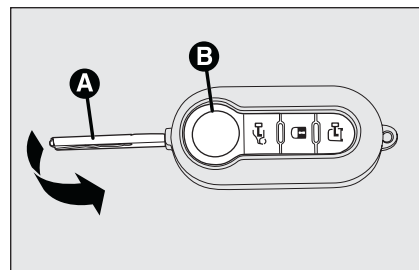


fig. 107

F0N0800m

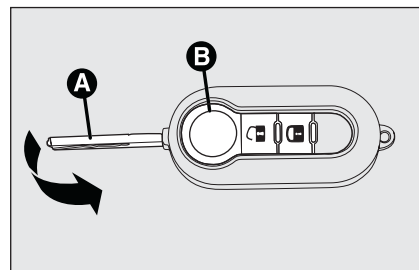





fig. 108

F0N0801m

Pressing twice briefly the button  on the remote control **fig. 107** will engage the dead lock device (see paragraph "Dead lock device").

Door unlocking from the outside

Briefly press button  **fig. 107** or  **fig. 108**, according to versions, to obtain remote door unlocking, timed ceiling light turning on, directions indicator double

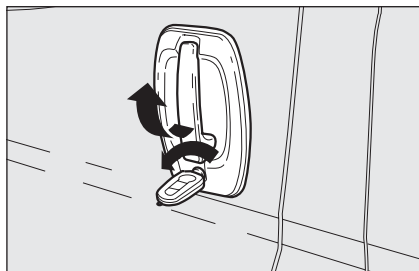


fig. 109

F0N0059m

flashing. Turn the metal insert counter-clockwise into the driver's door lock **fig. 109** to unlock all the doors.

With the battery disconnected, access to the vehicle will only be possible by unlocking the driver's door using the mechanical lock.

Door locking/unlocking from the inside

Press button **A-fig. 110** to lock and press button **B** to unlock the doors. Block/release actions are carried out centrally (front and rear). When doors are locked the button led **A** is on and pressing the button **B** will obtain central unlocking of the doors and turning off of the led. When doors are unlocked, the button led is off and pressing the button will obtain central locking of the doors. Door locking is activated only if all the doors are perfectly closed.

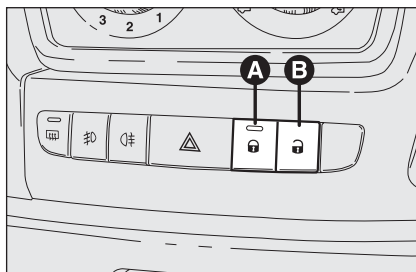


fig. 110

F0N0047m

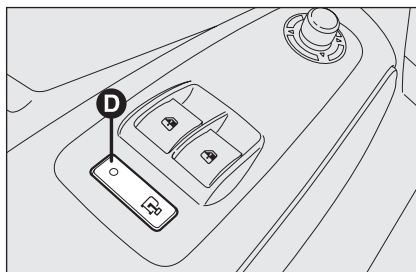


fig. 111

F0N0132m

After locking doors by:

- ☐ remote control;
- ☐ door revolving plug;

it will not be possible to unlock the doors by pressing button **A-fig. 110**.

IMPORTANT With central locking active pulling the opening lever of one of the front doors will cause central locking deactivation.

Pulling the internal door handle of one of the rear doors will unlock the relevant door.

Lacking power (blown fuse, battery disconnected, etc.) it is however possible to lock the doors manually.

After exceeding 20 km/h speed, doors will be locked automatically if the set up menu function has been selected (see paragraph "Multifunction display" in this section).

LOAD COMPARTMENT KEY

fig. 111

Lock activation is indicated by the led on the key.

The led turns on in the following cases:

- ☐ after each door lock command generated by the key itself or by key **A** on the dashboard;
- ☐ upon instrument panel activation;
- ☐ upon opening one of the front doors;
- ☐ when the doors are locked at 20 km/h (if this is activated from the menu);

Deactivation takes place upon opening one of the load compartment doors or upon a door release request (load compartment or centralised) or upon a release request via the remote control/door pawl.

DEAD LOCK DEVICE (where provided)

This safety device enables to inhibit:

- ☐ door internal handles;
- ☐ locking/unlocking buttons **A-B fig. 110**;

thus hindering doors opening from inside the passenger's compartment in case of attempt to break-into (e.g.: window breaking).


The dead lock device guarantees the best protection against unwanted access. Therefore, it should be actuated every time the vehicle is parked and left unattended.



WARNING

Once the dead lock device has been actuated, doors cannot be opened from the passenger's compartment in any way whatsoever. For this reason, make sure there are no person left inside the vehicle. If the battery of the key with remote control is down, the dead lock device can be deactivated only by fitting the metal insert of the key in both front door revolving plugs as described previously: in this case the dead lock device will stay engaged only on the rear doors.

Device activation

The dead lock device is automatically activated on every door when pressing twice briefly the remote control button , **fig. 107**.

Device activation is indicated by 3 flashing of direction indicators and flashing of the button led **A-fig. 110**.

If one of the doors is not perfectly closed, the dead lock device will not activate, thus preventing that a person getting into the vehicle from the open door remains blocked inside the passenger's compartment when she/he closes the door.

Device deactivation

The device is deactivated automatically on every door in the following cases:

- ☐ when opening the driver's door using the key without remote control;
- ☐ when unlocking doors using the remote control;
- ☐ turning the ignition key to **MAR**.

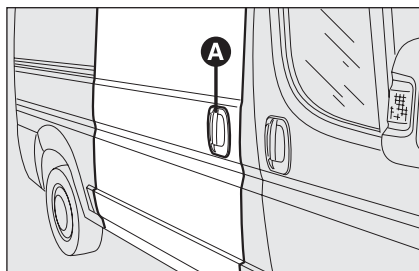


fig. 112

F0N0061m

SIDE SLIDING DOOR fig. 112



WARNING

When leaving the vehicle parked with the sliding doors open, always check that the door hooks are properly fastened into the retaining device.



WARNING

Do not move the vehicle with side doors open.

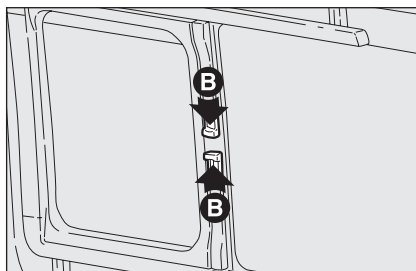


fig. 112a

F0N0240m

To open the side sliding door, raise the handle **A** and guide the door.

The side sliding door is equipped with a lock that stops it at the end of its opening run. Operate the outer handle **A** (or the corresponding inner one) and push the door to close it.

In any case, always make sure that the door is correctly fastened in the door open catch.

SLIDING SIDE WINDOW (where provided) fig. 112a

To open, press the two handles **B** toward one another and slide the glass.

When the two opening handles are released, the sliding glass may stop in intermediate positions.



fig. 113


F0N0176m

MOBILE FOOT BOARD fig. 113 (where provided)

When opening the passenger's compartment side door or the load compartment door, a foot board will come out under the vehicle floor to make easier to get into the vehicle.



WARNING

Always make sure the foot board is fully retracted before moving off. Since the foot board is interlocked with the side sliding door, if the foot board is not fully retracted or rear doors are not perfectly closed will cause instrument panel warning light  turning on.

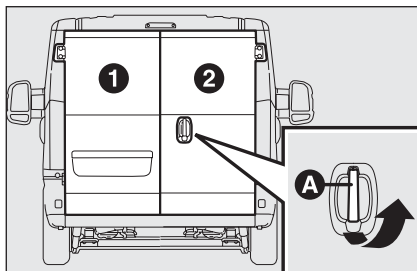



fig. 114


F0N0129m

REAR DOUBLE DOOR

Opening the first door by hand from the outside

Turn the key counterclockwise **fig. 109** or press the remote control button  and operate the handle **A-fig. 114** in the direction of the arrow.

Closing the first door by hand from the outside

Turn the key clockwise or press the button  of the key with remote control. Close first the left door and then the right one.

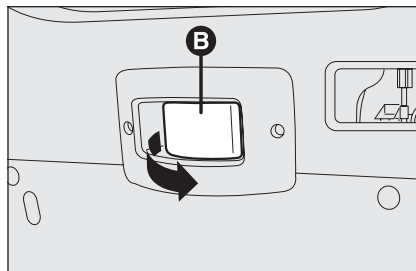


fig. 115

F0N0130m

Opening the second door by hand **fig. 116**

Pull the handle **C** in the direction of the arrow.

The double rear doors are fitted with a catch which stops the opening at an angle of approximately 90°.

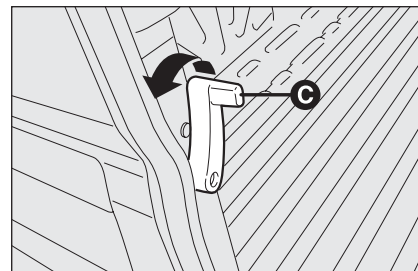


fig. 116

F0N0131m

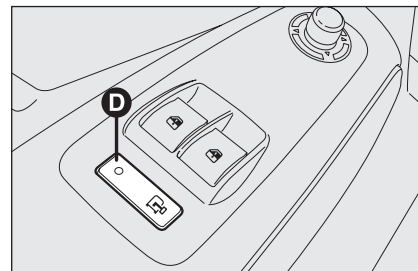


fig. 117

F0N0132m

Powered closing from the inside **fig. 117**

Close both rear doors (first the left one and then the right one) and press button **D** located on window control panel.



WARNING

The spring catch system is designed to ensure the best comfort in use. An accidental knock or gust of wind could release the springs and make doors close.

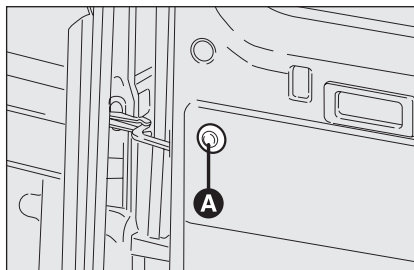


fig. 118

F0N0188m

It is possible to increase the opening angle of the two doors to facilitate loading and unloading operations. Press button **A**-fig. 118 to open the doors to about 180°.



WARNING

When open to 180° the doors are not blocked. Do not use this system when the vehicle is parked on a slope or when it is windy.

POWER WINDOWS

fig. 119

The driver's door armrest features the switches that with the key at **MAR**:

A open/close the left front window;

B open/close the right front window;

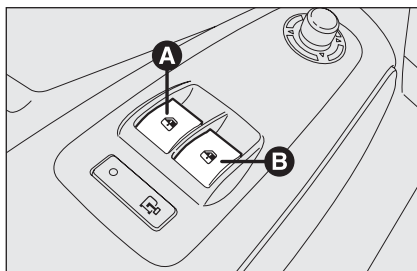


fig. 119

F0N0062m

Automatic continuous operation

All versions are equipped with automatic raising and lowering of the front, driver's side window.

Automatic continuous operation activates by pressing one of the control switches for over half a second. The window will stop when it is completely open or when pressing the button again.

IMPORTANT With ignition key at **STOP** or removed, the power windows remain activated for about 3 minutes and are deactivated immediately the moment a door is opened.



WARNING

Improper use of the power windows can be dangerous. Before and during its operation ensure that any passengers are not at risk from the moving glass either by personal objects getting caught in the mechanism or by being injured by it directly. Always remove the ignition key when getting out of the vehicle to prevent the power windows being operated accidentally and constituting a danger to the passengers in the vehicle.

BONNET

TO OPEN THE BONNET

Proceed as follows:

- ☐ open the driver's door to find the bonnet opening handle;
- ☐ pull lever **fig. 120** in the direction of the arrow;
- ☐ pull lever **A-fig. 121** as shown in the figure;
- ☐ lift the bonnet and at the same time release the rod **fig. 122** from the catch **D**, then fit the rod end **C-fig. 123** into the bonnet recess **E**.

Front passenger door

The front passenger door internal armrest houses a dedicated switch controlling the relevant window.

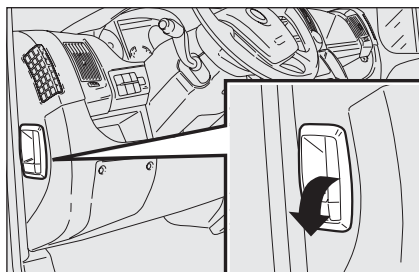


fig. 120

F0N0063m

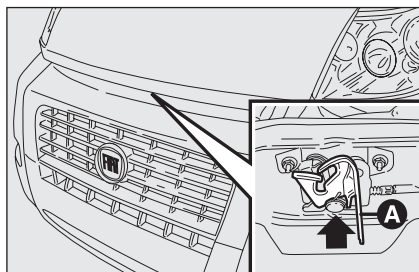


fig. 121

F0N0323m

IMPORTANT Before opening the bonnet, check that windscreen wiper arms are not lifted from the windscreen.

TO CLOSE THE BONNET

Proceed as follows:

- ☐ hold the bonnet up with one hand and with the other remove rod **C**-fig. 123 from recess **E** and fit it back into its catch **D**-fig. 122;

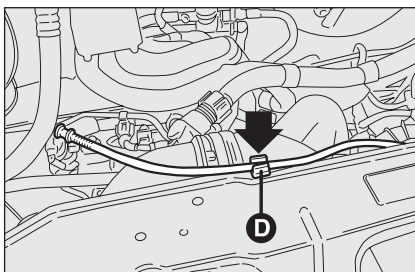


fig. 122

F0N0065m

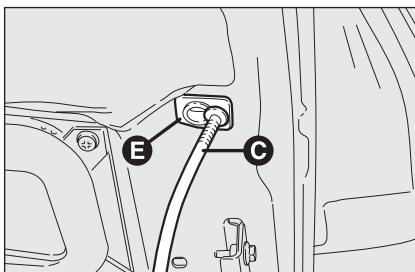


fig. 123

F0N0066m

- ☐ lower the bonnet at approx. 20 centimetres from the engine compartment and then let it drop, ensuring that it is fully closed and not just held in position by the safety catch. If the bonnet does not close properly, do not push it down but open it again and repeat the above procedure.

IMPORTANT Always check that the bonnet is closed properly to avoid its opening while the vehicle is travelling.



WARNING

For safety reasons the bonnet must be closed properly to avoid its opening while the vehicle is travelling. Therefore, always check it is properly closed and the catch engaged. Should you notice that the catch is not perfectly engaged when travelling, stop the vehicle immediately and close the bonnet.



WARNING

If the supporting rod is not positioned correctly the bonnet may fall violently.



WARNING

Carry out operations only when the vehicle is stationary.

ROOF RACK/SKI RACK

To fit roof racks/ski racks, with presetting for versions H1 and H2, use the proper pins set at roof edges **fig. 124**.

Long wheelbase vehicles are fitted with 8 pins; short or medium wheelbase vehicles are fitted with 6 pins; extra-long wheelbase vehicles are fitted with 10 pins.



WARNING

After travelling a few kilometres, check that the coupling fastening screws are tight.



Strictly comply with current law regulations concerning max. overall dimensions.

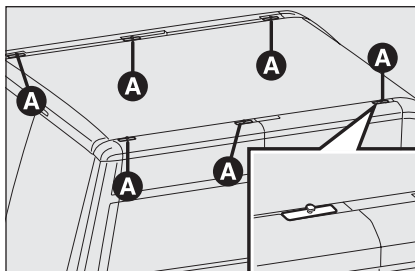


fig. 124

F0N0138m

IMPORTANT Strictly follow the installation instructions contained in the kit. Installation shall be carried out by skilled personnel.



WARNING

Distribute the load evenly and when driving, bear in mind the increased sensitivity of the vehicle to side wind.



Never exceed the permitted weight (see section “Technical specifications”).

HEADLIGHTS

ADJUSTING THE HEADLIGHT BEAM

Proper adjustment of the headlight beams is of vital importance for your safety and comfort and also for the other road users. To ensure you and other drivers have the best visibility conditions when travelling with the headlights on, the headlights must be set properly. Contact Fiat Dealership to have the headlights properly adjusted.

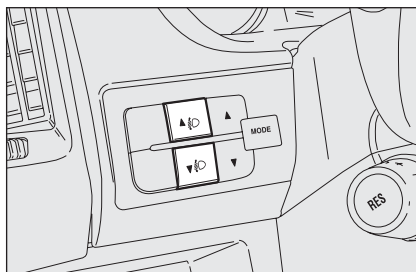




fig. 125

F0N0067m

HEADLIGHT AIMING DEVICE

It works with ignition key at **MAR** and dipped beams on. When the vehicle is loaded, it slopes backwards. This means that the headlight beam rises. In this case, it is necessary to return it to the correct position.

To adjust the headlight slant fig. 125

Press buttons  and  set on the control panel.

The display located on the instrument panel, provides the visual indication of the positions during the adjustment operation.

IMPORTANT Check beam aiming every time the load carried changes.

ADJUSTING THE FRONT FOG LIGHTS (where provided)

Contact Fiat Dealership to have the headlights properly adjusted.

HEADLIGHT ADJUSTMENT ABROAD

The dipped beam headlights are adjusted for circulation in the country in which the vehicle is marketed. In countries with opposite circulation, to avoid glaring oncoming vehicles, it is necessary to cover the areas of the headlight using a special sticker tape provided for the purpose.

ABS SYSTEM

If you have never driven a vehicle with ABS before, you should practice using the system on slippery terrain, obviously with the necessary safety precautions and keeping to the Highway Code of the country you are in. It is also a good idea to read the following information carefully.

The ABS system, integral with the braking system, prevents the wheels from locking when braking, makes the most of road grip and gives the best control when emergency braking under difficult road conditions.

System is completed by EBD (Electronic Braking force Distribution), which distributes the braking action between front and rear wheels.

IMPORTANT To have the maximum efficiency of the braking system, it is necessary a setting period of about 500 km (with new vehicle after replacing brake pads/discs): during this period it is better to avoid sharp, repeated and prolonged brakes.



WARNING

The ABS exploits the tyre-road grip at the best, but it cannot improve it; you should therefore take every care when driving on slippery surfaces without taking unnecessary risks.

ABS SYSTEM INTERVENTION

The driver can tell the ABS system has come into action because the brake pedal pulsates slightly and the system gets noisier: it means that the vehicle speed should be altered to fit the type of road surface.




WARNING

If the ABS system cuts in, it is a sign that the grip between tyre and the road surface has reached the limit: you must slow down to match the speed to the road grip available.



FAILURE INDICATIONS

ABS failure

ABS failure is indicated by the turning on of warning light  on the instrument panel together with the dedicated message on the multifunction display (where provided), (see section “Warning lights and messages”).

In this case the braking system is still efficient, though without the aid of the ABS system. Drive carefully to the closest Fiat Dealership to have the system checked.


EBD failure

EBD failure is indicated by the turning on of warning lights  and  on the instrument panel together with the dedicated message on the multifunction display (where provided), (see section "Warning lights and messages").

In this case with sharp braking the rear wheels might lock too early, with the possibility of skidding. Drive extremely carefully to the nearest Fiat Dealership to have the system checked.




WARNING

If warning light  alone comes on (together with the message on the multifunction display, where provided), stop the vehicle immediately and contact the nearest Fiat Dealership. Fluid leaks from the hydraulic system, in fact, can compromise the braking system, both traditional systems and systems with ABS.

BRAKE ASSIST (emergency braking assistance integral with ESP) (where provided)

The system, which cannot be cut out, recognizes emergency braking (on the ground of the brake pedal operation speed) and considerably increases the pressure in the brake circuit.

Brake Assist is deactivated on the versions equipped with ESP, in the event of ESP system failure (indicated by warning light  switching on together with the message on the multifunction display, where provided).



WARNING

When the ABS cuts in, and you feel the brake pedal pulsating, do not remove your foot, but keep it pressed; in doing so you will stop in the shortest amount of space possible under the current road conditions.


ESP SYSTEM (Electronic Stability Program) (where provided)

The ESP system is an electronic system controlling the vehicle stability in the event of tyre grip loss.

The ESP system is therefore particularly useful when grip conditions of the road surfaces changes.

In addition to the ESP system, ASR system and Hill Holder, (where provided) also the MSR system (adjusting the engine braking torque) and the HBA system (improving the braking force during emergency braking) are provided.


ESP SYSTEM INTERVENTION

It is signalled by the blinking of the warning light  on the instrument panel, to inform the driver that the vehicle is in critical stability and grip conditions.

ESP SYSTEM ACTIVATION

The ESP system is automatically activated when the vehicle is started and cannot be de-activated.

FAILURE INDICATIONS

In the event of failure, the ESP system is automatically disconnected, the warning light , comes on with fixed light on the instrument panel, together with the message on the multifunction display (where provided) (see section “Warning lights and messages”) and with the button led ASR. In this case contact a Fiat Dealership as soon as possible.



WARNING

Performance of the ESP system, in terms of active safety, should not induce the driver to take pointless and unnecessary risks. The style of driving must in any case always be adapted to the conditions of the road surface, visibility and traffic. Road safety is always the driver's responsibility.

HILL HOLDER SYSTEM

This system is an integral part of the ESP system and it is provided to facilitate starting on slopes.

It will activate automatically with the following conditions:


- ☐ uphill: vehicle at a standstill on a road with a gradient higher than 5%, engine running, clutch and brake pedal pressed, gearbox to neutral or engaged gear other than reverse.
- ☐ downhill: vehicle at a standstill on a road with a gradient higher than 5%, engine running, clutch and brake pedal pressed and reverse gear engaged.

At pickup the ESP system control unit will keep brake force on wheels until reaching the torque suitable for starting, or in any case for max. 2 seconds in order to pass easily from the brake pedal to the accelerator pedal.

After two seconds without starting, the system will deactivate automatically by releasing gradually the brake force.

At releasing, the typical brake disengagement noise indicating that the vehicle is going to move will be heard.

Failure indications

System failure is indicated by the turning on of warning light  (see section “Warning lights and messages”).

IMPORTANT The Hill Holder system is not a parking brake therefore, never leave the vehicle without having engaged the handbrake, turned the engine off and engaged the first speed.



WARNING

For correct operation of the ESP and ASR systems, the tyres must absolutely be of the same brand and type on all wheels, in perfect conditions and, above all, of type, brand and size specified.

ASR SYSTEM (Antislip Regulator)

The ASR function controls vehicle drive and cuts in automatically every time one or both driving wheels slip.

According to slipping conditions, two different control systems are activated:

- ☐ if slipping involves both driving wheels, the ASR function intervenes reducing the power transmitted by the engine;
- ☐ if the slipping involves only one driving wheel, the ASR system cuts in automatically braking the wheel that is slipping.

The action of the ASR is particularly helpful in the following circumstances:

- ☐ slipping of the inner wheel due to the effect of dynamic load changes or excessive acceleration;
- ☐ too much power transmitted to the wheels also in relation to the conditions of the road surface;
- ☐ acceleration on slippery, snowy or frozen surfaces;
- ☐ in the case of loss of grip on a wet surface (aquaplaning).



WARNING

For correct operation of the ESP and ASR systems, the tyres must absolutely be of the same brand and type on all wheels, in perfect conditions and, above all, of type, brand and size specified.

MSR system (engine braking torque control)

It is an integral part of the ASR system that in case of sudden gear shifting, cuts in providing torque to the engine thus preventing excessive driving wheel drive that, specially in poor grip conditions, can lead to loss of stability.

Switching the system on/off fig. 126

The ASR system switches on automatically each time the engine is started.

When travelling, the ASR can be switched off and on again by pressing switch **A** located on the dashboard **fig. 126**.

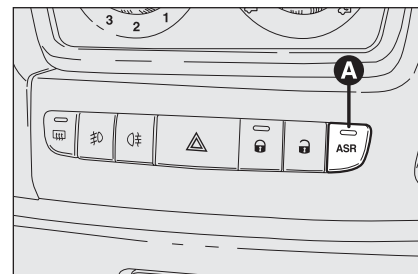



fig. 126

F0N0077m

When the ASR is switched off this is shown by the lighting up of the led on the switch and by relevant message on the multifunction display, where provided.

Versions equipped with ASR system only, at deactivation (ASR OFF) the warning light  will always stay on.

If the ASR is switched off when travelling, it will turn on again automatically the next time the engine is started.

When travelling on snowy roads with snow chains, it may be helpful to turn the ASR off: in fact, in these conditions, slipping of the driving wheels when moving off makes it possible to obtain better drive.




WARNING

The performance of the system, in terms of active safety, should not induce the driver to take pointless and unnecessary risks. The style of driving must in any case always be adapted to the conditions of the road surface, visibility and traffic. Road safety is always the driver's responsibility.


For correct operation of the ASR system, the tyres must absolutely be of the same brand and type on all wheels, in perfect conditions and, above all, of type, brand and size specified.

FAILURE INDICATIONS

In the event of failure, the ASR system is automatically disconnected, the warning light , comes on with fixed light on the instrument panel, together with the message on the multifunction display (where provided) (see section "Warning lights and messages") and with the button led ASR. In this case contact a Fiat Dealership as soon as possible.

EOBD SYSTEM

The EOBD system (European On Board Diagnosis) allows continuous diagnosis of the components of the vehicle correlated with emissions.

It also alerts the driver, by turning on the warning light  on the instrument panel (together with relevant message on the multifunction display, where provided) (see section "Warning lights and messages"), when these conditions are no longer in peak conditions.



The objective is:

- ☐ to keep the system efficiency under control;
- ☐ warn when a fault causes emissions levels to increase;
- ☐ warn of the need to replace deteriorated components.

The system also has a diagnostic connector that can be interfaced with appropriate tools, which makes it possible to read the error codes stored in the control unit, together with a series of specific parameters for engine operation and diagnosis. This check can also be carried out by the traffic police.

IMPORTANT After eliminating the inconvenience, to check the system completely, Fiat Dealerships are obliged to run a bench test and, if necessary, road tests which may also call for a long journey.



If turning the ignition key to MAR, the warning light  does not turn on or if, while travelling it turns on glowing steadily or flashing (together with the message on the multifunction display, where provided), contact Fiat Dealership as soon as possible. Warning light  operation can be checked by means of special equipment by traffic agents. Always comply with the traffic regulations in force in the country where you are travelling.

PARKING SENSORS (where provided)

Parking sensors are located in the rear bumper **fig. 127** and their function is to inform the driver, through an intermittent buzzer, about the presence of obstacles behind the vehicle.

ACTIVATION

The sensors are automatically activated when the reverse gear is engaged.

As the distance from the obstacle behind the vehicle decreases, the acoustic alarm becomes more frequent.

BUZZER WARNINGS

When the reverse gear is engaged an intermittent acoustic signal is automatically activated.

The acoustic signal:

- ☐ becomes louder as the reduction of distance between the vehicle and the obstacle decreases;
- ☐ becomes continuous when the distance between the vehicle and the obstacle is less than 30 cm and stops immediately if the distance raises;

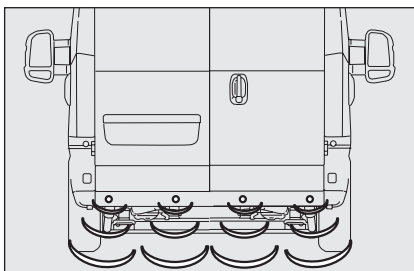


fig. 127

- ☐ is constant if the distance is unvaried; if this situation concerns the side sensors, the buzzer will stop after about 3 seconds to avoid, for example, warning indications in the event of manoeuvres along walls.

Detection distances

Central action radius 140 cm \pm 10 cm

Side action radius 60 cm \pm 20 cm

If several obstacles are detected, the control unit indicates the nearest one.

FAILURE INDICATIONS

Parking sensor failures, if any, will be indicated when engaging reverse by the turning on of the instrument panel warning light **P** together with the message on the multifunction display, where provided (see section “Warning lights and messages”).

OPERATION WITH TRAILER

Parking sensor operation is deactivated automatically when the trailer electric cable plug is fitted into the vehicle tow hook socket.

Sensors are reactivated when removing the trailer cable plug.

IMPORTANT If you wish to leave the tow-hook fitted permanently without towing a trailer, it is important to ask your Fiat Dealership to update the System because the tow hook could be detected as an obstacle by the central sensors.

In washing stations, clean sensors quickly keeping the vapour jet/high pressure washing nozzles at 10 cm at least from the sensors.



For proper operation, the parking sensors shall always be clean from mud, dirt, snow or ice. When cleaning the sensors, take the utmost care to prevent their damaging; do not use therefore dry or rough clothes. Sensors shall be washed with clean water and vehicle detergent, if required.



WARNING

Parking manoeuvres however are always under the driver's responsibility that shall always check the absence of people (specially children) or animals in the manoeuvre space. This system is just a help for the driver but she/he shall never reduce attention during dangerous manoeuvres even if performed at low speed.

GENERAL WARNINGS

- ☐ When parking, take the utmost care to obstacles that may be set above or under the sensors.
- ☐ Objects set close to the vehicle, under certain circumstances are not detected and could therefore cause damages to the vehicle or be damaged.

Below are listed some conditions that could affect the parking system performance:

- ☐ Reduced sensor sensitivity or reduced parking system performance could be due to the presence on the sensor surface of: ice, snow, mud, multiple painting.

- ☐ The sensor detects a non-existent object ("echo disturbances") caused by disturbances of mechanical nature, e.g.: vehicle washing, rain (extreme wind conditions), hail.
- ☐ Indications sent by the sensors can also be altered by ultrasound systems (e.g.: truck pneumatic brakes or pneumatic hammers) set nearby the vehicle.
- ☐ Parking system performance could also be affected by sensor position. For instance, when trimming is changed (due to wear of shock absorbers, suspensions) or when changing tyres, loading excessively the vehicle, carrying out specific tuning for lowering the vehicle.
- ☐ Obstacle detection at the top of the vehicle (specially for vans or chassis cabs) could not be guaranteed since the system detects obstacles that can strike the bottom of the vehicle.

SOUND SYSTEM (where provided)

For sound system operation refer to the Supplement attached to the Owner Handbook.

SOUND SYSTEM PRESETTING (where provided)

The system consists of:

- ☐ sound system power wires
- ☐ front speaker connecting wires
- ☐ aerial power wire
- ☐ 2 tweeters **A** on front posts (30W max power each);
- ☐ 2 mid-woofers **B** on front doors (165 mm diameter, 40W max power each);
- ☐ radio aerial wire.

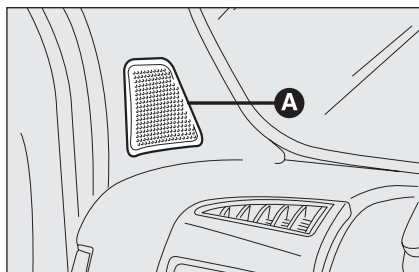


fig. 128

F0N0157m

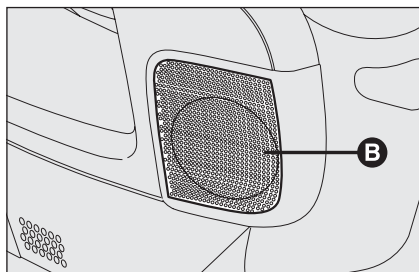


fig. 129

F0N0158m

The sound system shall be installed in the proper space occupied by the central oddment compartment, here you will find the preset cables.



WARNING

For connection to existing vehicle presetting system, contact Fiat Dealership to prevent any trouble that could impair vehicle safety.

ACCESSORIES PURCHASED BY THE OWNER

If after buying the vehicle, you decide to install electrical accessories that require a permanent electric supply (alarm, satellite antitheft system, etc.) or accessories that in any case burden the electric supply, contact Fiat Dealership, whose qualified personnel, besides suggesting the most suitable devices belonging to Lineaccessori Fiat, will also evaluate the overall electric absorption, checking whether the vehicle electric system is able to withstand the load required, or whether it needs to be integrated with a more powerful battery.



WARNING

Take care when fitting additional spoilers, alloy rims and non-standard wheel caps: they might reduce ventilation of the brakes, thus their efficiency, during abrupt and repeated braking, or long downhill slopes. Make sure that nothing (mats, etc.) gets in the way of the pedals when they are pushed down.

INSTALLATION OF ELECTRIC/ELECTRONIC DEVICES

Electric/electronic devices installed after buying the vehicle or in aftermarket shall bear the and marking:



Fiat Auto S.p.A. authorizes the installation of transceivers provided that installation is carried out at a specialized shop, workmanlike performed and in compliance with manufacturer's specifications.

IMPORTANT Installation of devices resulting in modifications of vehicle characteristics may cause driving license seizing by traffic agents and also the lapse of the warranty as concerns defects due to the abovementioned modification or traceable back to it directly or indirectly.

Fiat Auto S.p.A. declines all responsibility for damages caused by the installation of non-genuine accessories or not recommended by Fiat Auto S.p.A. and installed not in compliance with the specified requirements.

RADIO TRANSMITTERS AND CELLULAR TELEPHONES

Radio transceiver equipment (e.g.: e-tacs mobile phones, HAM radio systems and the like) shall not be used inside the vehicle unless a separate aerial is mounted on the roof.

IMPORTANT The use of similar devices inside the passenger compartment (without separated aerial) produces radio-frequency electromagnetic fields which, amplified by the resonance effects inside the passenger compartment, may cause electrical systems equipping the vehicle to malfunction. This could compromise safety in addition to constituting a potential hazard for the passengers.

In addition, transmission and reception of these devices may be affected by the shielding effect of the vehicle body.

As concerns EC-approved mobile phones (GSM, GPRS, UMTS), strictly comply with the instructions for use provided by the mobile phone's manufacturer.

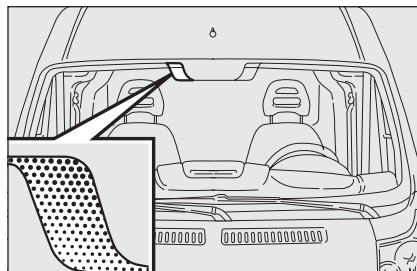


fig. 129a - Left drive version

FON0245m

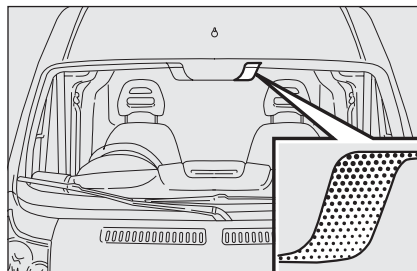


fig. 129b - Right side version

FON0246m

PREARRANGEMENT OF TELEPASS ASSEMBLY ON REFLECTING WINDSHIELD (where provided)

If the vehicle has a reflecting windshield you have to install the telepass in the area shown on **fig. 129a-129b**, in order to assure proper operation.

AT THE FILLING STATION

OPERATION AT LOW TEMPERATURES

If the outside temperature is very low, the diesel thickens due to the formation of paraffin and could cause the malfunctioning of the fuel system.

In order to avoid these problems, different types of diesel are distributed according to the season: summer type, winter type and arctic type (cold, mountain areas). If refuelling with diesel fuel not suitable for the current temperature, mix diesel fuel with TUTELA DIESEL ART additive in the proportions stated on the can, putting first the antifreeze in the tank and then the diesel fuel.

If driving or parking the vehicle for a long period in cold areas/mountains, refuel with the diesel fuel available at local filling stations.

In this situation you are also recommended to have in the tank an amount of fuel 50% higher than usable capacity.



The vehicle must only be filled with diesel fuel for motor vehicles, in compliance with European Standard EN590. The use of other products or mixtures may irreparably damage the engine with invalidation of the warranty due to the damage caused. In the event of accidentally filling with another type of fuel, do not start the engine and empty the tank. If the engine has been run even for only a very short time, in addition to the tank, it is also necessary to drain out the whole fuel circuit.

REFUELLING

To guarantee full tank filling, carry out two refuelling operations after the first click of the fuel delivery gun. Avoid further topping up operations that could cause damages to the fuel system.

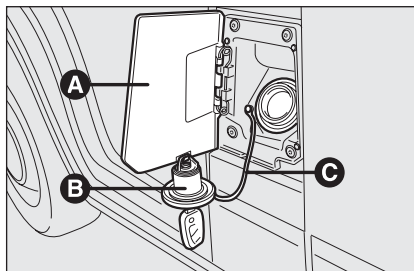


fig. 130

F0N0068m

FUEL FILLER CAP fig. 130

To carry out fuelling, open lid **A** and unscrew cap **B** using the ignition key; the cap is fitted with an antiloss device **C** which fastens it to the lid so it cannot be mislaid.

The sealing of the tank may cause light pressurising in the tank. A little breathing off, while slackening the cap, is absolutely normal.

When refuelling, position the cap on the device inside the lid as shown in **fig. 130**.



WARNING

Do not put naked flames or lighted cigarettes near the fuel filler hole as there is a danger of fire. Do not bend too close to the hole either so as not to breathe in harmful vapours.

PROTECTING THE ENVIRONMENT

The devices for curtailing diesel fuel engine emissions are the following:

- ☐ oxidising catalytic converter;
- ☐ exhaust gas recirculation system (E.G.R.);
- ☐ diesel particulate filter (DPF).



WARNING

During normal service the diesel particulate filter (DPF) reaches high temperatures. Do not therefore park the car over inflammable materials (grass, dry leaves, pine needles, etc.): fire hazard.



WARNING

During normal service the catalyst reaches high temperatures. Do not therefore park the car over inflammable materials (grass, dry leaves, pine needles, etc.): fire hazard.

DIESEL PARTICULATE FILTER (DPF)

The Diesel Particulate Filter is a mechanical filter, integral with the exhaust system, that physically traps particulates present in the exhaust gases of Diesel engines.

The diesel particulate filter has been adopted to eliminate almost totally particulates in compliance with current / future law regulations.

During normal use of the car, the engine control unit records a set of data (e.g.: travel time, type of route, temperatures, etc.) and it will then calculate how much particulates has been trapped by the filter.

Since this filter physically traps particulates, it shall be cleaned (reclaimed) at regular intervals by burning carbon particles.

Reclaiming procedure is controlled automatically by the engine control unit according to the filter conditions and the conditions of use of the car.

During reclaiming the following phenomena could take place: idling slight increase, fan activation, slight smoke increase, high exhaust temperatures. These situations shall not be considered as faults and they do not affect car performance and environment.

If the dedicated message is displayed, refer to section "Warning lights and messages".

SAFETY DEVICES

SEAT BELTS	113
S.B.R. SYSTEM	114
PRETENSIONERS.....	115
CARRYING CHILDREN SAFELY	119
PRESETTING FOR MOUNTING THE “UNIVERSAL ISOFIX” CHILD RESTRAINT SYSTEM.....	124
FRONT AIR BAGS.....	126
SIDE AIR BAGS	128

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

SEAT BELTS

USING THE SEAT BELTS fig. 1

The belt should be worn keeping the chest straight and rested against the seat back.

To fasten the seat belts, take hold of the tongue **A** and insert it into the buckle **B**, until hearing the locking click.

At removal, if it jams, let it rewind for a short stretch, then pull it out again without jerking.

To unfasten the seat belts, press button **C**. Guide the seat belt with your hand while it is rewinding, to prevent it from twisting.

Through the reel, the belt automatically adapts to the body of the passenger wearing it, allowing freedom of movement.

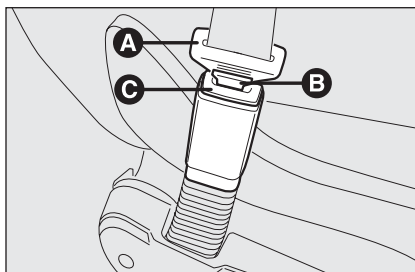


fig. 1

F0N0069m

When the vehicle is parked on a steep slope the reel mechanism may block; this is normal. The reel mechanism also prevents the webbing coming out when it is jerked or if the vehicle brakes sharply, is in a collision or when cornering at high speed.



WARNING

Never press button C-fig. 1 when travelling.

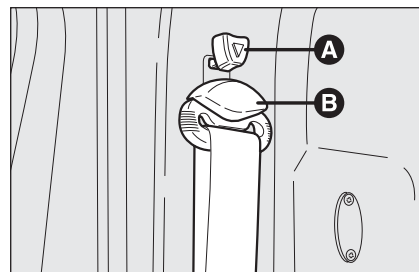


fig. 2

F0N0070m

ADJUSTING THE SEAT BELT HEIGHT fig. 2



WARNING

Only adjust seat belt height when the vehicle is stationary.

To adjust, press button **A-fig. 2** and raise or lower the grip **B-fig. 2**.

Always adjust the height of the seat belt to fit the person wearing it. This could greatly reduce the risk of injury in the case of collision.

The belt is adjusted properly when the webbing passes approximately halfway between the edge of the shoulder and the neck.



WARNING

After you have made the adjustment, always make sure that the loop is attached firmly in one of the preset positions. To do this, with the button released, exert a further pressure to allow the anchoring device to catch if release did not take place at one of the preset positions.




fig. 3

F0N0156m

Front central bench seat, seat belt with retractor

The front double bench seat is fitted with integral seat belt (reel on the seat) with three anchor points for the centre seat.

S.B.R. SYSTEM

The vehicle is fitted with the S.B.R. system (Seat Belt Reminder), consisting of a buzzer which, together with the turning on flashing of warning light  on the instrument panel, warns the driver to fasten the seat belt.

The buzzer can be deactivated (until the next engine stop) as follows:

- ☐ fasten the driver's seat belt;
- ☐ turn the ignition key to **MAR**;
- ☐ wait for over 20 seconds and then release one of the seat belts.

For permanent deactivation, contact Fiat Dealership.

With digital display, the S.B.R. system can only be reset at Fiat Dealership.

With multifunction display, the S.B.R. system can also be reset through the set-up menu.

PRETENSIONERS

To increase the efficiency of the seat belts, the vehicle is fitted with pretensioners. These devices, in the event of a violent front crash, rewind the seat belts a few centimetres. In this way they ensure that the seat belt adheres perfectly to the wearer before the restraining action begins.

Pretensioner activation is indicated by buckle withdrawal downwards; the seat belt cannot be drawn back up even when guiding it manually.

IMPORTANT To obtain the highest degree of protection from the action of the pretensioning device, wear the seat belt keeping it firmly close to the chest and pelvis.

A small amount of smoke may be produced. This smoke is in no way toxic and presents no fire hazard.

The pretensioner does not require any maintenance or greasing.

Anything that modifies its original conditions invalidates its efficiency.

If due to unusual natural events (floods, seas storm, etc.) the device has been affected by water and mud, it must necessarily be replaced.



WARNING

The pretensioner can only be used once. After a collision that has triggered it, have it replaced at a Fiat Dealership. Pretensioner validity is indicated on the label in the glove compartment: the pretensioners should be replaced at a Fiat Dealership as this date approaches.



Operations which lead to knocks, vibrations or localised heating (over 100°C for a maximum of 6 hours) in the area around the pretensioners may cause damage or trigger them. These devices are not affected by vibrations caused by irregularities of the road surface or low obstacles such as kerbs, etc. Contact a Fiat Dealership for any assistance.

LOAD LIMITERS

To increase passenger's safety, the front seat belt reels contain a load limiter which allows controlled sag in such a way as to dose the force acting on the chest and shoulders during the belt restraining action in case of front crash.

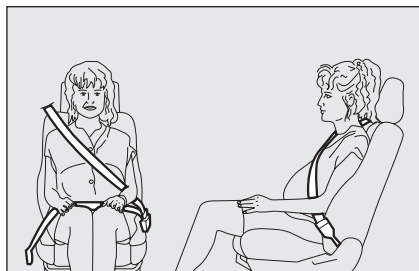


fig. 4

GENERAL INSTRUCTIONS FOR USING THE SEAT BELTS

The driver must comply with (and have the vehicle occupants follow) all the local legal regulations concerning the use of seat belts. Always fasten the seat belts before starting.

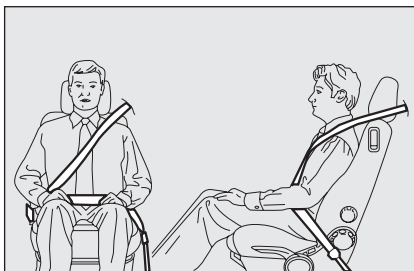


fig. 5

Seat belts are also to be worn by expectant mothers: the risk of injury in the case of accident is greatly reduced for them and the unborn child if they are wearing a seat belt.



fig. 6

Of course they must position the lower part of the belt very low down so that it passes under the abdomen, see **fig. 4**.



WARNING

The belt should not be twisted. The upper part should pass over the shoulder and cross the chest diagonally. The lower part should adhere to the pelvis and not the abdomen of the passenger, see fig. 5. Do not use any objects (pegs, stoppers, etc.) to keep the belts away from the body.

**WARNING**

For maximum safety, keep the back of your seat upright, lean back into it and make sure the seat belt fits closely across your chest and hips. Make sure that the seat belts of the front and rear passengers are fastened at all times! You increase the risk of serious injury or death in a collision if you travel with the belts unfastened.

**WARNING**

Under no circumstances should the components of the seat belts and pretensioners be tampered with or removed. Any operation should be carried out by qualified and authorised personnel. Always contact a Fiat Dealership.

**WARNING**

If the belt has been subjected to heavy stress, for example after an accident, it should be changed completely together with the anchors, anchor fastening screws and the pretensioners. In fact, even if the belt has no visible defects, it could have lost its resilience.

**WARNING**

Never travel with a child sitting on the passenger's lap with a single belt to protect them both. Do not fasten other objects to the body.

HOW TO KEEP THE SEAT BELTS ALWAYS IN EFFICIENT CONDITIONS

Observe the following:

- ☐ always use the belt with the tap taut and never twisted; make sure that it is free to run without impediments;
- ☐ after a serious accident, replace the belt being worn at that time, even if it does not appear damaged. Always replace the seat belts if pretensioners have been activated;
- ☐ to clean the belts, wash by hand with neutral soap, rinse and leave to dry in the shade. Never use strong detergents, bleach or dyes or other chemical substance that might weaken the fibres;
- ☐ prevent the reels from getting wet: their correct operation is only guaranteed if water does not get inside;
- ☐ replace the seat belt when showing significant wear or cut signs.

CARRYING CHILDREN SAFELY

For optimal protection in the event of a crash, all passengers must be seated and wearing adequate restraint systems.

This is even more important for children.

This prescription is compulsory in all EC countries according to EC Directive 2003/20/EC.

Compared with adults, their head is proportionally larger and heavier than the rest of the body, while the muscles and bone structure are not completely developed. Therefore, correct restraint systems are necessary, other than adult seat belts. The results of research on the best child restraint systems are contained in the European Standard EEC-R44. This Standard enforces the use of restraint systems classified in five groups:

Group 0	0-10 kg in weight
Group 0+	0-13 kg in weight
Group 1	9-18 kg in weight
Group 2	15-25 kg in weight
Group 3	22-36 kg in weight

As it may be noted, the groups overlap partly and in fact, in commerce it is possible to find devices that cover more than one weight group.

All restraint devices must bear the certification data, together with the control brand, on a solidly fixed label which must absolutely never be removed.

Over 1.50 m in height, from the point of view of restraint systems, children are considered as adults and wear the seat belts normally.




WARNING

With front passenger's air bag active do not place cradle child's seats facing backwards on the front passenger seat since the air bag activation could cause serious injuries, even mortal regardless of the seriousness of the crash. You are advised to carry children always on the rear seat, as this is the most protected position in the case of a crash.



WARNING



SERIOUS DANGER Should it be absolutely necessary to carry a child on the front passenger's seat with the cradle seat facing backwards, passenger's air bags (front and side bags, where provided), shall be deactivated through the set-up menu. Deactivation shall be checked through the instrument panel warning light . The front passenger's seat shall also be adjusted in the most backward position to prevent any contact between child's seat and dashboard.

0-13 kg

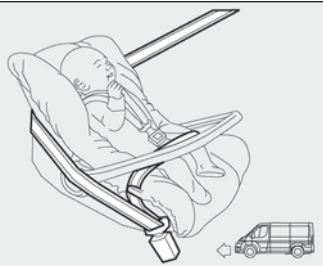


fig. 7

F0N0123m

GROUP 0 and 0+

Babies up to 13 kg must be carried facing backwards on a cradle seat, which, supporting the head, does not induce stress on the neck in the event of sharp deceleration.

The cradle is restrained by the vehicle seat belts **fig. 7** and in turn it must restrain the child with its own belts.

9-18 kg



fig. 8

F0N0124m

GROUP I

Starting from 9 kg to 18 kg in weight, children may be carried facing forwards, with seat fitted with front cushion, through which the vehicle seat belt restrains both child and seat **fig. 8**.



WARNING

The figure is only an example for mounting. Attain to the instructions for fastening which must be enclosed with the specific child restraining system you are using.



WARNING

Seats exist which are suitable for covering weight groups 0 and I with a rear connection to the vehicle belts and their own belts to restrain the child. Due to their size, they can be dangerous if installed incorrectly fastened to the vehicle belts with a cushion. Carefully follow the instructions for installation provided with the seat.

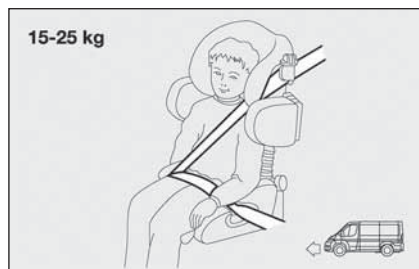


fig. 9

F0N0125m

GROUP 2

Starting from 15 kg to 25 kg in weight, children may be restrained directly by the vehicle belts **fig. 9**. The only function of the seat is to position the child correctly in relation to the belts, so that the diagonal part adheres to the chest and not to the neck and that the horizontal part clings to the child's pelvis and not the abdomen.



WARNING

The figure is only an example for mounting. Attain to the instructions for fastening which must be enclosed with the specific child restraining system you are using.

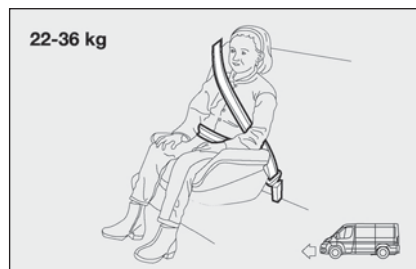


fig. 10

F0N0126m

GROUP 3

For children from 22 kg to 36 kg the size of the child's chest no longer requires a support to space the child's back from the seat back.

Fig. 10 shows proper child seat positioning on the rear seat.

Children taller than 1.50 m can wear seat belts like adults.



WARNING

The figure is only an example for mounting. Attain to the instructions for fastening which must be enclosed with the specific child restraining system you are using.

PASSENGER SEAT COMPLIANCE WITH REGULATIONS ON CHILD'S SEAT USE

Your vehicle complies with the new European Directive 2000/3/EC regulating child's seat assembling on the different vehicle seats according to the following tables:

Group	Range of weight	VAN, COMBI and PANORAMA versions			
		CAB	1 ST AND 2 ND ROW OF REAR SEATS		
		Single or two-seater seat (1 or 2 passengers)	Left side rear passenger	Right side rear passenger	Central passenger
Group 0, 0+	up to 13 kg	U	U	U	U
Group 1	9-18 kg	U	U	U	U
Group 2	15-25 kg	U	U	U	U
Group 3	22-36 kg	U	U	U	U

Key:

U = suitable for child restraint systems of the "Universal" category, according to European Standard EEC-R44 for the specified "Groups".

To sum up the safety precautions to follow when transporting children:

- 1) The recommended position for installing child's seat is on the rear seat, as it is the most protected in the case of a crash.
- 2) If the passenger's air bag is deactivated always check the amber warning light on the cluster to make sure that it has actually been deactivated.
- 3) Attain to the instructions for fastening the specific child restraint system which you are using. These instructions must be provided by the manufacturer. Keep the child restraint system installation instructions with the vehicle documents and with this Handbook. Never use a child restraint system without installation instructions.
- 4) Always check the seat belt is well fastened by pulling the webbing.

- 5) Only one child is to be strapped to each retaining system.
- 6) Always check the seat belts do not fit around the child's throat.
- 7) While travelling, do not let the child sit incorrectly or release the belts.
- 8) Passengers should never carry children on their laps. No-one, however strong they are, can hold a child in the event of a crash.
- 9) In case of an accident, replace the child's seat with a new one.



WARNING

With front passenger's air bag active do not place cradle child's seats facing backwards on the front passenger seat since the air bag activation could cause serious injuries, even mortal regardless of the seriousness of the crash. You are advised to carry children always on the rear seat, as this is the most protected position in the case of a crash.

PRESETTING FOR MOUNTING THE “UNIVERSAL ISOFIX” CHILD RESTRAINT SYSTEM

This vehicle is preset for mounting the Universal Isofix child restraint system, a new European standardised system for carrying children safely.

Fig. 11 shows a child restraint system by way of example.

Due to its different anchoring system, the Universal Isofix child's seat shall be anchored to the proper lower metal rings **A-fig. 12**, set between rear seat back and cushion. The upper belt (provided with the child's seat) shall be then secured to ring **B-fig. 13** located in the rear part of the seat.

It is possible to mount at the same time both the traditional restraint system and the “Universal Isofix” one.

Remember that in case of Universal Isofix child's seat, you can only use all those seats approved with the marking ECE R44/03 “Universal Isofix”.

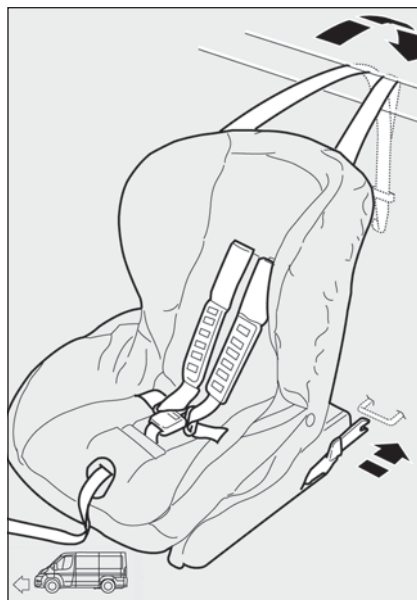


fig. 11

F0N0236m

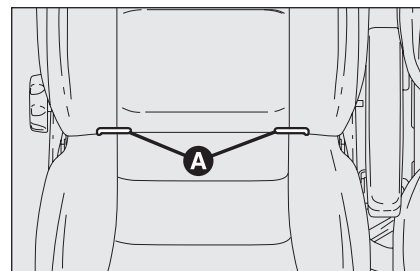


fig. 12

F0N0234m

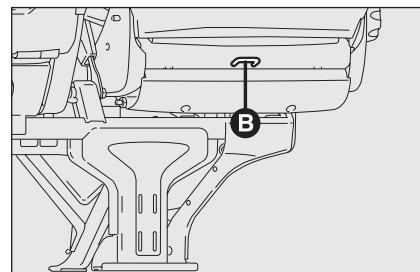


fig. 13

F0N0235m

At Lineaccessori Fiat is available the “Universal Isofix” “Duo Plus” child's seat.

For any further installation/use detail, refer to the “Instructions Manual” that must be provided by the child restraint system Manufacturer.



WARNING

Mount the child restraint system only with the vehicle stationary. The Isofix child restraint system is properly anchored to the mounting brackets when clicks are heard. In any case, keep to the installation instructions that must be provided by the child restraint system Manufacturer.

PASSENGER SEAT COMPLIANCE WITH REGULATIONS ON UNIVERSAL ISOFIX CHILD'S SEAT USE

The table below, according to ECE 16 European Directive, shows the different installation possibilities of Universal Isofix restraint systems on seats fitted with Isofix fasteners.

Range of weight orientation	Child's seat class	Isofix side rear	Vehicle Isofix positions	
			side rear PANORAMA	1 st row COMBI
Portable cradle	Facing backwards	F	IUF	IUF
	Facing backwards	G	IUF	IUF
Group 0 to 10 kg	Facing backwards	E	IUF	IUF
	Facing backwards	E	IUF	IUF
Group 0+ to 13 kg	Facing backwards	D	IUF	IUF
	Facing backwards	C	IUF	IUF(*)
	Facing backwards	D	IUF	IUF
Group I - 9 to 18 kg	Facing forwards	C	IUF(*)	IUF(*)
	Facing forwards	BI	IUF	IUF
	Facing forwards	A	IUF	IUF
	Facing forwards	A	IUF	IUF

(*) No with front two-seat bench

IUF: suitable for Isofix child restraint systems to be set facing forwards, universal class (fitted with third upper fastener), approved for the weight group.

FRONT AIR BAGS

The vehicle is fitted with front air bags for driver and passenger.

The driver / passenger front air bags have been designed to protect the occupants in the event of head-on crashes of medium-high severity, by placing the cushion between the occupant and the steering wheel or dashboard.

Front air bags are designed to protect vehicle's occupants in front crashes and therefore non-activation in other types of collisions (side collisions, rear shunts, roll-overs, etc.) is not a system malfunction.

In case of front crash, an electronic control unit, when required, triggers the inflation of the cushion. The cushion immediately inflates, placing itself as a protection between the body of the front occupants and the structure that could cause injuries. Immediately after, the cushion deflates.

The driver / passenger front air bags are not a replacement of but complementary to the use of belts, which should always be worn, as specified by law in Europe and most non European countries.

At their maximum inflation, the front air bags volume fills most of the space between driver and steering wheel and between dashboard and passenger.

In case of crash, a person not wearing the seat belt moves forward and may come into contact with the cushion while it is still inflating. Under this circumstance the protection offered by the air bag is reduced.

Front air bags may not be activated in the following situations:

- ☐ in collisions against highly deformable objects not affecting the vehicle front surface (e.g. bumper collision against guard rail, heaps of gravel, etc.);
- ☐ in case of wedging under other vehicles or protective barriers (for example under a truck or guard rail), the air bag is not triggered as it offers no additional protection compared with the seat belts, consequently it would be pointless. Therefore, failure to come into action in the above circumstance does not mean that the system is not working properly.



WARNING

Do not apply stickers or other objects to the steering wheel or to the air bag cover on the passenger's side or on the side roof lining. Never put objects (e.g. mobile phones) on the dashboard on passenger side since they could interfere with proper air bag inflation and also cause serious injury.

In minor crashes (for which the restraining action of the seat belts is sufficient), the air bags are not deployed. Also in this case it is of vital importance to wear the seat belts since in case of side crash they guarantee proper positioning of the occupant and prevent the occupants to be pitched out of the vehicle in case of violent crashes.

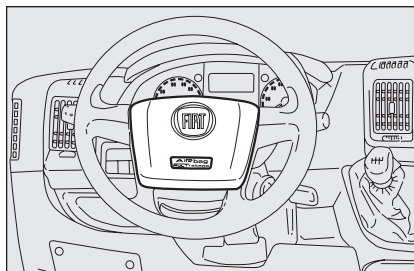


fig. 14

DRIVER'S FRONT AIR BAG fig. 14

It consists of an instant-inflating cushion contained in a special recess in the centre of the steering wheel.

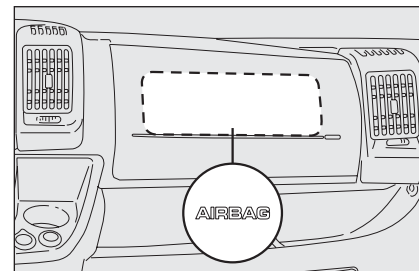


fig. 15

PASSENGER'S FRONT AIR BAG (where provided) fig. 15

It consists of an instant-inflating cushion contained into a special recess in the dashboard, this cushion has a volume bigger than that of the driver.




WARNING



SERIOUS DANGER: With passenger's air bag active (ON), never place child's seats with the cradle facing backwards since the air bag activation could cause to the child serious injuries, even mortal. In the case of need, always deactivate the passenger's air bag when a child's seat is placed on the front seat. The front passenger's seat shall be adjusted in the most backward position to prevent any contact between child's seat and dashboard. Even if not compulsory by law, you are recommended to reactivate the air bag immediately as soon as child transport is no longer necessary.

MANUAL DEACTIVATION OF PASSENGER'S FRONT AIR BAG AND SIDE BAG (where provided)

Should it be absolutely necessary to carry a child on the front seat, the passenger's front air bag and the side bag (where provided) can be deactivated.

The instrument panel warning light  will stay on glowing steadily until reactivating the passenger's front air bag and the Side Bag (where provided).



WARNING

To deactivate the passenger's front air bag and the side bag (where provided), refer to paragraphs "Digital display" and "Multifunction display" in section "Dashboard and controls".

SIDE AIR BAGS

The vehicle is fitted with front side bags for driver and passenger (where provided) for protecting the chest and window bags (where provided) for protecting front passengers' head.

Side bags (where provided) protect vehicle occupants from side crashes of medium-high severity, by placing the cushion between the occupant and the internal parts of the side structure of the vehicle.

Non-activation of side bags in other types of collisions (front collisions, rear shunts, roll-overs, etc...) is not a system malfunction.

In case of side crash, an electronic control unit, when required triggers the inflation of the cushion. The cushion immediately inflates, placing itself as a protection, between the occupant's body and the structure that could cause injuries. Immediately after, the cushion deflates.

Side bags (where provided) are not a replacement of but complementary to the belts, which you are recommended to always wear, as specified by law in Europe and most non-European countries.

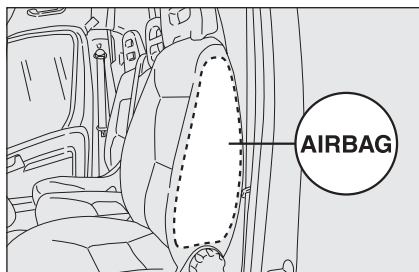


fig. 16

F0N0140m

FRONT SIDE BAGS - CHEST PROTECTION

fig. 16 (where provided)

Front side bags are housed in the seat back rests, they consist of an instant inflation cushion designed to increase protection of the occupants' chest in the event of a side crash of medium-high severity.

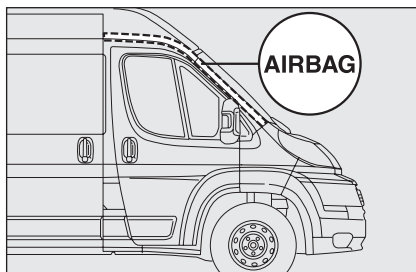


fig. 17

F0N0133m

SIDE WINDOW BAGS - HEAD PROTECTION fig. 17 (where provided)

They consist of two "curtain" cushions, one on the right and the other on the left side of the vehicle, located behind the side coverings of the roof and covered by proper finishing.

Window bags have been designed for protecting the head of front occupants in the event of side crash, thanks to the wide cushion inflation surface.

IMPORTANT In the event of side crash, you can obtain the best protection by the system keeping a correct position on the seat, allowing thus a correct window bag unfolding.

IMPORTANT The front air bags and/or side bags may be deployed if the vehicle is subject to heavy knocks or accidents involving the underbody area, such as for example violent shocks, against steps, kerbs or low obstacles, falling of the vehicle in big holes or sags in the road.

IMPORTANT When the airbag inflates it emits a small amount of dusts. These dusts are harmless and is not the beginning of a fire; then the unfold cushion surface and the vehicle interiors can be covered by a dusty remains: this dust can irritate skin and eyes. In case of contact, wash yourself using neutral soap and water.

Expiration dates of pyrotechnic charge and coil contact are indicated on the label inside the glovebox. As these dates approach, contact Fiat Dealership to have them replaced.

IMPORTANT Should an accident occur in which any of the safety devices is activated, take the vehicle to a Fiat Dealership to have the devices activated replaced and to have the system checked.

Every control, repair and replacement operations concerning the air bags must only be carried out c/o Fiat Dealership.

If you are having the vehicle scrapped, have the air bag system deactivated at a Fiat Dealership first. If the vehicle changes ownership, the new owner must be informed of the method of use of air bags and the above warnings and also be given this "Owner Handbook".

IMPORTANT The triggering of pretensioners, front air bags and side bags is decided in a differentiated manner by the electronic control unit, depending on the type of crash. The failure to deploy one or more of them does not mean that the system is not working properly.



WARNING

Never rest head, arms and elbows on the door, on the windows and in the window bag area to prevent possible injuries during inflation phase.




WARNING

Never lean head, arms and elbows out of window.

GENERAL WARNINGS



WARNING

If when turning the key to MAR the warning light  does not turn on or if it stays on when travelling (together with the message on the multifunction display, where provided) there could be a failure in safety systems; in this event air bags or pretensioners could not trigger in case of impact or, in a minor number of cases, they could trigger accidentally. Contact Fiat Dealership immediately to have the system checked.



WARNING

Do not cover the backrest of front and rear seats with trims or covers that are not suitable to be used with side bags.



WARNING

Never travel with objects on your lap, in front of your chest or with a pipe, pencil, etc. between your lips; injury may result in the event of the air bag being triggered.



WARNING

Always keep your hands on the steering wheel rim when driving, so that if the air bag is triggered, it can inflate without meeting any obstacles which could cause serious harm to you. Do not drive with the body bent forwards, keep the seat back rest in the erect position and lean your back well against it.



WARNING

Remember that with the key engaged and at MAR, even if the engine is not running, the air bags may be triggered on a stationary vehicle if it is bumped by another moving vehicle. Therefore, never seat children on the front seat even when the vehicle is stationary. On the other hand remember that if the key is at STOP, no safety system (air bags or pretensioners) is triggered in the event of an impact; in this case, failure to come into action cannot be considered as a sign that the system is not working properly.




WARNING

If the vehicle has been stolen or an attempt to steal it has been made, if it has been subjected to vandals or floods, have the air bag system checked by Fiat Dealership.



WARNING

When the ignition key is turned to MAR, the warning light  (with passenger's front air bag active) turns on and flashes for few seconds to remind that passenger's air bag will be deployed in a crash, after which it should go off.

**WARNING**

Do not wash the seat back rest with pressurised water or steam (by hand or at automatic seat washing stations).

**WARNING**

The front air bag is triggered for shocks greater in magnitude than the pretensioners. For impacts between these two thresholds, it is therefore normal that only the pretensioners are triggered.

**WARNING**

Do not hook rigid objects to the coat hooks and to the support handles.

**WARNING**

The air bag does not substitute the seat belts, but only increases their effectiveness. Moreover, since the front air bags do not come into operation in the event of front impact at low speed, side collisions, bumps from behind or overturning, in these circumstances the occupants would only be protected by the seat belts which must therefore always be fastened.

CORRECT USE OF THE VEHICLE

ENGINE STARTING	134
PARKING.....	136
USING THE MANUAL GEARBOX	136
LOAD RECOMMENDATIONS	137
CONTAINING RUNNING COSTS.....	138
TOWING TRAILERS.....	139
SNOW TYRES	143
SNOW CHAINS	143
VEHICLE INACTIVITY	144

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

ENGINE STARTING

The vehicle is fitted with an electronic engine lock device: if the engine fails to start, see the paragraph "The Fiat CODE system" in section "Dashboard and controls".



We recommend that during the initial period you do not drive to full vehicle performance (e.g.: excessive acceleration, long journeys at top speed, sharp braking, etc.).



When the engine is switched off never leave the key into the ignition switch to prevent pointless current absorption from draining the battery.



WARNING

Running the engine in confined areas is extremely dangerous. The engine consumes oxygen and produces carbon monoxide which is a highly toxic and lethal gas.








WARNING



Remember that the servo-brake and power steering are not operational until the engine has been started, therefore much effort than usual is required on the brake pedal and steering wheel.


STARTING PROCEDURE

Proceed as follows:

- ☐ engage the handbrake;
- ☐ put the gear lever into neutral;
- ☐ turn the ignition key to **MAR**: the warning lights  and  on the instrument panel will turn on;
- ☐ wait for the warning lights  and  to turn off. The hotter the engine is, the quicker this will happen;
- ☐ press the clutch pedal down to the floor without pressing the accelerator;
- ☐ turn the ignition key to **AVV** as soon as warning light  turns off. If you wait too long you will lose the benefit of the work done by the glow plugs. Release the key as soon as the engine starts.


If the engine does not start at the first attempt, return the ignition key to **STOP** before repeating starting.

If, when the ignition key is at **MAR**, the instrument panel warning light  remains lit together with warning light  turn the key to **STOP** and then back to **MAR**; if the warning lights remain on, try with the other keys provided with the vehicle.

IMPORTANT If the instrument panel warning light  stays on glowing steadily, contact immediately Fiat Dealership.

IMPORTANT Never leave the ignition key to **MAR** when the engine is off.



The warning light  will flash for 60 seconds at start-up or during prolonged cranking to indicate a fault in the glow plug heating system. You can use the vehicle as usual if the engine starts but you should contact Fiat Dealership as soon as possible.

HOW TO WARM UP THE ENGINE AFTER IT HAS JUST STARTED

Proceed as follows:

- ☐ drive off slowly, letting the engine turn at medium revs. Do not accelerate abruptly;
- ☐ do not drive at full performance for the initial kilometres. Wait until the coolant temperature gauge starts moving.



Remember that the servo-brake and power steering are not operational until the engine has been started, therefore much effort than usual is required on the brake pedal and steering wheel.



Never bump start the engine by pushing, towing or coasting downhill as this could cause fuel to flow into the catalytic exhaust system and damage it beyond repair.

STOPPING THE ENGINE

Turn the ignition to **STOP** while the engine is idling.

IMPORTANT After a taxing drive, you should allow the engine to “catch its breath” before turning it off by letting it idle to allow the temperature in the engine compartment to fall.



A quick burst on the accelerator before turning off the engine serves absolutely no practical purpose, it wastes fuel and is damaging especially to turbocharged engines.

PARKING THE VEHICLE

Proceed as follows:

- ☐ stop the engine and engage the handbrake;
- ☐ engage a gear (on a slope, engage first gear if the vehicle is faced uphill or reverse if it is faced downhill) and leave the wheels steered.

Block the wheels with a wedge or a stone if the vehicle is parked on a steep slope. Do not leave the key in the ignition switch to prevent draining the battery. Always remove the key when you leave the vehicle.



WARNING

Never leave children unattended in the vehicle. Always remove the ignition key when leaving the vehicle and take it out with you.

HANDBRAKE fig. 1

The handbrake lever is located on the left-hand side of the driver's seat.

Pull the handbrake lever upwards until the vehicle cannot be moved. Four or five clicks are generally enough when the vehicle is on level ground while nine or ten may be required if the vehicle is on a steep slope or laden.

IMPORTANT If this is not the case, contact Fiat Dealership to have the handbrake adjusted.

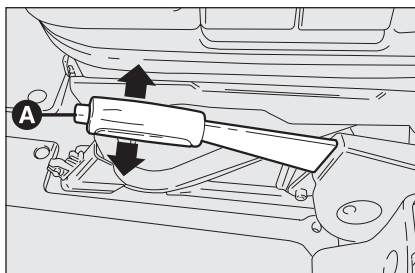


fig. 1

When the handbrake lever is pulled up and the ignition key is at **MAR**, the instrument panel warning light (1) will turn on.

To release the handbrake:

- ☐ slightly lift the handbrake and press the release button **A**;
- ☐ keep button **A** pressed and lower the lever. Warning light (1) will turn off.

Press the brake pedal when carrying out this operation to prevent the vehicle moving accidentally.

IMPORTANT Pull the handbrake only when the vehicle is stationary or, with vehicle running only if the hydraulic system is failing. Should it be necessary to use the handbrake with the vehicle running, pull it slowly to prevent rear axle locking and vehicle side skid as a consequence.

USING THE MANUAL GEARBOX

To engage the gears, press the clutch pedal fully and shift the gear lever into one of the required positions (the diagram is shown on the knob **fig. 2**).

To engage the 6th gear (where provided) move the gearshift lever pressing slightly rightwards to prevent engaging the 4th gear accidentally. Do the same for shifting from 6th to 5th gear.

IMPORTANT The vehicle can only be put into reverse gear when it has stopped moving completely. With the engine running, before engaging the reverse, wait at least 2 seconds with the clutch pedal fully down to prevent damage and grating of the gears.

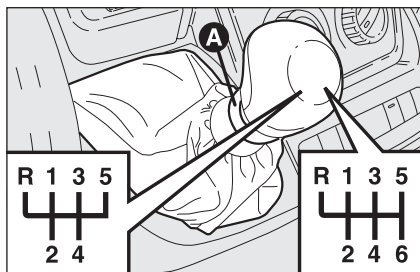


fig. 2

F0N0074m

To engage reverse **R** from neutral, proceed as follows: raise the sliding ring **A** under the knob and at the same time move the gearshift lever leftwards and then forward.



WARNING

To change gears properly you must push the clutch pedal fully down. It is therefore essential that there is nothing under the pedals: make sure the mats are lying flat and do not get in the way of the pedals.



Do not drive with your hand resting on the gear lever as the force exerted, even if slight, could lead over time to premature wear on the gearbox internal components.

LOAD RECOMMENDATIONS

The version of the Fiat Ducato you are driving has been designed and approved on the basis of several set maximum weights (see the tables “Weights” in section “Technical specifications”): kerb weight; payload; total weight; total weight on the front axle; total weight on the rear axle; towable weight



WARNING

*Each of these limits must be borne in mind and **MUST NEVER BE EXCEEDED** under any circumstances. In particular, never exceed the maximum weight permitted on the front and rear axles when arranging loads in vehicle (especially for special version vehicles).*

IMPORTANT Max. admitted load on floor fixings is 500 kg; max. admitted load on body side is 150 kg.



WARNING

Chance knocks or sudden braking can cause sudden shifts of the load which could jeopardise the safety of the driver and the passengers: before you start off make sure the load is firmly secured by using the hooks built into the floor for that purpose. Use metal cables, ropes or straps strong enough to support the weight of the load to be fixed.



WARNING

Even if the vehicle is stationary on a steep hill or sideways incline, goods not properly secured could fall out when the back or side doors are opened.

IMPORTANT For versions with right and left side boards, before opening the side boards you are recommended to refit the release lever in closing position.



WARNING

Observe the enforced rules if you need to carry a spare can of petrol. Only use a homologated can and secure it to the load anchoring eyebolts. Even given these precautions, the risk of fire in the event of an accident is increased.

In addition to these general precautions, some simple measures could enhance driving safety, comfort and the length of the vehicle's life:

- ☐ distribute the load evenly over the load floor: if you need to concentrate it all in one point choose the part between the axles;
- ☐ remember that the lower the load is, the lower the vehicle's centre of gravity will be, contributing to a safe drive; you should therefore always position the heavier goods at the bottom;
- ☐ finally, remember that the way in which the vehicle moves is influenced by the weight being carried. In particular, stopping distance lengthens particularly at high speed.

CONTAINING RUNNING COSTS

Here are some suggestions which may help you to keep the running costs of your vehicle down and lower the amount of toxic emissions released into the atmosphere.

GENERAL CONSIDERATIONS

Vehicle maintenance

Carry out the checks and adjustments/regulations specified in the "Service Schedule".

Tyres

Check the pressure of the tyres routinely at an interval of no more than 4 weeks: if the pressure is too low, consumption levels increase as resistance to rolling is higher.

Unnecessary loads

Do not travel with too much luggage stowed in the boot. The weight of the vehicle (especially when driving in town) and its trim greatly affects consumption and stability.

Roof rack/ski rack

Remove the roof rack or the ski rack from the roof as soon as they are no longer used. These accessories lower air penetration and adversely affect consumption levels. When needing to carry particularly voluminous objects, preferably use a trailer.

Electric devices

Use electric devices only for the amount of time needed. Rear heated window, additional headlights, windscreen wipers and heater fan need a considerable amount of energy, therefore increasing the requirement of current increases fuel consumption (up to +25% in the urban cycle).

Climate control

The air conditioner is an additional load which greatly affects the engine leading to higher consumption (on average up to +20%). When the temperature outside the vehicle permits it, use the air vents where possible.

Spoilers

The use of non-certified aerodynamic items may adversely affect air drag and consumption levels.

DRIVING STYLE

Starting

Do not warm the engine when the vehicle is stationary or at high or low speed: in this way the engine will warm up gradually increasing consumption and emissions. You should drive off slowly straight away avoiding high revs so that the engine will warm up more quickly.

Unnecessary actions

Avoid accelerating when waiting at traffic lights or before switching off the engine. This and also double declutching is absolutely pointless on modern vehicles and also increase consumption and pollution.

Gear selection

As soon as the conditions of the traffic and road allow, use a higher gear. Using a low gear to obtain brilliant performance increases consumption.

In the same way improper use of a high gear increases consumption, emissions and engine wear.

Top speed

Fuel consumption considerably increases with speed. Avoid superfluous braking and accelerating, which cost in terms of both fuel and emissions.

Acceleration

Accelerating violently increasing the revs will greatly affect consumption and emissions: acceleration should be gradual and should not exceed the maximum torque.

CONDITIONS OF USE

Cold starting

Short journeys and frequent cold starts do not allow the engine to reach optimum operating temperature. This results in a significant increase in consumption levels (from +15 to +30% on the urban cycle) and emission of harmful substances.

Traffic and road conditions

Rather high consumption levels are tied to situations with heavy traffic, for example in queues with frequent use of the lower gears or in cities with many traffic lights. Also winding mountain roads and rough road surfaces adversely affect consumption.

Traffic hold-ups

During prolonged hold-ups (level crossings) the engine should be switched off.

TOWING TRAILERS

IMPORTANT NOTES

For towing caravans or trailers the vehicle must be fitted with a certified tow hook and an adequate electric system. Installation should be carried out by specialised personnel who release a special document for circulation on the road.

Install any specific and/or additional rear-view mirrors as specified by law.

Remember that when towing a trailer, steep hills are harder to climb, the braking spaces increase and overtaking takes longer depending on the overall weight.

Engage a low gear when driving downhill, rather than constantly using the brake.

The weight the trailer exerts on the vehicle tow hook reduces by the same amount the actual vehicle loading capacity. To make sure the maximum towable weight is not exceeded (given in the log book) account should be taken of the fully laden trailer, including accessories and personal belongings.

Do not exceed the speed limits of the country you are driving in. In any case do not exceed 100 km/h.

Fit a suitable towing stabilizer to the trailer to be towed.



WARNING

The ABS system with which the vehicle may be fitted does not control the trailer braking system. Therefore be cautious on slippery roads.



WARNING

Under no circumstances should the vehicle brake system be altered to control the trailer brake. The trailer braking system must be fully independent of the vehicle's hydraulic system.

INSTALLING THE TOW HOOK

The towing device should be fastened to the body by specialised personnel according to any additional and/or integrative information supplied by the Manufacturer of the device.

The towing device must meet current regulations with reference to 94/20/EC Directive and subsequent amendments.

For any version the towing device used must match the towable weight of the vehicle on which it is to be installed.

For the electric connection a unified connector should be used which is generally placed on a special bracket normally fastened to the towing device, and a special ECU for external trailer light control shall be installed on the vehicle.

For the electrical connection, 7 or 13 pin 12VDC connection is to be used (CUNA/UNI and ISO/DIN Standards). Follow the instructions provided by the vehicle manufacturer and/or the tow hitch manufacturer.

An electric brake should be supplied directly by the battery through a cable with a cross section of no less than 2.5 mm².

IMPORTANT Electric brake or other device shall be used with running engine.

In addition to the electrical branches, the vehicle's electric system can only be connected to the supply cable for an electric brake and to the cable for an internal light, though not above 15W.

For connections use the preset control unit with battery cable no less than 2.5 mm².

IMPORTANT The towing hitch constitutes the length of the vehicle; therefore if the total vehicle length exceeds the 6 meter limit and if it is to be installed on "long pitch" versions, you will have to install an extractable towing hitch.

Remove the hitch from the connection base when the trailer is not being used and make sure that the length does not exceed the original length of the vehicle.

IMPORTANT If you wish to leave the tow-hook fitted permanently without towing a trailer, it is important to ask your Fiat Dealership to update the System because the tow hook could be detected as an obstacle by the central sensors.

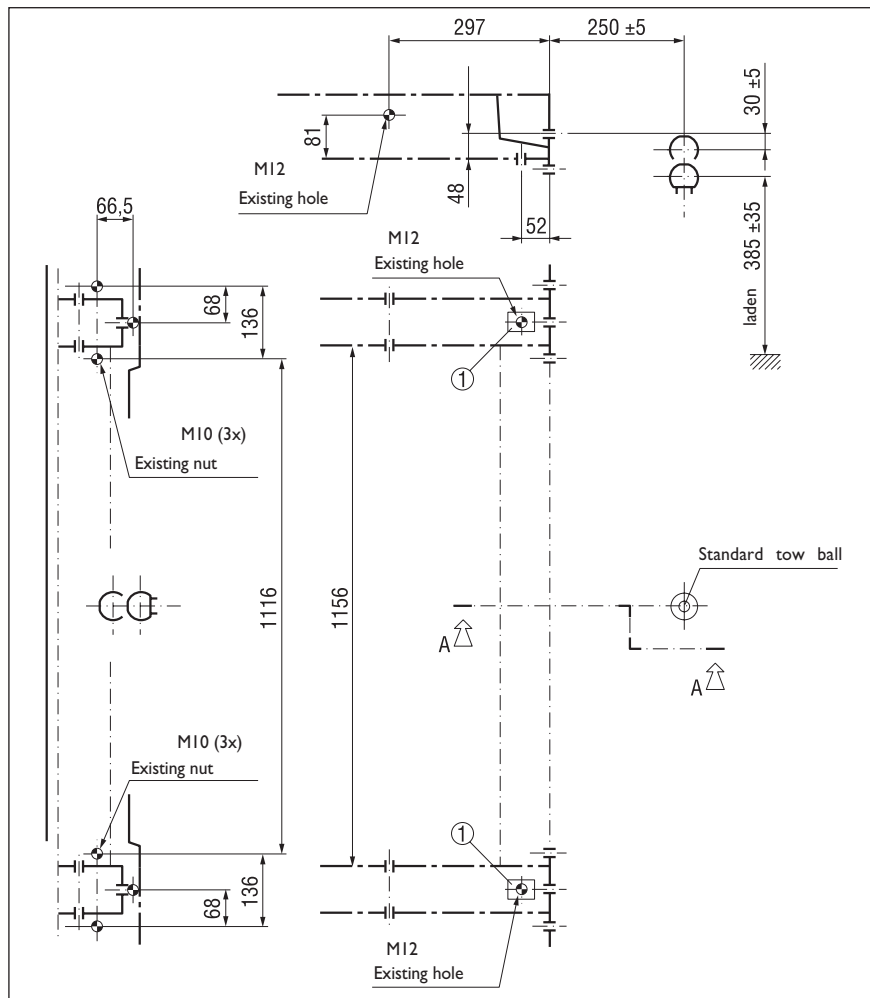



fig. 3

F0N0189m

Assembly diagram - Van versions fig. 3

The tow hook structure must be fastened in the points shown by the symbol  using a total of 6 M10x1.25 screws and 4 M12 screws.

The internal counterplates are to be at least 5 mm thick.


MAX LOAD ON BALL: 100/120kg depending on carrying capacity (see tables "Weights" in Chapter "Technical Data").



WARNING

After fitting, screw holes shall be sealed to prevent exhaust gas inlet.

To install the towing hitch you have to cut the bumper, Follow the instructions of the supplier included in the assembly kit.

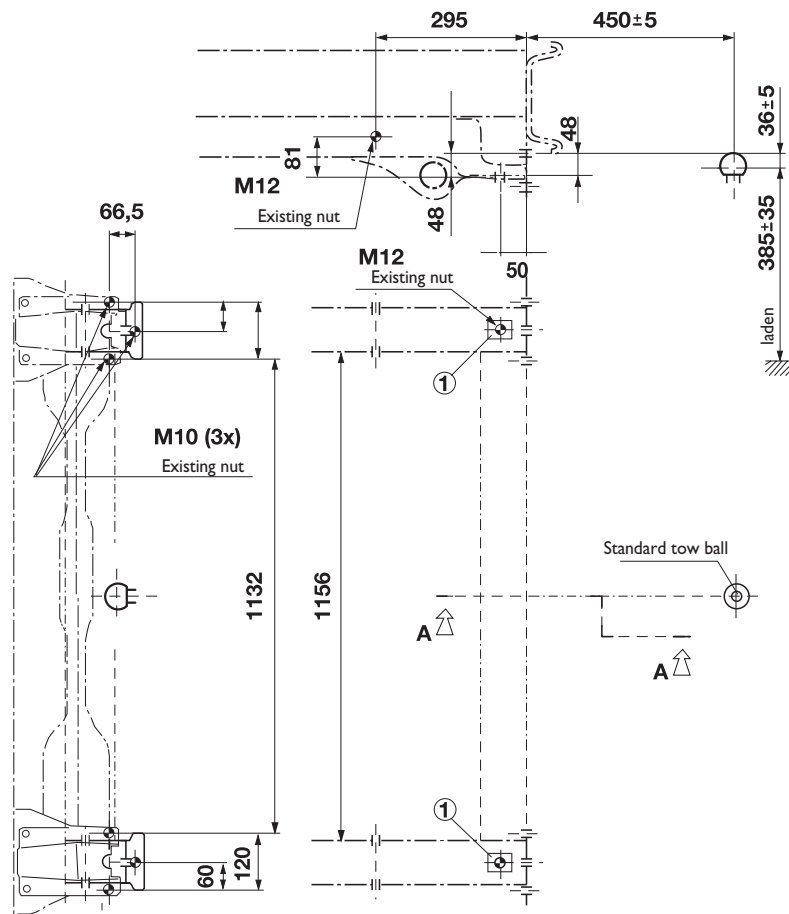

Assembly diagram - Truck and Chassis Cab versions - fig. 4

A specific tow hook for Truck and Chassis Cab versions is shown in **fig. 4**. Structure must be fastened in the points shown by a total of 6 M10x1.25 and 4 M12 screws.

MAX LOAD ON BALL: 100/120kg depending on carrying capacity (see tables "Weights" in Chapter "Technical Data").



WARNING

After fitting, screw holes shall be sealed to prevent exhaust gas inlet.

fig. 4

F0N0250m

SNOW TYRES

Fiat Dealership will be happy to provide advice concerning the most suitable type of tyre for the customer's requirements.

The winter features of these tyres are reduced considerably when the tread depth is below 4 mm. In this case, they should be replaced.

Due to the snow tyre features, under normal conditions of use or on long motorway journeys, the performance of these tyres is lower than that of normal tyres. It is therefore necessary to limit their use to the purposes for which they are certified.

IMPORTANT When snow tyres are used with a max speed index below the one that can be reached by the vehicle (increased by 5%), place a notice in the passenger's compartment, plainly in the driver's view which states the max permissible speed of the snow tyres (as per EC Directive).

All four tyres should be the same (brand and track) to ensure greater safety when driving and braking and better driveability.

Remember that it is inappropriate to change the direction of rotation of tyres.



WARNING

The max speed for snow tyres with "Q" marking is 160 km/h; 190 km/h for tyres with "T" marking and 210 km/h for tyres with H marking. The Road Traffic Code speed limits must however be always strictly observed.

SNOW CHAINS

Use of snow chains should be in compliance with local regulations.

Snow chains should only be applied to the driving wheels (front wheels). We recommend using Lineaccessori Fiat snow chains.

Check the tension of the chains after the first few metres have been driven.

IMPORTANT With snow chains, use the accelerator with extreme care to prevent or to limit as much as possible slipping of the driving wheels that could cause chain breaking resulting in damages to the vehicle body or mechanical components.

IMPORTANT Use snow chains with reduced size.



WARNING

Keep your speed down when snow chains are fitted. Do not exceed 50 km/h. Avoid potholes, steps and pavements and avoid also to drive for long distances on roads not covered with snow to prevent damaging the vehicle and the roadbed.



VEHICLE INACTIVITY

If the vehicle is to be left inactive for longer than a month, the following precautions should be noted:

- ☐ park the vehicle in covered, dry and if possible well-ventilated premises;
- ☐ engage a gear;
- ☐ make sure the handbrake is not engaged;
- ☐ disconnect the battery negative terminal and check the battery charge. This check is to be repeated every three months. Recharge if the optical indicator shows a dark colour without the central green area (see "Recharging the battery" in section "In an emergency"); if the vehicle is equipped with a battery disconnection function (disconnecter), see the description of the procedure in the "Controls" paragraph in the "Dashboard and controls" chapter;
- ☐ clean and protect the painted parts using protective wax;
- ☐ clean and protect the shiny metal parts using special compounds readily available;
- ☐ sprinkle talcum powder on the rubber windscreen and rear window wiper blades and lift them off the glass;
- ☐ slightly open the windows;

- ☐ cover the vehicle with a cloth or perforated plastic sheet. Do not use sheets of non-perforated plastic as they do not allow moisture on the vehicle body to evaporate;
- ☐ inflate tyres to +0.5 bar above the normal specified pressure and check it at intervals;
- ☐ if you don't disconnect the battery from the electric system, check its charge every month and recharge it if the optical indicator shows a dark colour without the central green area;
- ☐ do not drain the engine cooling system.

IMPORTANT Where relevant, switch off the vehicle alarm with the remote control.

WARNING LIGHTS AND MESSAGES

GENERAL WARNINGS	146	ESP - ASR SYSTEM FAILURE	153
LOW BRAKE FLUID	146	DIESEL PARTICULATE FILTER CLOGGED.....	153
HANDBRAKE ON.....	146	BRAKE PAD WEAR	153
AIR BAG FAILURE.....	147	HILL HOLDER FAILURE	153
ENGINE COOLANT		PARKING SENSOR FAILURE	154
HIGH TEMPERATURE.....	147	SIDELIGHTS AND LOW BEAMS	154
LOW BATTERY CHARGE.....	148	FOLLOW ME HOME.....	154
LOW ENGINE OIL PRESSURE.....	148	FRONT FOG LIGHTS.....	154
EXHAUSTED OIL	148	LEFT-HAND DIRECTION INDICATOR.....	154
INCOMPLETE DOOR LOCKING.....	149	RIGHT-HAND DIRECTION INDICATOR.....	155
SEAT BELTS NOT FASTENED	149	CRUISE CONTROL	155
EBD SYSTEM FAILURE	149	MAIN BEAM HEADLIGHTS.....	155
INJECTION SYSTEM FAILURE	150	ASR SYSTEM	155
FRONT PASSENGER AIR BAG DEACTIVATED.....	150	POWER STEERING FAILURE.....	155
ABS SYSTEM FAILURE.....	150	POSSIBLE PRESENCE OF ICE ON THE ROAD	156
FUEL RESERVE.....	150	LIMITED RANGE	156
GLOW PLUG WARMING	151	SPEED LIMIT EXCEEDED	156
GLOW PLUG WARMING FAILURE	151	SCHEDULED SERVICING	156
WATER IN DIESEL FUEL FILTER	151	SELF-LEVELLING SUSPENSIONS FAILURE.....	156
VEHICLE PROTECTION SYSTEM FAILURE		AUTOMATIC TRANSMISSION FAILURE/	
FIAT CODE	151	MAX. GEARBOX OIL TEMPERATURE.....	156
EXTERNAL LIGHTS FAILURE.....	152		
REAR FOGLIGHTS.....	152		
GENERIC FAILURE INDICATION	152		

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

WARNING LIGHTS AND MESSAGES

GENERAL WARNINGS

Turning on of warning light is accompanied by specific message and/or by buzzer sound where provided by instrument panel. These indications are **concise and cautionary** and shall not be considered as exhaustive and/or as an alternative to the specifications contained in this Owner Handbook which shall always be read through carefully and thoroughly. In case of failure indication **always refer to the specifications contained in this section**.

IMPORTANT Failure indications displayed are divided into two categories: **very serious** and **less serious** failures.

Very serious failures are indicated by a repeated and prolonged warning “cycle”.

Less serious failures are indicated by a limited warning “cycle”.

The warning cycle of both failure categories can be stopped by pressing button **MODE**. The instrument panel warning light will stay on until eliminating the fault.

As concerns messages relevant to the versions equipped with Dualogic gearbox, see the attached Supplement.



**LOW BRAKE FLUID
LEVEL (red)**

HANDBRAKE ON (red)

Turning the ignition key to **MAR** the warning light turns on, but it should go off after few seconds.

Low brake fluid level

The warning light turns on when the level of the brake fluid in the reservoir falls below the minimum level, due to possible leak in the circuit.

On certain versions the dedicated message is displayed.

Handbrake on

The warning light turns on when the handbrake is on.

On certain versions, if the vehicle is moving the buzzer will also sound.

IMPORTANT If the warning light turns on when travelling, check that the handbrake is not engaged.



WARNING

If the warning light (ⓘ) turns on when travelling (on certain versions together with the message on the display) stop the vehicle immediately and contact Fiat Dealership.



AIR BAG FAILURE (red)


Turning the ignition key to **MAR** the warning light turns on, but it should go off after few seconds.

The warning light stays on glowing steadily if there is a failure in the air bag system.

On certain versions the dedicated message is displayed.






WARNING

*If when turning the ignition key to **MAR**, the warning light  does not turn on or stays on when travelling there could be a failure in safety systems; in this event air bags or pretensioners could not trigger in case of impact or, in a minor number of cases, they could trigger accidentally. Contact Fiat Dealership immediately to have the system checked.*



WARNING

The failure of the warning light  (warning light off) is also indicated by the flashing for more than the normal 4 seconds of the passenger's front air bag deactivated warning light .



HIGH TEMPERATURE ENGINE COOLANT FLUID (red)

Turning the ignition key to **MAR** the warning light turns on, but it should go off after few seconds.

The warning light turns on when the engine is overheated.

If the warning light comes on, proceed as follows:

- ☐ **normal driving conditions:** stop the vehicle, switch off the engine and check whether the water level in the reservoir is not below the MIN mark. Otherwise wait for few seconds to allow the engine cooling, then open slowly and carefully the cap, top up coolant and check whether its level is falling between MIN and MAX marks in the reservoir. Check visually any leak. If, when restarting, the warning light comes on again, contact a Fiat Dealership.

- **heavy duty** (e.g.: towing trailer uphill of fully laden vehicle): decrease speed, if the warning light stays on, stop the vehicle. Wait for 2 or 3 minutes leaving the engine on and slightly accelerated to further activate the circulation of the coolant fluid, then switch the engine off. Check proper coolant level as described previously.

IMPORTANT Under severe use of the vehicle, keep the engine on and slightly accelerated for few minutes before switching it off.

On certain versions the dedicated message is displayed.



LOW BATTERY CHARGE (red)

Turning the ignition key to **MAR** the warning light turns on, but it should go out as soon as the engine is started (with the engine running at idle speed a brief delay in going out is allowed).

If the warning light stays on glowing steadily or flashing: contact immediately Fiat Dealership.



LOW ENGINE OIL PRESSURE (red)

EXHAUSTED OIL (red) (where provided)


Low engine oil pressure

Turning the ignition key to **MAR** the warning light turns on, but it should go out as soon as the engine is started.

On certain versions the dedicated message is displayed.




WARNING

If the warning light  turns on when the vehicle is travelling (on certain versions together with the message on the display) stop the engine immediately and contact a Fiat Dealership.


Exhausted oil

The warning light with turn on flashing together with the message on the display (where provided) when the system detects that the engine oil is exhausted.

After the first indication, at each engine starting the warning light  will go on flashing for about 60 seconds and then every 2 hours until oil is changed.



WARNING

If warning light  flashes, contact Fiat Dealership immediately to have oil changed and instrument panel warning light turned off.



INCOMPLETE DOOR/ LOAD COMPARTMENT LOCKING (red)

On certain versions the warning light turns on when one or more doors or the tailgate are not properly shut.

On certain versions the display shows a dedicated message when the front left/right door or rear doors/load compartment are open.

A buzzer will sound when one of the doors is open and the vehicle is moving.



SEAT BELTS NOT FASTENED (red)

The warning light on the instrument panel turns on glowing steadily with the vehicle stationary and driver's seat belt not fastened correctly. The warning light will turn on flashing together with the buzzer when, with the vehicle moving, driver's seat belt is not fastened correctly. The S.B.R. (Seat Belt Reminder) buzzer can only be excluded by Fiat Dealership. On certain versions the system can be reactivated through the set-up menu.



INEFFICIENT EBD ELECTRONIC BRAKING DISTRIBUTOR (red) (amber)

The turning on at the same time of warning lights (!) and (ABS) with the engine running indicates an EBD system failure or that the system is unavailable; in this case heavy braking may cause the rear wheels to lock before time, with the possibility of skidding. Drive with the utmost care to the nearest Fiat Dealership to have the system checked.

On certain versions the dedicated message is displayed.



INJECTION SYSTEM FAILURE (amber)

Under normal conditions, turning the ignition key to **MAR**, the warning light turns on but it should go off after engine starting.


If the warning light stays on or turns on when travelling, means a fault in the supply/ignition system which could cause high emissions at the exhaust, possible lack of performance, poor handling and high consumption levels.


On certain versions the dedicated message is displayed.

In these conditions it is possible to continue driving without however requiring heavy effort or high speed from the engine. In any case, contact Fiat Dealership as soon as possible.



FRONT PASSENGER'S AIR BAG DEACTIVATED (amber) (where provided)



Warning light  comes on when front passenger's air bag is deactivated.

With front passenger's air bag on, turning the ignition key to **MAR**, warning light  comes on steadily for about 4 seconds, it flashes for other 4 seconds and then it shall go off.



WARNING

Warning light  indicates also warning light  failures.

This is indicated by intermittent flashing, over 4 seconds, of warning light . In this event warning light  indicates that there could be a failure in safety systems. Contact Fiat Dealership immediately to have the system checked.




INEFFICIENT ABS SYSTEM (amber)

Turning the ignition key to **MAR** the warning light turns on, but it should go off after few seconds.

The warning light turns on when the system is inefficient or unavailable. In this case the braking system keeps its effectiveness unchanged, but without the potential offered by the ABS system. Caution is advisable and it is necessary to contact Fiat Dealership.

On certain versions the dedicated message is displayed.



FUEL RESERVE (amber)

Turning the ignition key to **MAR** the warning light turns on, but it should go off after few seconds.

The warning light turns on when about 10/12 litres fuel (according to versions) are left in the tank.

IMPORTANT The warning light flashes to indicate a failure, contact Fiat Dealership as soon as possible to have the system checked.



GLOW PLUG WARMING (Multijet versions - amber)

GLOW PLUG WARMING FAILURE (Multijet versions - amber)

Glow plug warming

Turning the ignition key to **MAR**, the warning light turns on and it will turn off when glow plugs reach the preset temperature. Start the engine immediately after warning light switching off.

IMPORTANT With hot ambient temperature, warning light stays on for very short time.

Glow plug warming failure

The warning light turns on when there is a failure in the glow plug warming system. Contact Fiat Dealership as soon as possible.

On certain versions the dedicated message is displayed.




WATER IN DIESEL FUEL FILTER (Multijet versions - amber)

Turning the ignition key to **MAR** the warning light turns on, but it should go off after few seconds.

The warning light turns on when there is water in the diesel fuel filter.

On certain versions the dedicated message is displayed.



The presence of water in the fuel circuit may cause serious damage to the entire injection system and cause irregular engine operation. If the warning light  turns on (on certain versions together with the message on the display) contact Fiat Dealership as soon as possible to have the system relieved. If the above indications come on immediately after refuelling, water has probably been poured into the tank: turn the engine off immediately and contact Fiat Dealership.




VEHICLE PROTECTION SYSTEM FAILURE - FIAT CODE (amber)

Turning the key to **MAR** the warning light shall flash only once and then go off.

The warning light turned on glowing steadily with key at **MAR**, indicates:

- ☐ possible failure (see "Fiat Code system" in section "Dashboard and controls");
- ☐ possible attempt to break-in with alarm on; in this case the warning light will turn off after about 10 seconds.

If with the engine running the warning light  flashes, this means that the vehicle is not protected by the engine inhibitor device (see "Fiat Code system" in section "Dashboard and controls").

Contact Fiat Dealership to have all the key memorised.



EXTERNAL LIGHT FAILURE (amber)

The warning light turns on when one of the following lights is failing:

- sidelights
- brake lights
- rear fog guards
- direction indicators.

The failure referring to these lights could be: one or more blown bulbs, a blown protection fuse or an electric connection cut-off.

On certain versions the dedicated message is displayed.



REAR FOG LIGHTS (amber)

The warning light turns on when the rear fog lights are turned on.



GENERIC FAILURE INDICATION (amber)

The warning light turns on in the following circumstances.

Engine oil pressure sensor failure

The warning light comes on when the engine oil pressure sensor is faulty. Contact Fiat Dealership as soon as possible.

Inertial fuel cut-off switch intervened

The warning light comes on when the inertial fuel cut-off switch is triggered.

The display will show the dedicated message.


Rain sensor failure (versions with multifunction display)

The warning light on the dial turns on when the rain sensor is faulty. Contact Fiat Dealership.

The display will show the dedicated message.

Parking sensor failure (versions with multifunction display)

See what described for warning light P[▲].



DIESEL PARTICULATE FILTER CLOGGED

The warning light turns on when the diesel particulate filter is clogged and the driving conditions do not enable to activate automatically the reclaiming procedure.

To enable the cleaning procedure, keep the vehicle running until the warning light turns off.

The display will show the dedicated message.



ESP - ASR SYSTEM FAILURE (amber) (where provided)

HILL HOLDER FAILURE (amber) (where provided)

Turning the ignition key to **MAR** the warning light turns on, but it should go off after few seconds.

ESP-ASR system failure

If the warning light does not go off or stays on when travelling together with the button led ASR, contact Fiat Dealership.

On certain versions the dedicated message is displayed.

Note Warning light flashing when driving indicates that the ESP system is active.

Hill Holder failure

The warning light will turn on when the Hill Holder system is faulty. Contact Fiat Dealership as soon as possible.

On certain versions the dedicated message is displayed.



BRAKE PAD WEAR (amber)


The warning light on the dial turns on if the front brake pads are worn; in this case have them changed as soon as possible.

On certain versions the dedicated message is displayed.



**PARKING SENSOR
FAILURE**
(where provided)
(amber)

The warning light turns on when failure is detected in parking sensors.

On certain versions warning light  turns on as an alternative.

Contact Fiat Dealership.

On certain versions the dedicated message is displayed.



**SIDE/TAILLIGHTS
AND LOW BEAMS**
(green)

FOLLOW ME HOME
(green)

Side/taillights and low beams

The warning light turns on when side/taillights or low beams are turned on.

Follow me home

The warning light will turn when this device is active (see “Follow me home” in section “Dashboard and controls”).

The display will show the dedicated message.



FRONT FOG LIGHTS
(green)

The warning light turns on when the front fog lights are turned on.



**LEFT-HAND
DIRECTION
INDICATOR**
(green - intermittent)

The warning light turns on when the direction indicator control lever is moved downwards or, together with the right indicator, when the hazard warning light button is pressed.



RIGHT-HAND DIRECTION INDICATOR (green - intermittent)

The warning light turns on when the direction indicator control lever is moved upwards or, together with the left indicator, when the hazard warning light button is pressed.



CRUISE CONTROL (where provided) (green)

Turning the ignition key to **MAR** the warning light will turn on but it should go off after a few seconds.

The instrument panel warning light turns on when turning the knurled ring of the Cruise Control to ON.

On certain versions the dedicated message is displayed.



MAIN BEAMS (blue)

The warning light turns on when the main beams are turned on.



ASR SYSTEM (where provided) (amber)

Turning the ignition key to **MAR**, the warning light turns on but it should go off after few seconds. The led on the ASR button turns on when the system is switched off. The warning light flashes when the ASR system cuts in to alert the driver that the system is adapting to the road surface grip conditions.

The turning on of the warning light together with the message on the display and the buzzer, also indicates a failure of the ASR system. In this case contact Fiat Dealership as soon as possible.

Messages are displayed when the ASR function is activated/deactivated manually (see "ASR system" in section "Dashboard and controls").

In versions fitted with ASR system only, at deactivation (ASR OFF) the warning light will always stay on.



POWER STEERING FAILURE (red)

Turning the ignition key to **MAR** the warning light on the dial turns on, but it should go off after few seconds.

If the warning light stays on together with the message on the display and the buzzer, you will not have steering assistance and the effort on the steering wheel will be increased, steering is however possible. Contact Fiat Dealership.



SCHEDULED SERVICING (where provided)

This warning light turns on to indicate servicing and it will stay on glowing steadily until reaching the deadline. The warning light will turn off after carrying out servicing at Fiat Dealership or after 1000 km at servicing deadline.



SELF-LEVELLING SUSPENSIONS FAILURE (where provided) (red)

Turning the ignition key to **MAR** the warning light shall turn on but it should turn off a few seconds later.

The warning light will turn on to indicate a failure at self-levelling suspension system.



AUTOMATIC TRANSMISSION FAILURE/MAX. GEARBOX OIL TEMPERATURE (where provided) (red)

Turning the ignition key to **MAR**, the warning light shall turn on but it should turn off a few seconds later.

The warning light turns on flashing (together with the message on the display and the buzzer) when the gearbox is failing.

The warning light turns on glowing steadily (together with the message on the display and the buzzer) when the automatic transmission oil is too hot.

POSSIBLE PRESENCE OF ICE ON THE ROAD

This indication starts flashing when the outside temperature reaches or falls below 3°C to warn the driver of the possible presence of ice on the road.

The display will show the dedicated message (only for versions with a multifunctional display).

LIMITED RANGE (versions with multifunction display)

The display will show the dedicated message to warn the driver that the cruising range is less than 50 km.

SPEED LIMIT EXCEEDED

The display will show the dedicated message when the vehicle exceeds the set speed limit (see "Multifunction Display" in section "Dashboard and controls").

IN AN EMERGENCY

In an emergency we recommend that you call the toll-free number found on the Warranty Booklet. You can also connect to the site www.fiat.com to search for the nearest Fiat Dealership point

ENGINE STARTING	158
IF A TYRE IS PUNCTURED	159
QUICK TYRE REPAIR KIT FIX & GO automatic	163
WHEN NEEDING TO CHANGE A BULB	168
IF AN EXTERIOR LIGHT BURNS OUT.....	170
IF AN INTERIOR LIGHT BURNS OUT	176
IF A FUSE BLOWS.....	177
IF THE BATTERY IS FLAT	185
JACKING THE VEHICLE	186
TOWING THE VEHICLE	186

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY


VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

ENGINE STARTING

EMERGENCY START-UP

If the instrument panel warning light  turns on glowing steadily, contact immediately Fiat Dealership.

JUMP STARTING fig. 1-2

If the battery is flat, it is possible to start the engine using an auxiliary battery with the same capacity or a little higher than the flat one.

Contact Fiat Dealership to have the battery checked/replaced.

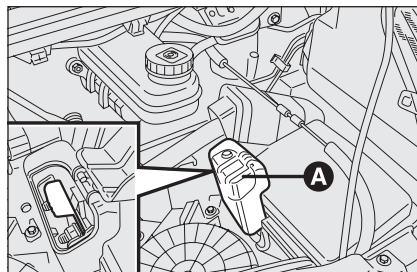


fig. 1

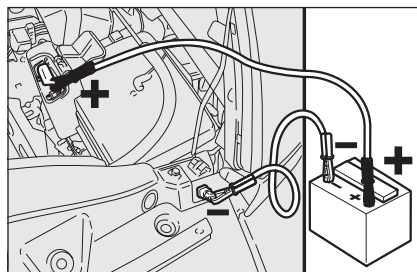


fig. 2

Proceed as follows:

- ☐ lift the lid **A** to connect to the battery positive terminal **fig. 1**.
- ☐ connect positive terminals (+ near the terminal) of the two batteries with a jump lead;
- ☐ connect with a second cable the negative terminal (-) of the auxiliary battery to the ground point as shown in **fig. 2**;
- ☐ start the engine;
- ☐ when the engine has been started, remove the leads reversing the order above.

If after a few attempts the engine does not start, do not insist but contact the nearest Fiat Dealership.



WARNING

The starting procedure must be carried out by qualified personnel because incorrect operations may cause electrical discharge of considerable intensity. The liquid contained in the battery is poisonous and corrosive. Avoid contact with the skin and eyes. Keep naked flames and lighted cigarettes away from the battery and do not cause sparks.

IMPORTANT Never connect the negative terminals of the two batteries directly: sparks could ignite explosive gas released from the battery. If the auxiliary battery is installed on another vehicle, avoid any metal parts on the latter and the vehicle with the flat battery from accidentally coming into contact.

BUMP STARTING

Never jump start the engine by pushing, towing or driving downhill. This could cause a flow of fuel into the catalytic converter and damage it beyond repair.

IMPORTANT Remember that the brake servo and the power steering system are not activated until the engine is started, a greater effort will therefore be required to press the brake pedal or turn the steering wheel.

CHANGING A WHEEL

GENERAL INSTRUCTIONS

To change a wheel and use the jack and spare wheel correctly, observe some of the precautions listed below.



WARNING

Signal that the vehicle is stationary in accordance with the following legal requirements: hazard warning lights, emergency warning triangle, etc. It is advisable for the people in the vehicle to get out, especially if the vehicle is heavily laden, and wait until the repair is carried out, well away from any dangerous traffic. Apply the handbrake



WARNING

Repair and refit the wheel changed as soon as possible. Do not apply grease to the bolt threads before assembly: the bolts could come loose unexpectedly.



WARNING

The spare wheel is specific for your vehicle. Therefore, it must not be used on vehicles of a different model. Do not use spare wheels of different models on your vehicle. The wheel bolts are specific for your vehicle. Do not use them on vehicles of different models. Do not use bolts of different models on your vehicle.



WARNING

The jack may only be used to change wheels which come with the vehicle or from other vehicles of the same model. Never use the jack for other purposes, such as lifting other models of vehicle. Never use the jack to carry out repairs under the vehicle. Incorrect positioning of the jack may cause the lifted vehicle to fall. Do not use the jack for loads higher than those shown on the label.



WARNING

Never tamper with the inflation valve. Never introduce tools of any kind between the rim and the tyre. Check the tyre and spare wheel pressure regularly referring to the values shown in the "Technical Specifications" chapter.

Important notes:

- ☐ the jack weighs 4.5 kg;
- ☐ the jack requires no adjustment;
- ☐ the jack cannot be repaired: replace with an original spare part if damaged;
- ☐ no tool other than the cranking device may be fitted on the jack.



WARNING

No tools other than the crank provided should be used with the spare wheel lifting device; it should be operated by hand, only.

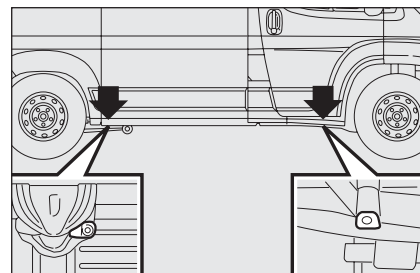


fig. 3

F0N0193m

To change a wheel proceed as follows:

- ☐ stop the vehicle in a position where it does not present a danger for on-coming traffic and where you can change the wheel safely. The ground must be flat and compact;
- ☐ turn the engine off and apply the hand-brake;
- ☐ engage first gear or reverse;
- ☐ wear a high visibility safety jacket (compulsory by law in certain countries) before getting out of the vehicle;
- ☐ indicate that the vehicle has broken down using the devices required by the law of the country (e.g. warning triangle, hazard lights etc.);
- ☐ take the extension and the wrench from the tool kit under the passenger seat (see "Compartment under front passenger seat" in the "Dashboard and Controls" section);

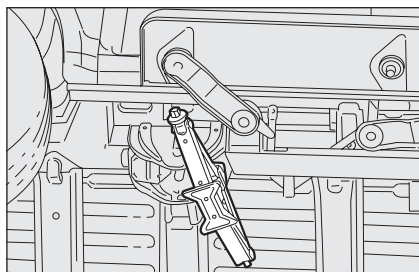


fig. 4

F0N0194m

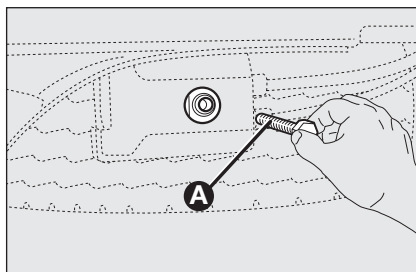


fig. 5b

F0N0391m

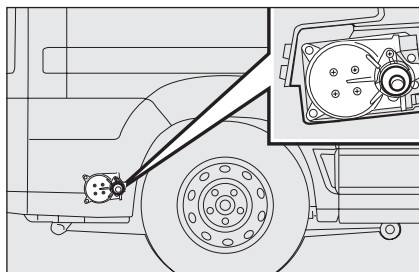


fig. 5a

F0N0390m

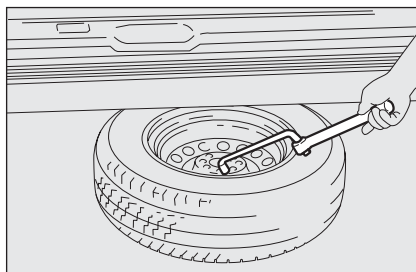


fig. 6

F0N0165m

After lifting the vehicle:

- ☐ for all versions, when gaining access via the vehicle's right rear wheel arch **fig. 5a**, adjust the screw for the wheel retaining device, using the spanner provided with the extension/adaptor **A** - **fig. 5b**;
- ☐ introduce the wheel wrench and turn anti-clockwise to allow the lowering of the spare wheel.
- ☐ continue turning anti-clockwise until the stop point, signalled by the hardening of the manoeuvre or a click from the clutch present in the device.



WARNING

The device should only be operated by hand, without using any type of tool other than the crank provided like pneumatic or electrical screwdrivers.

- ☐ for versions with alloy wheels, remove the press-fitted hub cap;
- ☐ loosen the bolts on the wheel to be replaced by one turn;
- ☐ turn the ring nut to extend the jack partly;
- ☐ position the jack near the lift support closest to the wheel to be changed at the points shown in **fig. 3**. For short wheelbase versions with a retractable

footboard, the jack must be positioned at the lift point shown in **fig. 4** aligned (45°) so that it does not interfere with the retractable footboard;

- ☐ warn anybody nearby that the vehicle is about to be lifted. They must stay clear and not touch the vehicle until it is back on the ground. Lift the vehicle.

- ☐ use the wheel dismantling spanner to remove the wheel from the vehicle **fig. 6**;
- ☐ undo the retaining knob **D** - **fig. 7** and release the wheel releasing the support **E**.

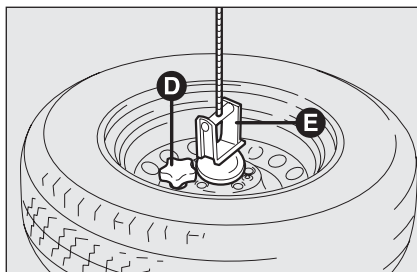


fig. 7

F0N0370m

Even the moving jack components (bolt and joints) could cause injury: do not touch them. If you come into contact with lubricating grease, clean yourself thoroughly;

- ☐ fully unscrew the bolts using the spanner **F**-fig. 8 and extract the wheel;
- ☐ fit the spare wheel, making sure that the openings **G**-fig. 9a are aligned with the pins **H**. When fitting the spare wheel, ensure that the wheel support surfaces are clean and free of impurities that could later cause the bolts to loosen;
- ☐ tighten the 5 fastening bolts;
- ☐ use the wheel removal wrench to lower the vehicle and extract the jack;

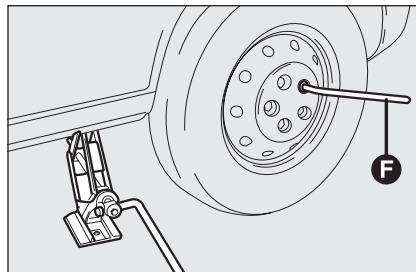


fig. 8

F0N0167m

- ☐ fully tighten the bolts, passing alternately from one bolt to the opposite one, following the order illustrated in fig. 9a.

When the operation is over:

- ☐ take the wheel replaced, refit it on the support **E**-fig. 7 and tighten the knob **D**-fig. 7;
- ☐ introduce the wheel wrench on the bolt fig. 5a-5b and turn it clockwise to allow the spare wheel to be raised until it is resting completely on the housing under the floor pan;

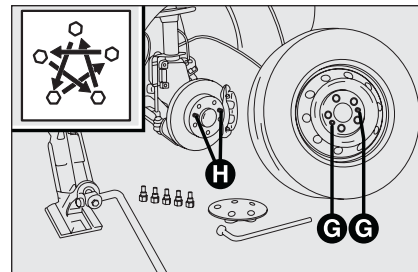


fig. 9a

F0N0168m



WARNING

At the end of the operation of raising/locking the spare wheel, the key must be extracted, taking care not to turn it in the wrong direction when trying to facilitate the extraction of the actual key, to prevent the attachment device from being released and the wheel assembly not being securely retained fig. 9b.

For vehicles with alloy wheels, proceed as follows:

- take the kit from the tool box;
- Fit the special plate **A**-fig. 9c on the alloy wheel, fastening it using the bolts **B**-fig. 9c provided using the spanner provided;
- reattach the wheel to the support turning it until the end of the slot (as illustrated in fig. 9d) and tighten the knob **D**-fig. 9d;

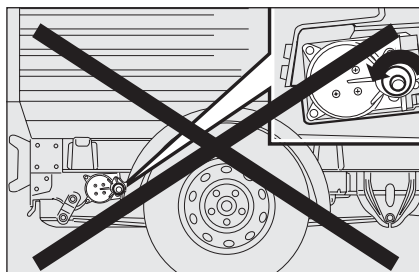


fig. 9b

F0N0223m

– introduce the wheel removal wrench on the bolt **fig. 5** and turn it clockwise to allow the spare wheel to be raised.

- ☐ Check that it is correctly positioned in the dedicated housing under the floor pan (the lifting system has an end of travel clutch which, if incorrectly positioned, will be unsafe).
- ☐ place the removal spanner back in the tool box;
- ☐ place the tool box in its housing under the passenger seat.

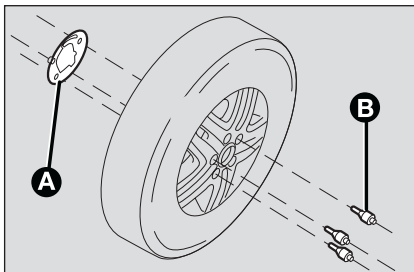


fig. 9c

F0N0251m

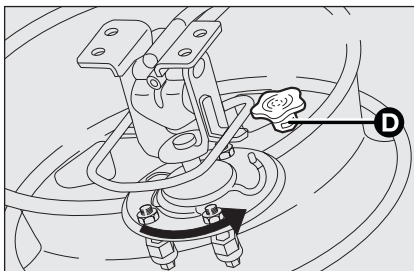


fig. 9d

F0N0371m



WARNING

Each time the spare wheel is moved, check that it is correctly positioned in its housing under the floor. If it is not correctly positioned, this could adversely affect safety.

QUICK TYRE REPAIR KIT - Automatic FIX & GO

The automatic Fix & Go quick tyre repair kit is located in the front part of the passenger compartment and includes:

- ☐ a canister **A** containing sealant liquid and fitted with:
 - a transparent filler pipe **B**;
 - a black pressure renewal pipe **E**;
- an adhesive label **C** with the words “max. 80 km/h”, to be placed in a position clearly visible by the driver (on the instrument panel) after the tyre has been repaired;
- ☐ information leaflet (see **fig. 11**), for quick reference for the correct use of the quick repair kit and later handed over to the staff who will have to manage the tyre dealt with;
- ☐ a compressor **D- Fig. 10** complete with pressure gauge and connectors;
- ☐ adapters for inflating various elements;
- ☐ protective gloves.

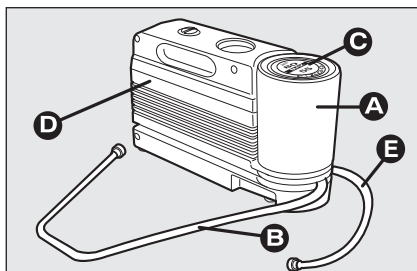


fig. 10

F0N0825m



fig. 11

F0N0178m

**WARNING**

Hand the leaflet over to the staff who have to manage the tyre treated using the tyre repair kit.



In the case of a puncture, caused by a foreign body, tyres that have suffered damage up to a maximum diameter of 4 mm on the tread or the shoulder can be repaired.

**WARNING**

The kit cannot be used to repair damage to the tyre sidewall. Do not use the quick repair kit if the tyre is damaged as a result of driving with it deflated.

**WARNING**

In the case of damage to the wheel rim (deformation of the channel that causes an air leak), it cannot be repaired. Do not remove foreign bodies (screws or nails) from the tyre.

IMPORTANT INFORMATION:

The sealant fluid for the quick tyre repair kit is effective at outside temperatures between -20 °C and +50 °C.

The sealant fluid has an expiry date.

**WARNING**

Do not operate the compressor for longer than 20 minutes consecutively. Risk of overheating. The quick repair kit is not suitable for definitive repairs. Tyres may only be repaired temporarily.



WARNING

The canister contains ethylene glycol. Contains latex: may cause an allergic reaction. Harmful if swallowed. Irritates the eyes. May cause sensitization by inhalation or contact. Avoid contact with your eyes, skin and clothes. In the event of contact, wash immediately with plenty of water. Do not induce vomiting if swallowed. Rinse your mouth and drink plenty of water. Call a doctor immediately. Keep away from children. The product must not be used by asthmatics. Do not breathe in the vapours during insertion and suction. Call a doctor immediately if allergic reactions are noted. Store the canister in the specific compartment, away from sources of heat. The sealant fluid has an expiry date.



Replace the canister containing out of date sealant fluid. Dispose of the canister and the sealant liquid properly. Dispose according to the national and local laws in force.

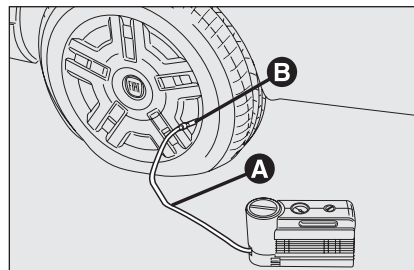


fig. 12

F0N0826m

INFLATION PROCEDURE



WARNING

Put on the protective gloves provided together with quick tyre repair kit.

- ☐ Engage the handbrake. Undo the tyre valve cap, extract the transparent filler pipe **A**-fig. 12 and tighten the ring nut **B** on the tyre valve;

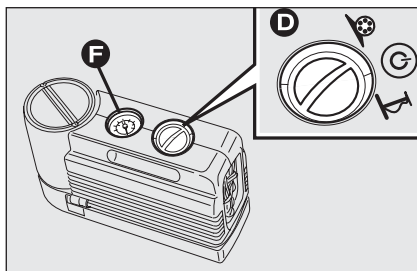


fig. 13

F0N0827m

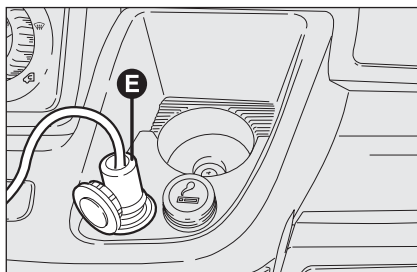


fig. 14

F0N0182m

- ☐ insert the pin **E**-fig. 14 in the nearest 12V current socket and start the engine. Turn the selector **D**-fig. 13 anti-clockwise to the repair position. Activate the kit by pressing the on/off switch. Inflate the tyre to the pressure specified in the "Inflation pressure" paragraph, in the "Technical Data" chapter.

For a more accurate reading, it is advisable to check the pressure reading on the pressure gauge **F**-fig. 13 with the compressor off and without moving the centre selector from the repair position;

- ☐ if a pressure of at least 3 bar is not reached within 10 minutes, detach the transparent filler pipe from the valve and switch off the 12V current pin, then move the vehicle about 10 metres forward to distribute the sealant liquid inside the tyre and repeat the inflation operation;
- ☐ if, in this case too, within 10 minutes of turning the compressor on, a pressure of at least 3 bar is not reached, do not start driving again because the tyre is too damaged and the quick repair kit is not sufficient in this situation and it is necessary to go to a Fiat Dealership;
- ☐ if the tyre reaches the pressure specified in "Inflation pressure" pressure in the "Technical Data" chapter, start driving immediately;

**WARNING**

Apply the adhesive label in a position clearly visible by the driver as a reminder that the tyre has been treated with the quick repair kit. Drive carefully, particularly on bends. Do not exceed 80 km/h. Do not accelerate or brake suddenly.

- ☐ after driving for about 10 minutes, stop and check the tyre pressure again; **remember to engage the handbrake;**

**WARNING**

Stop if the pressure has dropped to less than 3 bar: The automatic Fix & Go fast repair kit cannot work properly if the tyre is excessively damaged. Go to a Fiat Dealership.

- ☐ if, on the other hand, a pressure of at least 3 bar is reached, restore the correct pressure recommended in the "Tyre inflation" paragraph in the "Technical Data" chapter (with engine running and handbrake on) and resume driving;

- ☐ drive with the utmost care to the nearest Fiat Dealership.



WARNING

Remember to inform the workshop that the tyre has been treated with a quick repair kit. Hand the leaflet over to the staff who will be dealing the the tyre treated using the tyre repair kit.



WARNING

If different tyres from the ones supplied with the vehicle are used, the repair cannot be carried out. If the tyres are being changed, it is advisable to used ones approved by the manufacturer. Consult a Fiat Dealership.

FOR CHECKING AND RESTORING PRESSURE ONLY

The compressor may also be used for restoring pressure only.

- ☐ Engage the handbrake
- ☐ Undo the cap for the tyre valve, extract the black pipe and tighten the ring nut on the tyre valve.

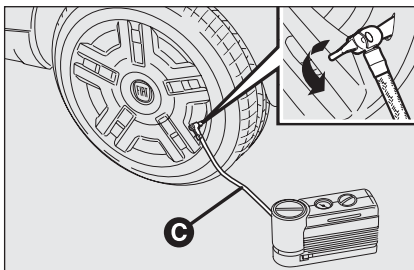


fig. 15

F0N0828m

- ☐ Insert the pin in the nearest 12V current socket and start the engine.
- ☐ Rotate the selector clockwise to the pressure renewal position.
- ☐ Activate the kit by pressing the on/off switch. Inflate the tyre to the pressure specified in the "Inflation pressure" paragraph, in the "Technical Data" chapter.

NOTE If the tyre has to be deflated, press the dedicated button **B** illustrated in **fig. 16**.

For a more accurate reading, it is advisable to check the pressure reading on the pressure gauge with the compressor off and without moving the centre selector from the repair position.

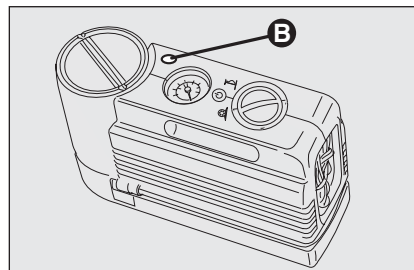


fig. 16

F0N0830m

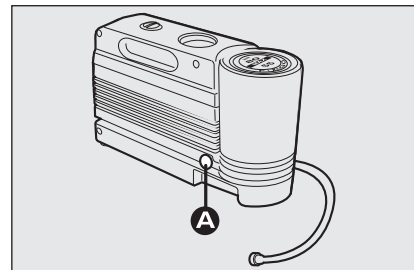


fig. 17

F0N0829m

CANISTER REPLACEMENT PROCEDURE

To replace the canister, proceed as follows:

- ☐ push button **A**-**fig. 17** to release the replacement part;
- ☐ fit the new canister and press until it is automatically engaged.
- ☐ fit the new cylinder and turn it clockwise;
- ☐ fit connection **A** and connect tube **B** into its seat.

WHEN NEEDING TO CHANGE A BULB

GENERAL INSTRUCTIONS

- When a light is not working, check that the corresponding fuse is intact before changing a bulb. For the location of fuses, refer to the paragraph "If a fuse blows" in this section;
- Before changing a bulb check the contacts for oxidation;
- Burnt bulbs must be replaced by others of the same type and power;
- Always check the height of the headlight beam after changing a bulb.



Halogen bulbs must be handled touching only the metallic part. If the transparent bulb is touched with the fingers, its lighting intensity is reduced and life of the bulb may be compromised. If touched accidentally, rub the bulb with a cloth moistened with alcohol and allow to dry.



WARNING

Modifications or repairs to the electrical system (electronic control units) carried out incorrectly and without bearing the features of the system in mind can cause malfunctions with the risk of fire.



WARNING

Halogen bulbs contain pressurised gas which, if broken, may cause small fragments of glass to be projected outwards.

IMPORTANT The headlight inner surface may be lightly misted over: this is not a fault but a natural fact due to low temperature and the level of air humidity. It will disappear as soon the headlights are turned on. The presence of drops inside the headlights means water infiltration, therefore contact Fiat Dealership.

TYPES OF BULBS

Various types of bulbs are fitted to your vehicle:

- A** Glass bulbs: clipped into position. Pull to remove.

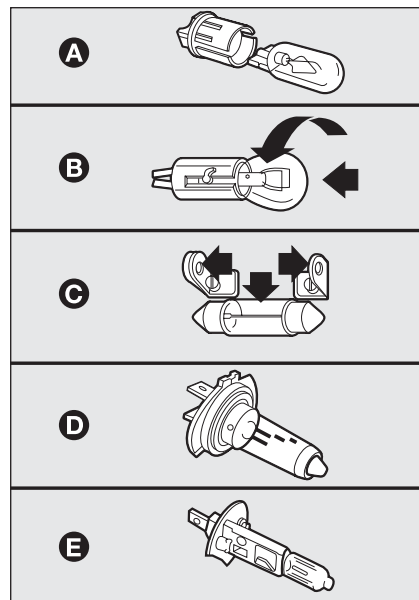


fig. 18

FON0078m

- B** Bayonet type bulbs: to remove this type of bulb from its holder, press the bulb and turn it counter-clockwise.
- C** Tubular bulbs: release them from their contacts to remove.
- D-E** Halogen bulbs: to remove the bulb, release the clip holding the bulb in place.

Bulbs	Ref. figure	Type	Power
Main-beam headlights	D	H1	55W
Dipped beam headlights	D	H7	55W
Front sidelights	A	W5W	5W
Front fog lights (where provided)	–	H1	55W
Front direction indicators	B	PY21W	21W
Side direction indicators	A	W16WF(*)/WY5W(▼)	16W(*)/5W(▼)
Rear direction indicators	B	PY21W	21W
Side lights	A	W5W	5W
Taillights	B	P21/5W	5W
Brake lights	B	P21/5W	5W
Third brake light (additional brake light)	B	P21W	21W
Reversing light	–	P21W	21W
Rear fog lights	–	P21W	21W
Rear fog lights (Heavy-Duty van)	–	P21W	21W
Number plate light	A	C5W	5W
Front ceiling light with movable lens	C	12V10W	10W
Rear ceiling light	C	12V10W	10W

(*) XL and free time versions

(▼) all other versions

IF AN EXTERIOR LIGHT BURNS OUT

For the type of bulb and power rating, see “When needing to change a bulb”.

FRONT LIGHT UNITS fig. 19

The front light units contain sidelights, dipped beam, main beam and direction indicator bulbs.

The bulbs are arranged inside the light unit as follows:

- A** direction indicators
- B** sidelights/dipped beams (double light)
- C** main beams

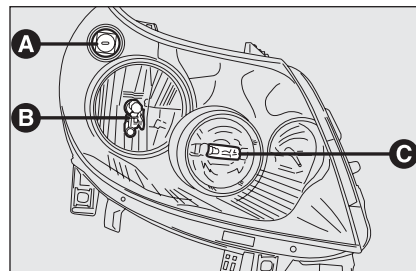


fig. 19

F0N0079m

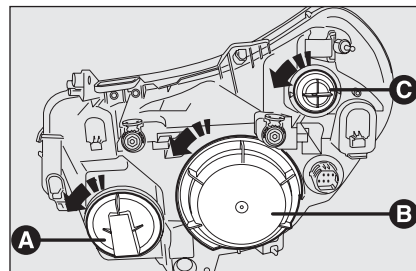


fig. 20

F0N0080m

To replace the main beam bulb, remove cap **A-fig. 20**.

To replace the dipped beams/sidelights bulb, remove cap **B-fig. 20**.

To replace the direction indicators bulb, remove the bulb holder **C-fig. 20**.

After replacing the bulb, refit caps and check for proper locking.

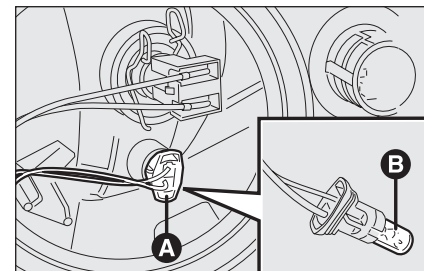


fig. 21

F0N0082m

SIDELIGHTS fig. 21

To change the bulb, proceed as follows:

- ☐ remove the protection cover **B-fig. 20** turning it counterclockwise;
- ☐ remove the snap-fitted bulb holder unit **A**; remove the bulb **B** and replace it;
- ☐ refit the snap-fitted bulb holder unit **A**;
- ☐ refit the protection cover **B-fig. 20** turning it clockwise and check for proper locking.

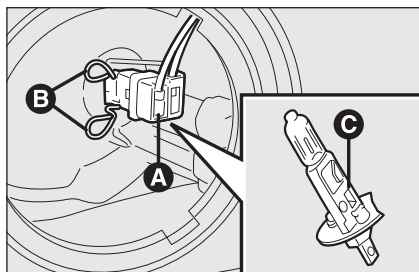


fig. 22

F0N0083m

MAIN BEAM HEADLIGHTS

To change the bulb, proceed as follows:

- ☐ remove the protection cover **A-fig. 20** turning it counterclockwise;
- ☐ disconnect the electric connector **A-fig. 22**;
- ☐ release the bulb catch **B-fig. 22**;
- ☐ remove the bulb **C-fig. 22** and replace it;
- ☐ fit the new bulb, making the outlines of the metallic part coincide with the grooves on the reflector then, refit the bulb holder catch **A** and reconnect the electrical connector **B**;
- ☐ refit the protection cover **A-fig. 20** turning it clockwise and check for proper locking.

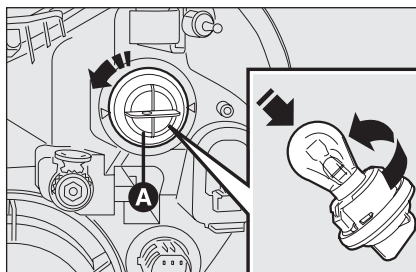


fig. 23

F0N0081m

DIRECTION INDICATORS

To change the bulb, proceed as follows:

- ☐ turn the bulb holder **A-fig. 23** counterclockwise and remove it;
- ☐ remove the bulb pushing it gently and turning it counterclockwise ("bayonet");
- ☐ replace the bulb;
- ☐ refit the bulb holder, by turning it clockwise and locking it properly.

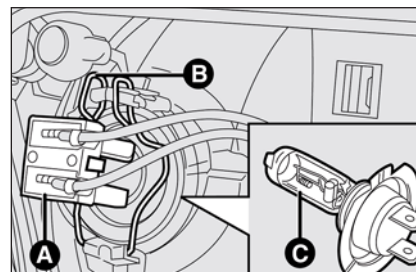


fig. 24

F0N0084m

DIPPED BEAM HEADLIGHTS

With incandescent bulb

To change the bulb, proceed as follows:

- ☐ remove the protection cover **B-fig. 20** turning it counterclockwise;
- ☐ disconnect the electric connector **A-fig. 24**;
- ☐ release the bulb holder catch **B-fig. 24**;
- ☐ remove the bulb **C-fig. 24** and replace it;
- ☐ fit the new bulb, making the outlines of the metallic part coincide with the grooves on the reflector then, refit the bulb holder catch **B** and reconnect the electrical connector **A**;
- ☐ refit the protection cover turning it clockwise and check for proper locking.

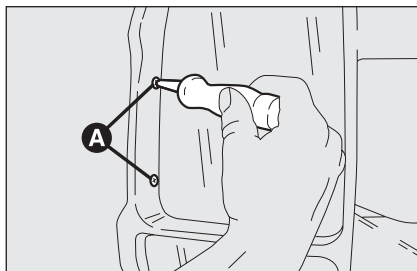


fig. 25

F0N0169m

Side fig. 25 - 26

To change the bulb, proceed as follows:

- ☐ move the mirror by hand to reach the two fastening screws **A**;

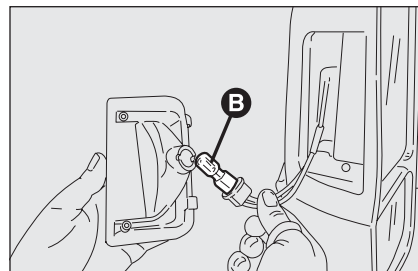


fig. 26

F0N0170m

- ☐ use the screwdriver provided to loosen the screws and remove the bulb holder unit releasing it from the catches;
- ☐ loosen the bulb turning it counter-clockwise and change it **B**.

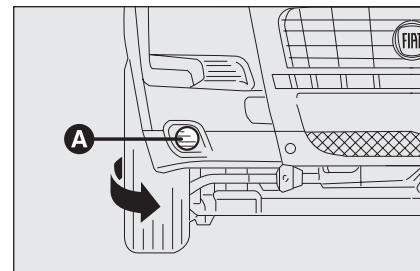


fig. 27

F0N0339m

**FRONT FOG LIGHTS
(where provided)**

To change front fog lights **A-fig. 27** proceed as follows:

- ☐ turn the steering wheel fully leftwards;
- ☐ loosen the self-tapping screw and open the lid on the front wheel box
- ☐ remove the bayonet cap;
- ☐ disconnect the connector;
- ☐ release the bulb holder clip;
- ☐ remove the bulb and change it;
- ☐ fit the new bulb, making the outline of the metallic section coincide with the grooves on the headlight reflector, refit the bulb holder clip and reconnect the electric connector;
- ☐ refit the bayonet cap.

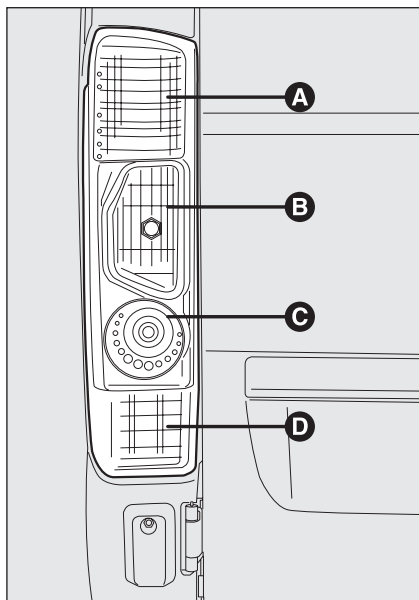


fig. 28

F0N0086m

REAR LIGHT UNITS

fig. 28-29-30

The bulbs are arranged inside the light unit as follows:

- A** brake lights/taillights
- B** direction indicators
- C** reversing lights
- D** rear fog lights (on Heavy-Duty Van versions, the reversing lights are built into the bumpers, see "Heavy-Duty Van rear fog lights").

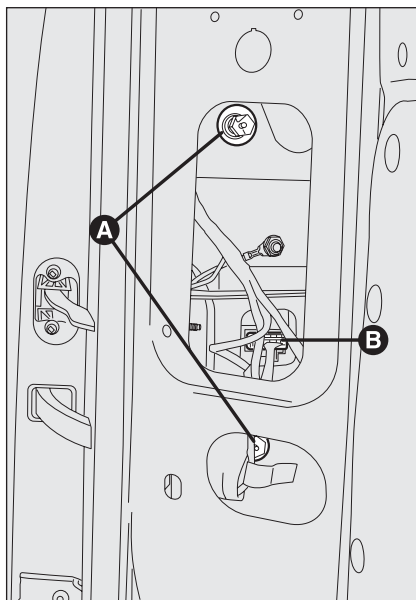


fig. 29

F0N0087m

To replace a bulb proceed as follows:

- ☐ open the rear swing door and loosen the two fastening screws **A**;
- ☐ disconnect the central electric connector **B** and pull the lens unit outwards;
- ☐ loosen the screws using the screwdriver provided **C** and remove the bulb holder;

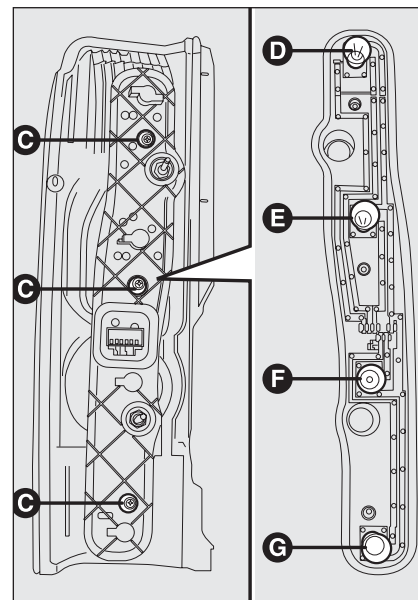


fig. 30

F0N0088m

- ☐ remove the bulb to replace **D**, **E**, **F** or **G** pushing it slightly and turning it counterclockwise ("bayonet" clamping) and replace it;
- ☐ refit the bulb holder and tighten the screws **C**;
- ☐ reconnect the electric connector **B**, suitably refit the unit to the vehicle body and then tighten the fastening screws **A**.

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

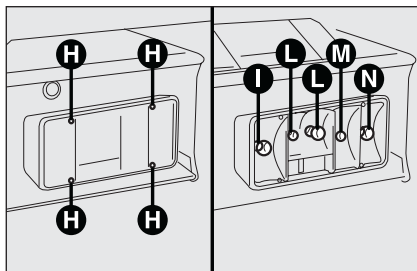


fig. 30a

F0N0239m

On truck and chassis-cab versions:

- ☐ unscrew the four bolts **H**-fig. 30a and replace the bulbs:

I: reversing light bulb (left side); reversing light bulb (right side);

L: bulb for side light;

M: bulb for brake light;

N: bulb for turn signal.

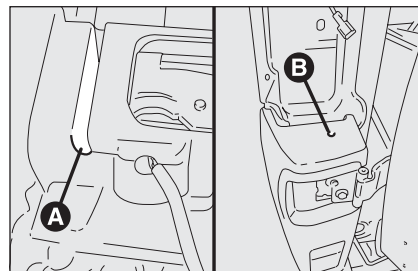


fig. 30b

F0N0241m

REAR FOG LIGHTS (Heavy-Duty Van)

To replace a bulb, proceed as follows:

- ☐ take up position to the rear of the side bumper;
- ☐ unscrew lower fastening **A** between the central and side bumper fig. 30b;
- ☐ after removing the tail-light, unscrew upper fastening **B**-fig. 30b;
- ☐ unscrew both fastenings **C** on the rear side-hinged door side and open the door slightly fig. 30c;
- ☐ unscrew the three side fastenings **D** on the side panel side, which are accessible after removing the side moulding fig. 30c. To remove the moulding, unscrew the three lower self-tapping bolts and carefully remove the spring clips to avoid breaking them. If one or more spring clips break, they must be replaced;

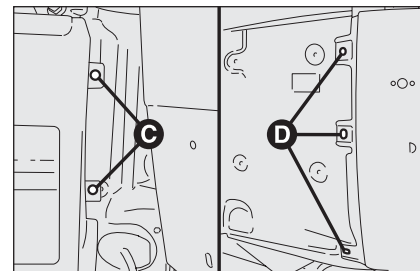


fig. 30c

F0N0242m

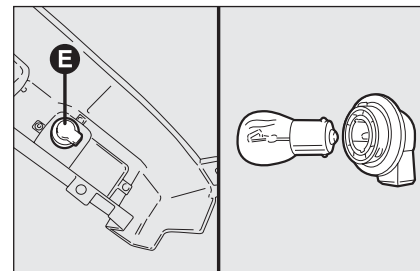


fig. 30d

F0N0243m

- ☐ remove the bulb holder unit;
- ☐ turn bulb holder **E** anticlockwise (1/8 turn), remove the bayonet bulb by pressing in slightly and turning anticlockwise, then replace fig. 30d.

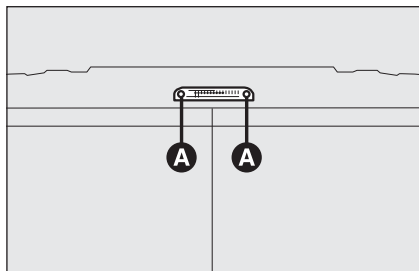


fig. 31

F0N0141m

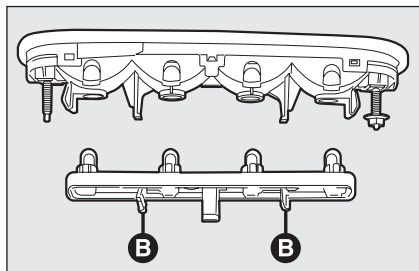


fig. 32

F0N0142m

THIRD BRAKE LIGHT fig. 31-32

To change the bulb proceed as follows:

- ☐ loosen the two fastening screws **A**-fig. 31;
- ☐ remove the lens unit;
- ☐ press the tabs **B**-fig. 32 and remove the bulb holder;
- ☐ remove the snap-fitted bulb and replace it.

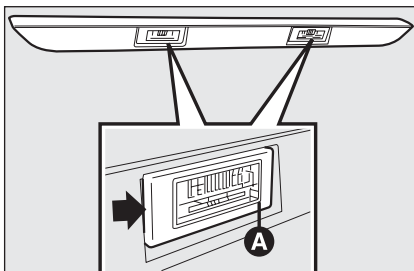


fig. 33

F0N0089m

NUMBER PLATE LIGHT fig. 33

To change the bulb proceed as follows:

- ☐ work in the point shown by the arrow and remove the lens unit **A**;
- ☐ change the bulb releasing it from the side contacts and making sure the new bulb is correctly fastened between the contacts;
- ☐ refit the snap-fitted lens unit.

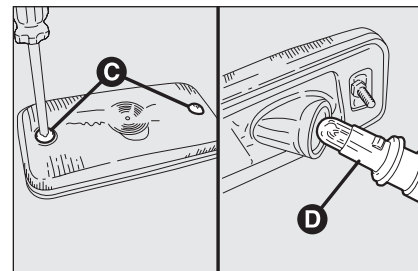


fig. 33a

F0N0244m

SIDE LIGHTS (where provided)

To replace a bulb, proceed as follows:

- ☐ **for extra-long van:**
 - unscrew both retaining screws **C**-fig. 33a and remove the light;
 - remove bulb holder **D** on the rear side of the bulb by turning through 1/4 of a turn;
 - remove the press-fitted bulb and replace.
- ☐ **for chassis cabs with box:**
 - remove the bulb holder on the rear side of the bulb by turning through 1/4 of a turn;
 - remove the press-fitted bulb and replace.

IF AN INTERIOR LIGHT BURNS OUT

For the type of bulb and power rating, see “When needing to change a bulb”.

FRONT CEILING LIGHT

To replace the bulbs proceed as follows:

- ☐ work in the points shown by the arrows and remove light **A**-fig. 34;
- ☐ open the protection lid **B**-fig. 35;
- ☐ replace bulbs **C**-fig. 35 releasing them from the side contacts; make sure that new bulbs are correctly clamped between contacts;
- ☐ re-close the lid **B**-fig. 35 and secure light **A**-fig. 34 into its housing locking it properly.

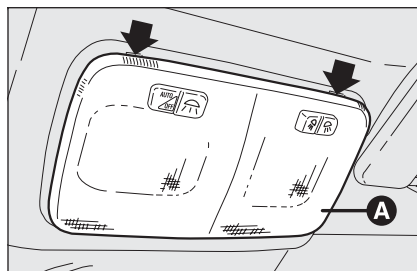


fig. 34

F0N0090m

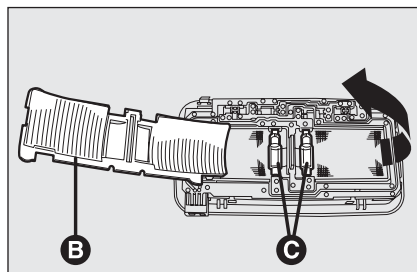


fig. 35

F0N0091m

REAR CEILING LIGHT

To replace the bulbs proceed as follows:

- ☐ work in the points shown by the arrows and remove light **D**-fig. 36;
- ☐ open the protection lid **E**-fig. 37;

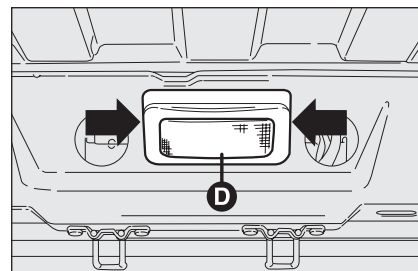


fig. 36

F0N0092m

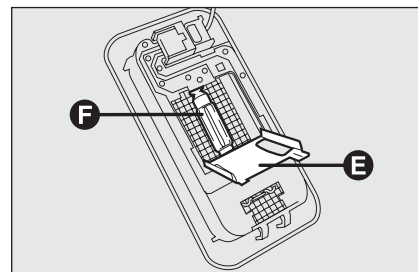


fig. 37

F0N0093m

- ☐ replace bulb **F**-fig. 37 releasing it from the side contacts making sure that the new bulb is correctly clamped between the contacts;
- ☐ re-close the protection lid **E**-fig. 37 and secure light **D**-fig. 36 into its housing locking it properly.

IF A FUSE BLOWS

GENERAL

The fuse is a protective device for the electric system: it comes into action (i.e. it cuts off) mainly due to a fault or improper action on the system.

When a device does not work, check the efficiency of its fuse: the conductor element **A**-fig. 38 must be intact. If not, replace the fuse with one of the same amp rating (same colour).

B undamaged fuse

C fuse with damaged filament.

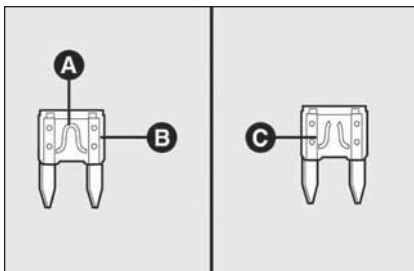


fig. 38

F0N0094m



Never replace a broken fuse with anything other than a new fuse.



WARNING

Never change a fuse with another with a higher amp rating, DANGER OF FIRE.



WARNING

If a general fuse (MEGA-FUSE, MIDI-FUSE, MAXI-FUSE) cuts in, do not attempt any repair and contact Fiat Dealership. Before changing a fuse, check the ignition key has been removed and that all the other electric devices have been turned off/disabled.



WARNING

If a fuse blows again, contact a Fiat Dealership.

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

FUSE LOCATION

Fuses are grouped into three fuse boxes to be found respectively on the dashboard, on the passenger compartment right pillar and in the engine compartment.

Fuse box on the dashboard

To gain access to the fuses in the fuse box on the dashboard, loosen the fastening screws **A**-fig. 39 and remove the cover.

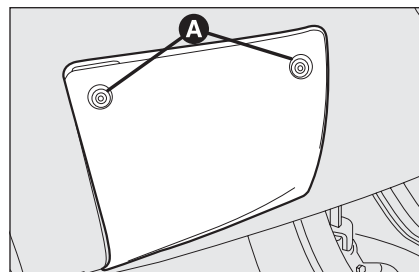


fig. 39

F0N0096m

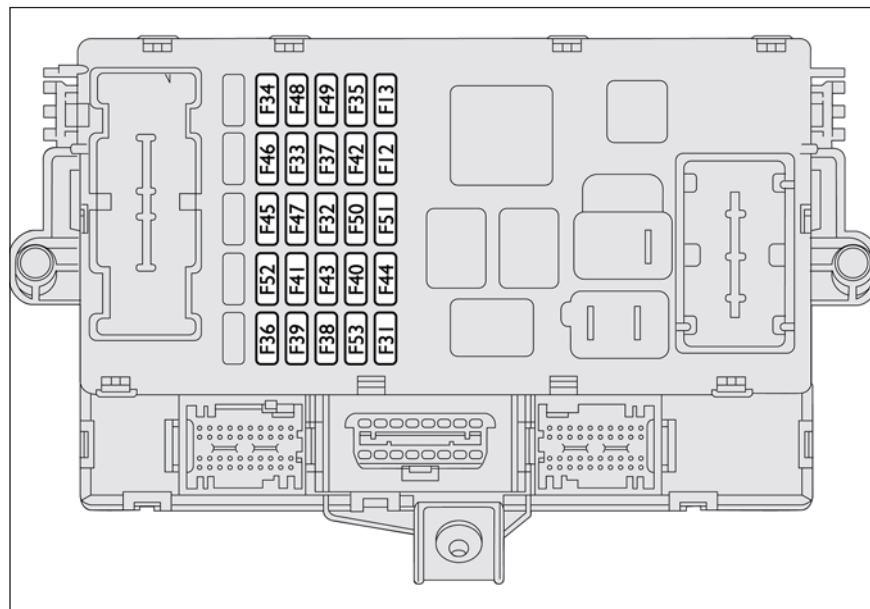


fig. 40

F0N0096m

Fuse box in engine compartment

To gain access to the fuse box, remove the protection cover **fig. 41**.

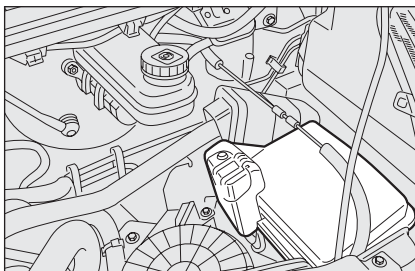


fig. 41

F0N0098m

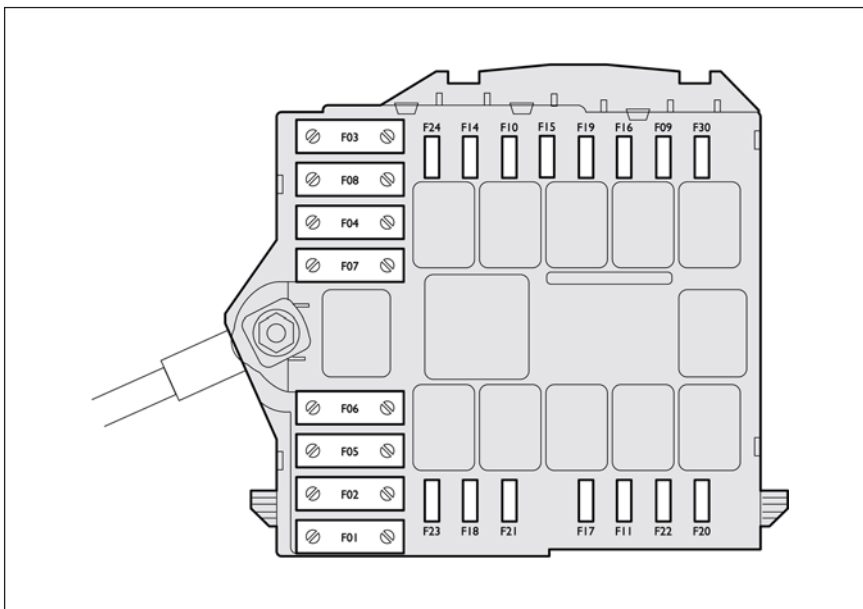


fig. 42

F0N0097m

Optional fuse box on the right central post (where provided)

To gain access to the fuse box, remove the protection cover **fig. 43**.

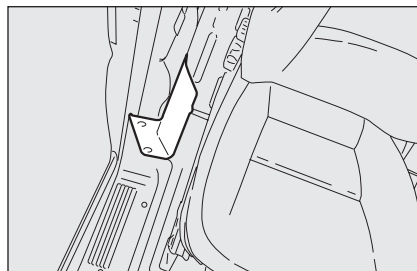


fig. 43

F0N0172m

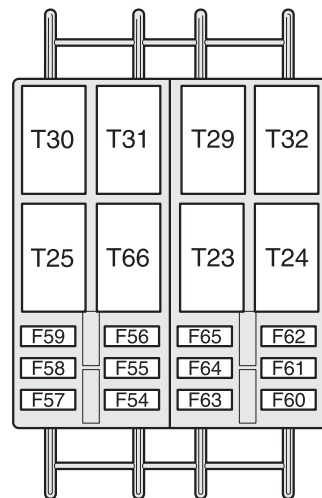


fig. 44

F0N0171m

FUSE SUMMARY TABLE

Fuse box on dashboard

USERS	FUSE	AMPERE
Right dipped beam headlight	F12	7.5
Left dipped beam headlight, Headlight aiming device	F13	7.5
Engine compartment fuse box relay, dashboard fuse box relay (+key)	F31	7.5
Minibus internal lights (emergency)	F32	10
Rear current outlet	F33	15
Absent	F34	–
Reversing lights, sevotronic control unit, Water in diesel fuel filter sensor, (+key)	F35	7.5
Central door locking (+ battery)	F36	15
Brake lights (main), Third brake light, Instrument panel (+key)	F37	7.5
Dashboard control unit relay (+ battery)	F38	10
EOBD socket, Sound System, A/C control, Alarm, Chronotachograph, Webasto timer (+battery)	F39	10
Left-hand heated window, Driver's mirror defroster	F40	15
Right-hand heated window, Passenger's mirror defroster	F41	15
ABS, ASR, ESP, Brake light control (secondary) (+key)	F42	7.5
Windscreen wiper (+key)	F43	30
Cigar lighter, Front current outlet	F44	20

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

USERS**FUSE****AMPERE**

Control on driver's door, Controls on passenger's door

F45

7.5

Absent

F46

—

Driver's power window

F47

20

Passenger's power window

F48

20

Sound System, Driver's power window, Dashboard controls,
Alarm control unit, Rain sensor (+key)

F49

7.5

Airbag (+key)

F50

7.5

A/C control, Cruise control, Chronotachograph (+key)

F51

7.5

Optional fuse box relay

F52

7.5

Instrument panel, Rear fog lights (+battery)

F53

7.5

Fuse box in engine compartment

USERS	FUSE	AMPERE
ABS pump (+battery)	F01	40
Glow plug heating (+battery)	F02	50
Ignition switch (+battery)	F03	30
Webasto control unit (+battery)	F04	20
Passenger's compartment ventilation with Webasto (+battery)	F05	20
Engine cooling fan high speed (+battery)	F06	40/60
Engine cooling fan low speed (+battery)	F07	40/50
Passenger's compartment fan (+key)	F08	40
Headlight washer pump	F09	20
Horn	F10	15
E.i. system (secondary services)	F11	15
Right main beam headlight	F14	7.5
Left main beam headlight	F15	7.5
E.i. system (+key)	F16	7.5
E.i. system (primary services)	F17	10
Engine control unit (+battery)	F18	7.5
Conditioner compressor	F19	7.5
Headlight washer pump	F20	30

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

USERS**FUSE****AMPERE**

Fuel pump

F21

15

E.i. system (primary services)

F22

20

ABS solenoid valves

F23

30

Automatic transmission 8 (+key)

F24

15

Front fog lights

F30

15

Right central post optional fuse box**USERS****FUSE****AMPERE**

Absent

F54

—

Heated seats

F55

15

Rear passenger's current outlet

F56

15

Additional heater under seat

F57

10

Sidelights

F58

10

Self-levelling suspensions (+battery)

F59

7.5

Absent

F60

—

Absent

F61

—

Absent

F62

—

Passenger's additional heater control

F63

10

Absent

F64

—

Passenger's additional heater fan

F65

30

RECHARGING THE BATTERY

IMPORTANT The battery charging procedure is described only for information purposes. This operation should be carried out by Fiat Dealership.

You are advised to recharge the battery slowly for a period of approximately 24 hours at a low amperage. Charging for too long could damage the battery. Charge the battery as follows:

- ☐ disconnect battery negative terminal;
- ☐ connect the charger cables to the battery terminals, observing the poles;
- ☐ turn on the charger;
- ☐ when you have finished, turn the charger off before disconnecting the battery;
- ☐ reconnect the terminal to the battery negative pole.



WARNING

The liquid in the battery is poisonous and corrosive. Do not let it touch the skin or eyes. Recharging the battery should be done in a well ventilated area away from naked flames or possible sources of sparks: explosion and fire risk.



WARNING

Do not attempt to charge a frozen battery: it must firstly be thawed, otherwise it may burst. If freezing has occurred, the battery should be checked by skilled personnel to make sure that the internal elements are not damaged and that the body is not cracked, with the risk of leaking poisonous and corrosive acid.

JACKING THE VEHICLE

If the vehicle is to be lifted, go to a Fiat Dealership which is equipped with the arm hoist or workshop lift.

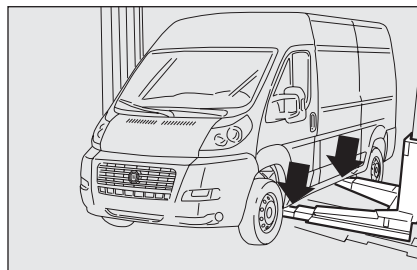


fig. 45

F0N0340m

Jack up the vehicle only by positioning the jack arms or the shop jack in the points shown in the figure.

TOWING THE VEHICLE

The vehicle has two eyes for anchoring the towing device.



WARNING

When towing, remember that without the help of the brake booster and power steering, a greater effort is required on the pedal and steering wheel. Do not use flexible cables for towing and avoid jerks. During towing operations make sure that fastening the joint to the vehicle does not damage the components in contact with it. When towing the vehicle, you must comply with the specific traffic regulations regarding the tow ring and how to tow on the road.

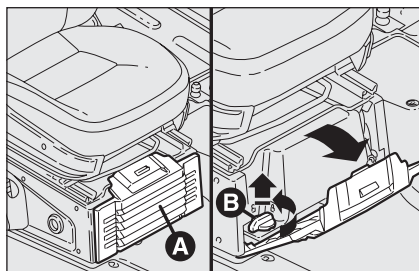


fig. 46

F0N0134m

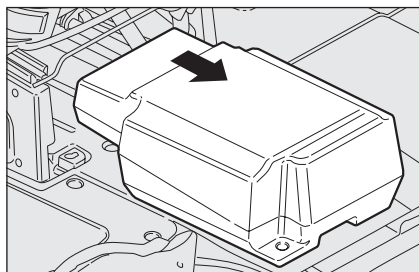


fig. 47

F0N0135m



WARNING

Do not start the engine when towing the vehicle.



WARNING

Before starting to tow, disengage the steering lock (see paragraph “Ignition device” in section “Dashboard and controls”). When towing, remember that without the help of the brake booster and power steering, a greater effort is required on the pedal and steering wheel. Do not use flexible cables for towing and avoid jerks. During towing operations make sure that fastening the joint to the vehicle does not damage the components in contact with it. When towing the vehicle, you must comply with the specific traffic regulations regarding the tow ring and how to tow on the road.

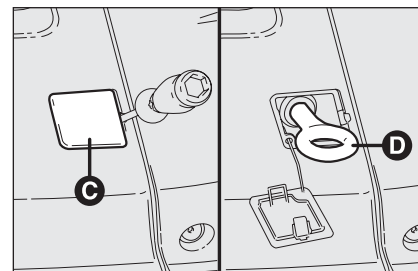


fig. 48

F0N0136m

Front ring is housed in the tool compartment under the front passenger's seat.

To use it proceed as follows:

- ☐ Open lid **A** and remove it as shown in **fig. 46**;
- ☐ turn the knob **B** counterclockwise and remove it **fig. 46** to extract the compartment **fig. 47**;

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

- ❑ take the screwdriver from the tool compartment and lever in the point shown to raise the cap **C-fig. 48**;
- ❑ Take the tow ring **D** from the tool compartment and screw it on the threaded pin **fig. 48**.

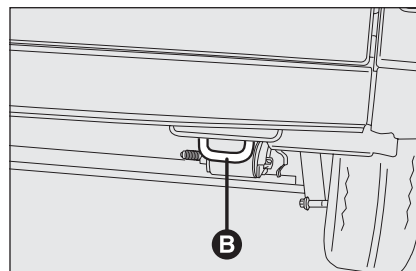


fig. 49

F0N0117m

The rear ring **B-fig. 49** is to be found in the point shown in the figure.

VEHICLE MAINTENANCE

SCHEDULED SERVICING	190
SERVICE SCHEDULE	191
ROUTINE MAINTENANCE	195
HEAVY-DUTY	195
CHECKING FLUID LEVELS.....	196
AIR FILTER	202
POLLEN FILTER	202
BATTERY	202
WHEELS AND TYRES.....	205
RUBBER HOSES	206
WINDSCREEN/REAR WINDOW WIPERS	206
BODYWORK	208
INTERIORS	210

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

SCHEDULED SERVICING

Correct maintenance is essential for ensuring long life to your vehicle at top conditions.

This is why Fiat has programmed a series of checks and maintenance operations every 40,000/45,000 km according to engine models.

It is however important to remember that scheduled servicing does not completely cover all the vehicle requirements: also in the initial period before 40,000/45,000 km service coupon and later, between one coupon and another, ordinary care is still required such as for example routine check and topping up the level of fluids, tyre pressure check, etc...

IMPORTANT The Programmed Maintenance coupons are specified by the Manufacturer. The failure to have them carried out may invalidate the warranty.

Scheduled Servicing is performed by all Fiat Dealership, at pre-established times.

If during each operation, in addition to the ones programmed, the need arises for further replacements or repairs, these may be carried out only with the explicit agreement of the Customer.

IMPORTANT You are advised to contact Fiat Dealership in the event of any minor operating faults, without waiting for the next service coupon.

If your vehicle is used frequently for towing, the interval between one service coupon and the other must be reduced.

SERVICE SCHEDULE (120 Multijet - 130 Multijet - 160 Multijet)

Thousands of km	45	90	135	180	225
Check tyre conditions/wear and adjust pressure if required	●	●	●	●	●
Check light system operation (headlights, direction indicators, hazard lights, boot lights, instrument panel warning lights, etc.)	●	●	●	●	●
Check windscreen wiper/washer operation and adjust nozzles, if required	●	●	●	●	●
Check windscreen blade position/wear	●	●	●	●	●
Check disk brake pad conditions and wear and front and rear disk brake pad wear indicator operation	●	●	●	●	●
Sight inspect conditions and soundness: Sight inspect the conditions of: bodywork, underbody protection, pipes and hoses (exhaust - fuel - brakes) - Rubber parts (boots - sleeves - bushes, etc.) - Brake and fuel system hoses	●	●	●	●	●
Sight inspect accessory drive belt conditions/tension (excluding engines provided with automatic tighteners)		●			●
Check and adjust handbrake lever stroke, if required	●	●	●	●	●
Check exhaust emissions/smoke	●	●	●	●	●
Check cleanness of locks and lever cleanness and lubrication	●	●	●	●	●
Change engine oil and oil filter	●	●	●	●	●

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

Thousands of km	45	90	135	180	225
Replace fuel filter	●	●	●	●	●
Replace air cleaner cartridge (▼)	●	●	●	●	●
Top up fluids (engine coolant - brakes - power steering - windscreen washer - etc.)	●	●	●	●	●
Check timing belt (120 - 130 Multijet versions)		●			
Replace accessory drive belt			●		
Replace timing belt (120 - 130 Multijet versions) (*)				●	
Check engine control system operation (through diagnosis socket)	●	●	●	●	●
Change brake fluid (or every 2 years)		●		●	
Change pollen filter (or every 2 years)	●	●	●	●	●

(*) Or every 4 years for particularly demanding use (cold climates, driving in the city, idling for a long time, driving on dusty roads or covered with sand and/or salt), or in any case every 5 years regardless of the km covered

(▼) If the vehicle is equipped with a specific air filter for dusty areas:

- Every 20,000 Km check-up and filter cleaning;
- Every 40,000 Km substitution of filter.

SERVICE SCHEDULE (100 Multijet)

Thousands of km	40	80	120	160	200
Check tyre conditions/wear and adjust pressure if required	●	●	●	●	●
Check electric system operation (headlights, direction indicators, hazard lights, boot light, instrument panel warning lights, etc.)	●	●	●	●	●
Check windscreen washer/wiper operation, adjust nozzles if required	●	●	●	●	●
Check windscreen blade position/wear	●	●	●	●	●
Check disk brake pad conditions and front and rear disk brake pad wear indicator operation	●	●	●	●	●
Sight inspect conditions and soundness: Sight inspect the conditions of: bodywork, underbody protection, pipes and hoses (exhaust - fuel - brakes), Rubber parts (boots - sleeves - bushes - etc.) - Brake and fuel system hoses	●	●	●	●	●
Sight inspect accessory drive belt conditions		●			●
Check and adjust handbrake lever stroke, if required	●	●	●	●	●
Check exhaust emissions/smoke	●	●	●	●	●
Check cleanness of locks and lever cleanness and lubrication	●	●	●	●	●
Change engine oil and oil filter	●	●	●	●	●
Change fuel filter	●	●	●	●	●

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

Thousands of km	40	80	120	160	200
Replace air cleaner cartridge (▼)	●	●	●	●	●
Check and top up fluids, if required (engine coolant - brakes - power steering - windscreen washer - etc.)	●	●	●	●	●
Change accessory drive belt			●		
Check engine control system operation (through diagnosis socket)	●	●	●	●	●
Change brake fluid (or every 2 years)		●		●	
Change pollen filter (or every 2 years)	●	●	●	●	●

Should prevailing use of the vehicle be under one of the following specially heavy conditions:

- ☐ trailer or caravan towing;
 - ☐ dusty roads;
 - ☐ short distances (less than 7-8 km) repeated and with external temperatures below zero;
 - ☐ frequently idling engines or long distance low speed driving (e.g. door-to-door deliveries) or in case of a long term inactivity;
 - ☐ driving in the city;
- servicing operations shall be carried out every 30,000 km

(▼) If the vehicle is equipped with a specific air filter for dusty areas:

- Every 20,000 Km check-up and filter cleaning;
- Every 40,000 Km substitution of filter.

ROUTINE MAINTENANCE

Every 1,000 km or before long journeys, check and top up if required:

- ☐ engine coolant fluid level;
- ☐ brake fluid level;
- ☐ windscreen washer fluid level;
- ☐ tyre pressure and conditions;
- ☐ light system operation (headlights, direction indicators, hazard lights, etc.);
- ☐ windscreen wiper/washer operation and windscreen/rear window blade position/wear;

Every 3,000 km check and top up if required: engine oil level.

You are recommended to use **FL Selenia**, products, designed and produced specifically for Fiat vehicles (see table “Capacities” in section “Technical specifications”).

HEAVY-DUTY

Should prevailing use of the vehicle be under one of the following specially heavy conditions:

- ☐ trailer or caravan towing;
- ☐ dusty roads;
- ☐ short distances (less than 7-8 km) repeated and with external temperatures below zero;
- ☐ frequently idling engines or long distance low speed driving (e.g. door-to-door deliveries) or in case of a long term inactivity;
- ☐ driving in the city;

carry out the following checks more frequently than required in the Service Schedule:

- ☐ check front disk brake pad conditions and wear;

- ☐ check cleanness of locks, bonnet and boot and lever cleanness and lubrication;
- ☐ sight inspect the conditions of: engine, gearbox, transmission, pipes and hoses (exhaust - fuel - brakes), rubber parts (boots, sleeves, bushes, etc.);
- ☐ check battery charge and fluid level (electrolyte);
- ☐ visual check on various drive belt conditions;
- ☐ check and replace pollen filter, if required;
- ☐ check and replace air cleaner, if required.

CHECKING FLUID



WARNING

Never smoke while working in the engine compartment; gas and inflammable vapours may be present, with the risk of fire.



When topping up take care not to confuse the various types of fluids: they are all incompatible with one another and could seriously damage the vehicle.

1. Engine coolant
2. Power steering fluid
3. Windscreen washer fluid
4. Brake fluid
5. Engine oil.

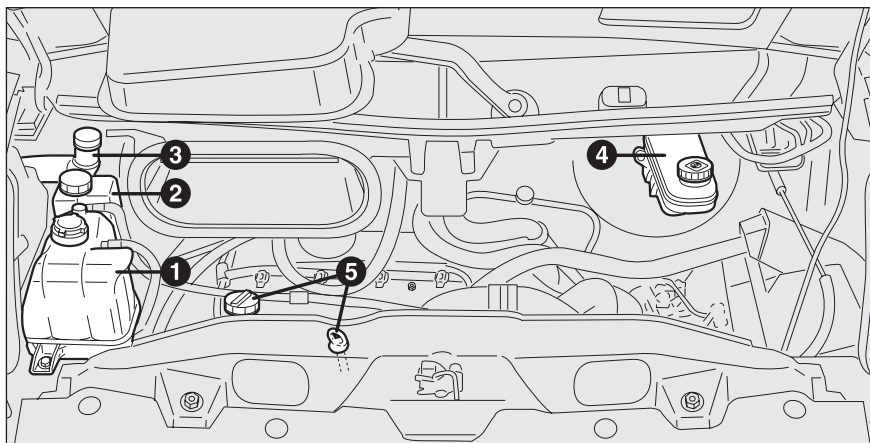


fig. 1 - 100 Multijet versions

F0N0099m

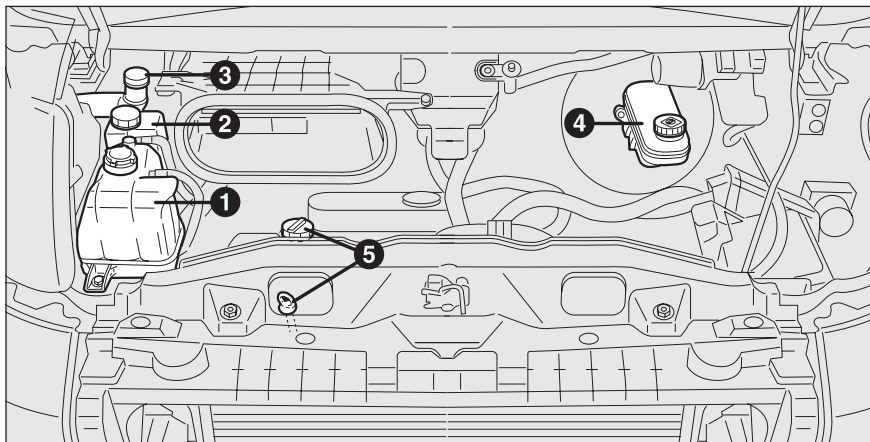


fig. 2 - 120 Multijet - 130 Multijet versions

F0N0100m



WARNING

Never smoke while working in the engine compartment; gas and inflammable vapours may be present, with the risk of fire.



When topping up take care not to confuse the various types of fluids: they are all incompatible with one another and could seriously damage the vehicle.

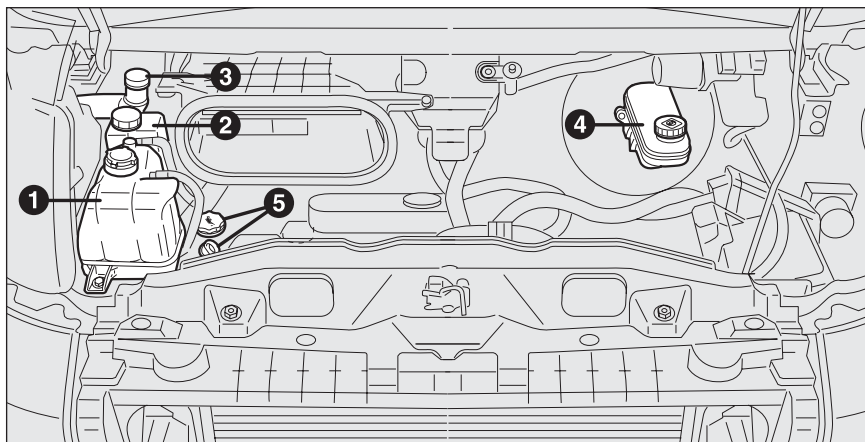


fig. 3 - I 60 Multijet versions

F0N0210m

1. Engine coolant
2. Power steering fluid
3. Windscreen washer fluid
4. Brake fluid
5. Engine oil.

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

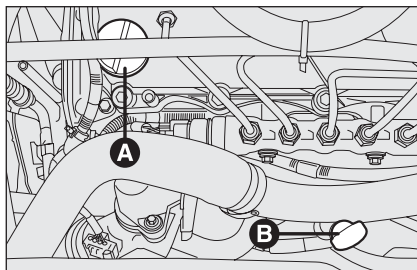


fig. 4 - 100 Multijet versions

F0N0101m

ENGINE OIL fig. 4-5-6

Check the oil level a few minutes (about 5) after the engine has stopped, with the vehicle parked on level ground.

The oil level shall be included between the **MIN** and **MAX** marks on the dipstick **B**.

The gap between the **MIN** and **MAX** marks corresponds to about one litre of oil.

If the oil level is near or even below the **MIN** mark, add oil through the filler neck **A**, until reaching the **MAX** mark.

Oil level shall never exceed the **MAX** mark.

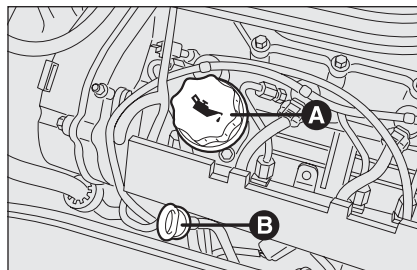


fig. 5 - 120 - 130 Multijet versions

F0N0102m

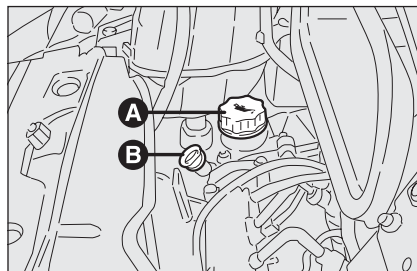


fig. 6 - 160 Multijet versions

F0N0211m

ENGINE OIL CONSUMPTION

Max engine oil consumption is usually 400 grams every 1,000 km.

When the vehicle is new, the engine needs to run in, therefore the engine oil consumption can only be considered stabilised after the first 5,000 - 6,000 km.

IMPORTANT The oil consumption depends on driving style and the conditions under which the vehicle is used.

IMPORTANT After adding or changing the oil, let the engine turn over for a few seconds and wait a few minutes after turning it off before you check the level.

**WARNING**

When the engine is hot, take care when working inside the engine compartment to avoid burns. Remember that when the engine is hot, fan may cut in: danger of injury. Scarves, ties and other loose clothing might be pulled by moving parts.



Do not add oil with specifications other than that already in the engine.



Used engine oil and filter contain harmful substances for the environment. Contact Fiat Dealership to have the oil and filter changed, as they are equipped to dispose of the waste oil and filters respecting the nature and the law.

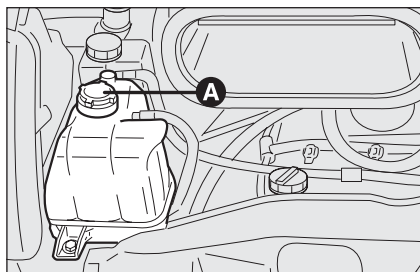


fig. 7

F0N0103m

ENGINE COOLANT fig. 7

The coolant level shall be checked with cold engine and shall be within the **MIN** and **MAX** marks on the tank.

If the level is low, pour slowly a mixture of 50% distilled water and 50% **PARAFU UP** of the FL Selenia Group through the filler neck **A** until the level reaches **MAX**.

A 50-50 mixture of **PARAFU UP** and distilled water gives freeze protection to -35°C .

For particularly hard climate conditions, we recommend use of a 60% **PARAFU UP** and 40% demineralized water mixture.



*The engine cooling system uses protective antifreeze fluid **PARAFU UP**. Use the same fluid type as that already in the cooling system when topping up. **PARAFU UP** fluid cannot be mixed with any other type of fluid. Should it happen, under no circumstances start the engine; contact a Fiat Dealership.*



WARNING

The cooling system is pressurised. If necessary, replace the cap only with another genuine one, otherwise system efficiency could be compromised. Do not remove the reservoir cap when the engine is hot: you risk scalding yourself.

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

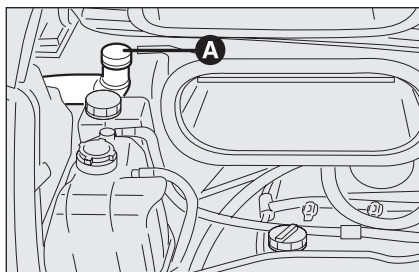


fig. 8

F0N0105m

WINDSCREEN/REAR WINDOW WASHER FLUID/ HEADLIGHT WASHERS fig. 8

To top up, remove the cap **A**.

Pour a mixture of water and **TUTELA PROFESSIONAL SC35**, in the following concentrations:

30% **TUTELA PROFESSIONAL SC35** and 70% water in summer.

50% **TUTELA PROFESSIONAL SC35** and 50% water in winter.

In case of temperatures below -20°C , use undiluted **TUTELA PROFESSIONAL SC35** fluid.

Check level through the reservoir.



WARNING

Do not travel with the windscreen washer reservoir empty: the windscreen washer is fundamental for improving visibility.



WARNING

Certain commercial additives for windscreen washers are inflammable. The engine compartment contains hot components which may set it on fire.

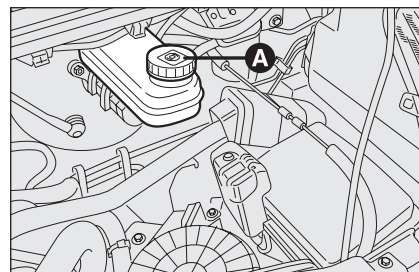


fig. 9

F0N0107m

BRAKE FLUID fig. 9

Unscrew cap **A**: check that the fluid level in the reservoir is at maximum.

Fluid level in the reservoir shall not exceed the **MAX** mark.

If fluid has to be added, it is suggested to use the brake fluid in table "Fluids and lubricants" (see chapter "Technical characteristics").

NOTE Clean accurately the tank cap **A** and the surrounding surface.

At plug opening, pay maximum attention in order to prevent any impurities from entering the tank.

For topping up, always use a funnel with integrated filter with mesh equal to or lower than 0.12 mm.

IMPORTANT Brake fluid absorbs moisture, for this reason, if the vehicle is mainly used in areas with a high degree of atmospheric humidity, the fluid should be replaced at more frequent intervals than specified in the "Service schedule".



Prevent brake fluid, which is highly corrosive, from coming into contact with painted parts. Should it happen, immediately wash with water.



WARNING

Brake fluid is poisonous and highly corrosive. In the event of accidental contact, wash the parts involved immediately with neutral soap and water, then rinse thoroughly. Call the doctor immediately if the fluid is swallowed.



WARNING

The symbol © on the container indicates synthetic brake fluid, distinguishing it from the mineral kind. Using mineral fluids irreversibly damages the special braking system rubber seals.

POWER STEERING FLUID fig. 10

Check whether the fluid level in the tank is at max. level. This operation should be carried out with the vehicle on level ground, engine not running and cold. Check whether the fluid level is at **MAX** mark on the dipstick integral with the tank cap (for cold check use the level shown on the 20 °C side on the dipstick).

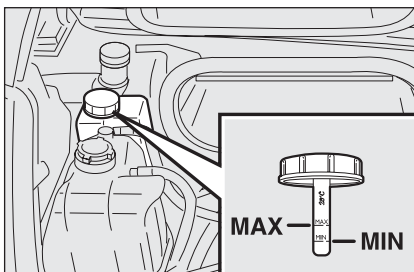


fig. 10

If the fluid level in the reservoir is below the specified level, top up with one of the products specified in table “Fluids and lubricants” in section “Technical Specifications”, proceed as follows:

- ☐ Start the engine and wait until the fluid level in the reservoir has stabilized.
- ☐ With the engine started, turn repeatedly the steering wheel fully rightwards and leftwards.
- ☐ Top up until reaching the **MAX** mark then refit the cap.



WARNING

Do not allow the power steering fluid to touch the hot parts of the engine: it is inflammable.



Power steering fluid consumption is extremely low. If the fluid level needs topping up again after a short period of time, have the system checked for leakage at a Fiat Dealership.



Do not press down the power steering with the engine running for over 8 seconds, noise and risk of damages will

result.

AIR CLEANER

Air cleaner replacement shall be carried out at Fiat Dealership.

AIR FILTER – DUSTY ROADS (where necessary)

The air filter specific for dusty areas is equipped with a visual blockage signalling device **A-fig. 11**. It is therefore necessary to periodically check the blockage sensor indicator (Please refer to the “Programmed Maintenance Plan” shown in the Chapter “Maintenance and care”)

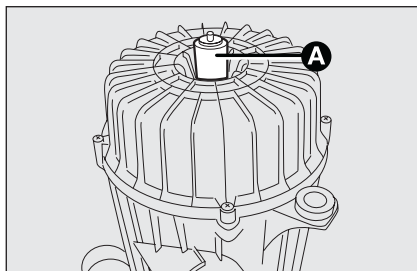


fig. 11

F0N0253m

ATTENTION: Use a jet of air so as to clean the air filter, do not use water or liquid detergents.

Such filter is specific for the versions suitable for dusty areas; therefore it is advisable to seek help from the Fiat Assistance Network for the substitution of the filter.

POLLEN FILTER

Pollen filter replacement shall be carried out at Fiat Dealership.

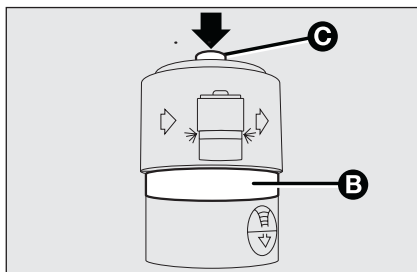


fig. 11a

F0N0254m

BATTERY

The battery is of the “Limited maintenance” type: under normal conditions of use the electrolyte does not need topping up with distilled water.

The battery is located inside the passenger's compartment in front of the pedal assembly. Remove the protection cover to find it.

Contact Fiat Dealership to have the battery checked/replaced.

CHECKING THE CHARGE fig. 12

The battery charge may be checked through the indicator **A** (where required) set on the battery cover and acting according to the colour the indicator shows.

Should the battery be not fitted with battery charge inspection device (optical electrolyte indicator), inspection operations shall be carried out by skilled personnel only.

To check the battery charge, loosen the two fastening screws and open the cover. Then, close the cover accurately avoiding pinching and short circuits.

Refer to the table below.



WARNING

The liquid in the battery is poisonous and corrosive. Avoid contact with eyes and skin. Do not bring naked flames or possible sources of sparks near the battery: risk of fire and explosion.



WARNING

Running the battery with low fluid level can damage the battery beyond repair and could also cause its explosion.

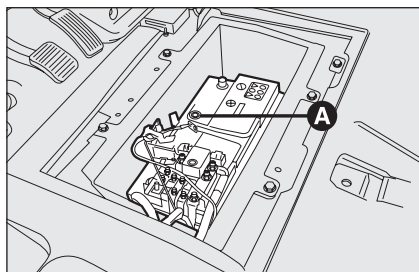


fig. 12

F0N0110m



Incorrect fitting of electrical and electronic accessories can seriously damage the vehicle.

If after buying the vehicle, you want to install electric accessories which require permanent electric supply (alarm, free-hand phone kit, etc.) contact Fiat Dealership whose qualified personnel, in addition to suggesting the most suitable devices, will evaluate the overall electric absorption, checking whether the vehicle electric system is capable of withstanding the load required, or whether it should be integrated with a more powerful battery.



Batteries contain substances that are very harmful for the environment. You are advised to have the battery changed at a Fiat Dealership, which is properly equipped for disposing of used batteries respecting nature and the law.



WARNING

If the vehicle is left inactive for long periods at cold, remove the battery and store it in a warm place to prevent freezing.

Bright white colour

Top up electrolyte

Contact Fiat Dealership

Dark colour without green area in the centre

Low charge level

Charge the battery (advisable to contact Fiat Dealership)

Dark colour with green area in the centre

Electrolyte level and charge sufficient

No action

CHANGING THE BATTERY

If required, replace the battery with a genuine spare part having the same specifications.

If a battery with different specifications is fitted, the service intervals given in the "Service schedule" in this section will no longer be valid.

Refer therefore to the instructions provided by the battery manufacturer.

IMPORTANT The charge in the battery should be checked at the start of winter to limit the risk of electrolyte freezing. This check should be carried out more frequently if the vehicle is used mainly for short trips, or if it is fitted with accessories that permanently absorb electricity even with the ignition key removed, especially in the case of after market accessories.

IMPORTANT When a tachograph is fitted and the vehicle has been parked for longer than 5 days, it is advisable to disconnect the battery negative terminal to preserve the charge status.

If the vehicle is equipped with a battery disconnection function (disconnecter), see the description of the procedure in the "Controls" paragraph in the "Dashboard and controls" chapter;

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX



WARNING

When working on the battery or near it, always wear the proper goggles.

USEFUL ADVICE FOR LENGTHENING THE LIFE OF YOUR BATTERY

To avoid draining your battery and lengthen its life, observe the following indications:

- ☐ when you park the vehicle, ensure the doors are closed properly. The ceiling lights must be off;
- ☐ turn the ceiling lights off. The vehicle however, is provided with an automatic system for switching off internal lights;

- ☐ do not keep accessories (e.g.: sound system, hazard lights, etc.) switched on for a long time when the engine is not running;
- ☐ before performing any operation on the electrical system, disconnect the battery negative cable;
- ☐ battery terminals shall always be perfectly tightened.

IMPORTANT A battery which is kept at a charge of less than 50% (optical indicator with dark colour without green area in the middle) for any length of time will be damaged by sulphation leading to a reduction in cranking power.

Moreover, this might lead to a higher risk of the battery electrolyte freezing (this may even occur at -10°C). If the vehicle is inactive for a long period of time, refer to "Vehicle inactivity", in section "Correct use of the vehicle".

If after buying the vehicle, you want to install electric accessories which require permanent electric supply (alarm, etc.) contact Fiat Dealership whose qualified personnel, in addition to suggesting the most suitable devices, will evaluate the overall electric absorption, checking whether the vehicle's electric system is capable of withstanding the load required, or whether it should be integrated with a more powerful battery.

In fact, since these devices continue absorbing energy even when the ignition key is off, they gradually run down the battery.

WHEELS AND TYRES

Check the pressure of each tyre, including the spare, every two weeks and before long journeys. The pressure should be checked with the tyre rested and cold.

It is normal for pressure to rise when you are driving. For the correct tyre inflation pressure, see “Wheels” in section “Technical specifications”.

Incorrect pressure causes abnormal tyre wear **fig. 13**:

- A** normal pressure: tread evenly worn.
- B** low pressure: tread particularly worn at the edges.
- C** high pressure: tread particularly worn in the centre.

Tyres must be replaced when the tread wears down to 1.6 mm. In any case, comply with the laws in the country where the vehicle is being driven.

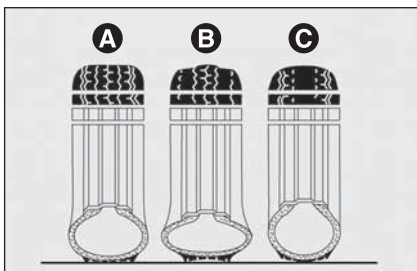


fig. 13

F0N0111m

IMPORTANT NOTES

- ☐ As far as possible, avoid sharp braking and screech starts etc. Be careful not to hit the kerb, potholes or other obstacles hard. Driving for long stretches over bumpy roads can damage the tyres;
- ☐ periodically check that the tyres have no cuts in the side wall, abnormal swelling or irregular tyre wear. If any of these occur, have the vehicle seen to at a Fiat Dealership;
- ☐ avoid overloading the vehicle when travelling: this may cause serious damage to the wheels and tyres;
- ☐ if a tyre is punctured, stop immediately and change it to avoid damage to the tyre, the rim, suspensions and steering system;

- ☐ tyres age even if they are not used much. Cracks in the tread rubber are a sign of ageing. In any case, if the tyres have been on the vehicle for over 6 years, they should be checked by specialised personnel, to see if they can still be used. Also remember to check the spare wheel;
- ☐ in the case of replacement, always fit new tyres, avoiding those of dubious origin;
- ☐ if a tyre is changed, also change the inflation valve;
- ☐ to allow even wear between the front and rear tyres, it is advisable to change them over every 10-15 thousand kilometres, keeping them on the same side of the vehicle so as to not reverse the direction of rotation.



WARNING

Remember that road holding depends also on the correct tyre inflating pressure.

**WARNING**

If the pressure is too low the tyre overheats and this can cause it serious damage.

**WARNING**

Do not cross switch the tyres, moving them from the right of the vehicle to the left and vice versa.

**WARNING**

Never submit alloy rims to repainting treatments requiring to use temperatures exceeding 150°C since the mechanical properties of the wheels could be impaired.

RUBBER HOSES

As far as the brake system and fuel rubber hoses are concerned, carefully follow the “Service schedule” in this section.

Indeed ozone, high temperatures and prolonged lack of fluid in the system may cause hardening and cracking of the hoses, with possible leaks. Careful control is therefore necessary.

WINDSCREEN

BLADES

Periodically clean the rubber part using special products; **TUTELA PROFESSIONAL SC 35** is recommended.

If the rubber blades are bent or worn they should be replaced. In any case they should be changed once a year.

A few simple notions can reduce the possibility of damage to the blades:

- ☐ if the temperature fall below zero, make sure that ice has not frozen the rubber against glass. If necessary, thaw using an antifreeze product;
- ☐ remove any snow from the glass: in addition to protecting the blades, this prevents effort on the motor and overheating;
- ☐ do not operate the windscreen wipers on dry glass.

**WARNING**

Driving with worn wiper blades is a serious hazard, because visibility is reduced in bad weather.

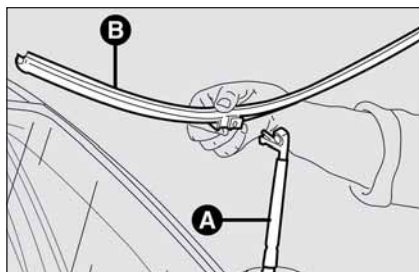


fig. 14

F0N0137m

Changing the windscreen wiper blades fig. 14

Proceed as follows:

- ☐ raise the windscreen wiper arm **A** and set the blade at 90° with the arm;
- ☐ remove the snap-fitted blade **B** from the arm **A**;
- ☐ refit the new blade and lock it.

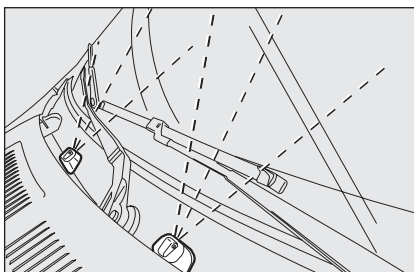


fig. 15

F0N0112m

SPRAY NOZZLES

Windscreen wiper fig. 15

If the jet of fluid is inadequate, firstly check that there is fluid in the reservoir: see “Checking fluid levels” in this section.

Then check that the nozzle holes are not clogged, if necessary use a needle.

The windscreen jets are directed by adjusting the angle of the nozzles using the special screwdriver.

Fluid jets shall be directed at about $\frac{1}{3}$ height from the window upper edge.

HEADLIGHT WASHERS

Regularly check that the spray jets are in-tact and clean.

The headlight washers are automatically switched on when the windscreen washer is operated and the headlights are on.

BODYWORK

PROTECTION FROM ATMOSPHERIC AGENTS

The main causes of corrosion are the following:

- ☐ atmospheric pollution;
- ☐ salty air and humidity (coastal areas, or hot humid climates);
- ☐ seasonal environment conditions.

Not to be underestimated is also the abrasive action of wind-borne atmospheric dust and sand and mud and gravel raised by other vehicles.

On your vehicle, Fiat implemented the best manufacturing technologies to effectively protect the bodywork against corrosion.

These include:

- ☐ Painting products and systems which give the vehicle particular resistance to corrosion and abrasion;
- ☐ Use of galvanised (or pretreated) steel sheets, with high resistance to corrosion;
- ☐ Spraying the underbody, engine compartment, wheelhouse internal parts and other parts with highly protective wax products;
- ☐ Spraying of plastic parts, with a protective function, in the more exposed points: underdoor, inner fender parts, edges, etc;
- ☐ Use of "open" boxed sections to prevent condensation and pockets of moisture from triggering rust inside.

BODY AND UNDERBODY WARRANTY

Your vehicle is covered by warranty against perforation due to rust of any original element of the structure or body.

For the general terms of this warranty, refer to Fiat Warranty Booklet.

ADVICE FOR PRESERVING THE BODYWORK

Paint

Paintwork does not only serve an aesthetic purpose, but also protects the underlying sheet metal.

In the case of deep scrapes or scores, you are advised to have the necessary touching up carried out immediately to avoid the formation of rust. For touching up use only original products (see "Bodywork paint identification plate" in section "Technical specifications").

Normal paint maintenance consists in washing at intervals depending on the conditions and environment of use. For example, in highly polluted areas, or if the roads are sprayed with salt, it is wise to wash the vehicle more frequently.

To correctly wash the vehicle:

- ☐ remove the aerial from the roof to prevent damage to it if the vehicle is washed in an automatic system;
- ☐ wash the body using a low pressure jet of water;
- ☐ wipe a sponge with a slightly soapy solution over the bodywork, frequently rinsing with the sponge;
- ☐ rinse well with water and dry with a jet of air or a chamois leather.

When drying, take particular care with the less visible parts like door surrounds, bonnet and around the headlights where water may stagnate. The vehicle should not be taken to a closed area immediately, but left in the open so that residual water can evaporate.

Do not wash the vehicle after it has been left in the sun or with the bonnet hot: this may alter the shine of the paintwork.

Exterior plastic parts must be cleaned in the same way as the rest of the vehicle.

Where possible, do not park under trees; the resinous substance many species release give the paint a dull appearance and increase the possibility of triggering rust processes.

For best paint protection, from time to time polish the bodywork with special waxes; when paint becomes mat due to smog, polish the bodywork with polish waxes that have also a light abrasive effect.

IMPORTANT Bird droppings must be washed off immediately and thoroughly as the acid they contain is particularly aggressive.



Detergents cause water pollution. Therefore the engine compartment should be washed in areas equipped for collecting and purifying the liquid used in the washing process.

Windows

Use specific window cleaner products. Use also clean cloths to avoid scratching the glass or damaging the transparency.

IMPORTANT The inside of the rearscreen should be wiped gently with a cloth in the direction of the filaments to avoid damaging the heating device.

Engine compartment

At the end of the winter the engine compartment should be carefully washed, without directing the jet against electronic control units. Contact a specialised workshop to have this done.

IMPORTANT The vehicle should be washed with the engine cold and the ignition key at **STOP**. After washing make sure that the various protections (e.g. rubber caps and various covers) have not been damaged or removed.

Front headlights

IMPORTANT Never use aromatic substances (e.g.: petrol) or ketones (e.g.: acetone) for cleaning front headlight plastic lens.

INTERIORS

Periodically check that water is not trapped under the mats (due to water dripping off shoes, umbrellas, etc.) which could cause oxidation of the sheet metal.



WARNING

Never use flammable products like oil ether or rectified petrol for cleaning vehicle interiors. Electrostatic discharges generated by rubbing during cleaning operations could cause fire.



WARNING

Do not keep aerosol cans in the vehicle: they might explode. Aerosol cans must never be exposed to a temperature above 50° C. The temperature inside the vehicle exposed to the sun may go well beyond that figure.

CLEANING SEATS AND FABRIC AND VELVET PARTS

Use a soft brush or vacuum cleaner to remove dust. Velvet is cleaned better if the brush is moistened.

Rub the seats with a sponge moistened with a solution of water and neutral detergent.



Fabric upholstery of your Fiat Ducato is purpose-made to withstand common wear resulting from normal use of the vehicle. It is however absolutely necessary to prevent hard and/or prolonged scratching/scraping caused by clothing accessories like metallic buckles, studs, "Velcro" fixings, etc. that stressing locally the fabric could break yarns and damage the upholstery as a consequence.

INTERIOR PLASTIC PARTS

For routine cleaning of interior plastic parts use a soft cloth moistened with water and neutral soap. Remove grease or persisting stains using appropriate solvent-free products designed to preserve appearance and colour of plastic components.

IMPORTANT Never use spirit or petroleum to clean the instrument panel.

STEERING WHEEL/GEAR LEVER KNOB WITH GENUINE LEATHER COVERING

These components shall only be cleaned with water and neutral soap.

Never use spirit or alcohol-based products.

Before using special products for cleaning interiors, read carefully label instructions and indications to make sure they are free from spirit and/or alcohol-based substances.

If when cleaning the windscreen with special glass products, some drops fall on the leather covering of the steering wheel/gear lever knob remove them immediately and then clean with water and neutral soap.

IMPORTANT Take the utmost care when engaging the steering lock to prevent scratching the leather covering.

TECHNICAL SPECIFICATIONS

IDENTIFICATION DATA	212
ENGINE CODES - BODYWORK VERSIONS	214
ENGINE	216
FUEL FEED	217
TRANSMISSION	217
BRAKES	218
SUSPENSIONS	218
STEERING	218
WHEELS	219
DIMENSIONS	223
PERFORMANCE	229
WEIGHTS	230
CAPACITIES	261
FLUIDS AND LUBRICANTS	262
FUEL CONSUMPTION	264
CO ₂ EMISSIONS	265
RADIO FREQUENCY REMOTE CONTROL: MINISTERIAL CERTIFICATIONS	266

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

IDENTIFICATION DATA

You are advised to note the identification codes. The identification data stamped and given on the plates and their position are the following:

- ☐ Model plate.
- ☐ Chassis marking.
- ☐ Bodywork paint identification plate.
- ☐ Engine marking.

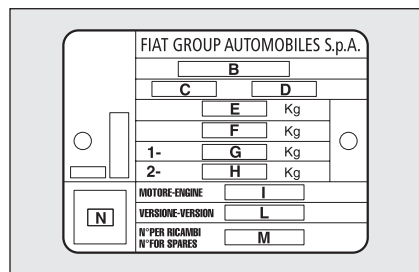


fig. I

FON0333m

MODEL PLATE fig. I

The plate is to be found on the front cross member of the engine compartment and it bears the following identification data:

- B** Homologation number.
- C** Vehicle type code.
- D** Chassis number.
- E** Maximum vehicle weight fully loaded.
- F** Maximum vehicle weight fully loaded with trailer.
- G** Maximum vehicle weight on front axle.

- H** Maximum vehicle weight on rear axle.
- I** Engine type.
- L** Body version code.
- M** Spare part code.
- N** Smoke opacity index.

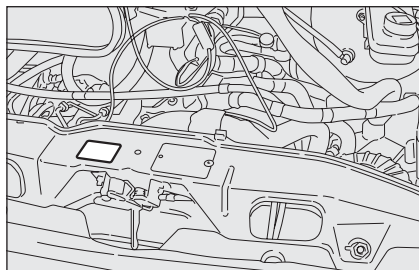


fig. 2

F0N0160m

BODYWORK PAINT IDENTIFICATION PLATE fig. 2

The plate is to be found on the front cross member of the engine compartment and it bears the following identification data:

- A** Paint manufacturer.
- B** Colour name.
- C** Fiat colour code.
- D** Respray and touch up code.

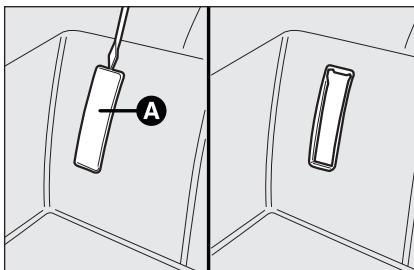


fig. 3

F0N0162m

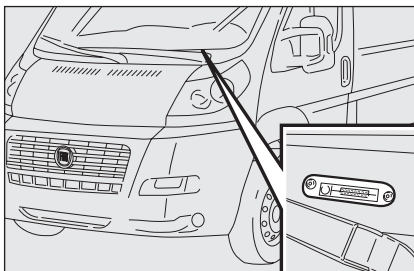


fig. 4

F0N0338m

CHASSIS MARKING fig. 3

These are to be found respectively: on the internal wheelhouse on passenger's side **A**-fig. 3 and on the bottom of the wind-screen fig. 4.

- ☐ vehicle model;
- ☐ chassis number.

ENGINE MARKING

Engine marking is stamped on the cylinder block and includes the model and the serial number.

ENGINE CODES - BODYWORK VERSIONS

Versions	Engine code
I100 Multijet	4HV
I120 Multijet	SOFIM FIAE048ID
I130 Multijet	SOFIM FIAE048IN
I160 Multijet	SOFIM FICE048ID

Below is an example of body version with relevant key valid for any body version:

Key:	250	A	A	M	F	A	AX
MODEL	_____						
CAPACITY	_____						
ENGINE	_____						
TRANSMISSION/DRIVING AXLES	_____						
BODYWORK	_____						
WHEELBASE	_____						
VERSION	_____						

CAPACITY

- A** 3,000 kg
- B** 3,300 kg
- C** 3,500 kg LIGHT
- D** 3,500 kg HEAVY
- E** 4,005 kg

ENGINES

- A** 100 Multijet
- C** 120 Multijet
- D** 160 Multijet
- E** 130 Multijet

TRANSMISSION

- M** Mechanical gearbox
- A** Automatic gearbox

BODYWORK

- A** Chassis-cab chassis
- B** Chassis without cab
- C** Chassis-cab floor
- D** Body
- E** Schoolbus for primary school
- L** Schoolbus for secondary school
- F** Van
- G** Long cab body
- H** Long cab chassis
- M** Minibus
- P** Panorama
- R** Mixed 6/9 seats
- U** Chassis without cab "Floor"

WHEELBASE

- A** Short wheelbase
- B** Medium wheelbase
- C** Long wheelbase
- D** Medium long wheelbase

ENGINE

GENERAL		100 Multijet	120 Multijet	130 Multijet	160 Multijet
Engine code		4HV	Sofim FIAE0481D	Sofim FIAE0481N	Sofim FICE0481D
Cycle		Diesel	Diesel	Diesel	Diesel
Number and layout of cylinders		4 in line	4 in line	4 in line	4 in line
Piston bore and stroke	mm	86 x 94.6	88 x 94	88 x 94	95.8 x 104
Total displacement	cm ³	2198	2287	2287	2999
Compression ratio		17.5	19 ± 0.5	19 ± 0.5	19
Maximum power (EEC)	kW	74	88	95.5	115.5
	HP	100	120	130	157
corresponding ratio	rpm	2900	3600	3600	3500
Maximum torque (EEC)	Nm	250	320	320	400
corresponding ratio	rpm	1500	2000	2000	1600
Fuel		Diesel fuel for motor vehicles (Specification EN590)	Diesel fuel for motor vehicles (Specification EN590)	Diesel fuel for motor vehicles (Specification EN590)	Diesel fuel for motor vehicles (Specification EN590)

FUEL FEED

Fuel feed	Direct injection “Common Rail”
-----------	--------------------------------



WARNING

Modifications or repairs to the fuel feed system that are not carried out properly or do not take the system's technical specifications into account can cause malfunctions leading to the risk of fire.

TRANSMISSION

	100 Multijet	120 Multijet - 130 Multijet - 160 Multijet
Gearbox	Five forward gears and reverse with synchromesh for forward gear engagement	Six forward gears and reverse with synchromesh for forward gear engagement
Clutch	Self-adjusting pedal without idle stroke	
Drive	Front	

BRAKES

Service brakes:

– front

self-ventilating disc

– rear

disc

Parking brake

controlled by hand lever, it works on rear brakes

IMPORTANT Water, ice and antifreeze salt on roads may deposit on the brake discs thus reducing braking efficiency at first braking.

SUSPENSIONS

Front

Mc Pherson independent wheels

Rear

rigid tubular axle type; lengthways single blade

STEERING

Type

rack and pinion with hydraulic power steering

Minimum
steering cycle

m

**Short
wheelbase**

11.06

**Medium
wheelbase**

12.46

**Medium long
wheelbase**

13.54

**Long
wheelbase**

14.28

WHEELS

RIMS AND TYRES

Pressed steel or alloy rims. Tubeless tyres with radial carcass. The homologated tyres are listed in the Log book.

IMPORTANT In the event of discrepancies between the information provided on this “Owner handbook” and the “Log book”, consider the specifications shown in the log book only.

To ensure safety of the vehicle in movement, it must be fitted with tyres of the same make and type on all wheels.

IMPORTANT Do not use inner tubes with Tubeless tyres.

SPARE WHEEL

Printed steel rim.

Tubeless tyre (same as those fitted).

WHEEL GEOMETRY

Front wheel toe-in measured from rim to rim: -1 ± 1 mm

The values refer to the vehicle in running order.

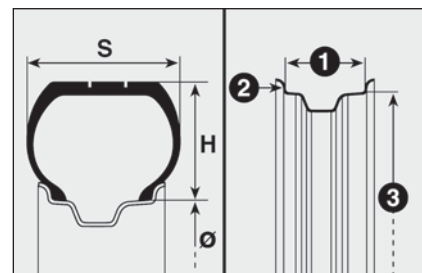


fig. 4

FON0113m

UNDERSTANDING TYRE MARKING fig. 4

Example: 215/70 R 15 109S

215 = Nominal width (S, distance between sidewalls in mm).

70 = Percentage height/width ratio (H/S).

R = Radial tyre.

15 = Rim diameter in inches (Ø).

109 = Load rating (capacity).

S = Maximum speed rating.

Maximum speed rating**Q** = up to 160 km/h.**R** = up to 170 km/h.**S** = up to 180 km/h.**T** = up to 190 km/h.**U** = up to 200 km/h.**H** = up to 210 km/h.**V** = up to 240 km/h.**Maximum speed rating
for snow tyres****QM + S** = up to 160 km/h.**TM + S** = up to 190 km/h.**HM + S** = up to 210 km/h.**Load rating (capacity)****70** = 335 kg**71** = 345 kg**72** = 355 kg**73** = 365 kg**74** = 375 kg**75** = 387 kg**76** = 400 kg**77** = 412 kg**78** = 425 kg**79** = 437 kg**80** = 450 kg**81** = 462 kg**82** = 475 kg**83** = 487 kg**84** = 500 kg**85** = 515 kg**86** = 530 kg**87** = 545 kg**88** = 560 kg**89** = 580 kg**90** = 600 kg**91** = 615 kg**UNDERSTANDING RIM
MARKING fig. 4****Example: 6J x 15 ET43**6,00 = rim width in inches **1**.**J** = rim drop centre outline (side projection where the tyre bead rests) **2**.**15** = rim nominal diameter in inches (corresponds to diameter of the tyre to be mounted) **3** = Ø.**ET43** = wheel camber angle (distance between the disc/rim supporting plane and the wheel rim centre line).

Versions	Rims	Standard tyres
Ducato (excluding free time)	6J x 15" - H2	215/70 R15C 109/107S 225/70 R15C 112/110S
Ducato (free time)	6J x 15" - H2	215/70 R15CP 109/107Q
Ducato Maxi (excluding free time)	6J x 16" - H2	215/75 R16C 116/114R 225/75 R16C 118/116R
Ducato Maxi (free time)	6J x 16" - H2	225/75 R16CP 116/114Q

If winter tyres M+S with speed index lower than "S" for 15 inches wheels and lower than "R" for 16 inches wheels are used, it is necessary to respect the max speed of the vehicle according to the following table: max. speed index.

IMPORTANT Use only the tyres indicated on the plating certificate of the vehicle.

If a class C tyre is used on a Camping vehicle, it is necessary to use wheels provided with metallic inflation valve. In the event of replacement, always use Camping type tyres.

COLD TYRE INFLATION PRESSURE (bar)

	Application	Front	Rear
215/70 R15	3000 PTT(*) Light with standard tyres, PANORAMA excluded	4.0 ± 0.05	4.0 ± 0.05
	3300 PTT(*) Light / 3500 PTT(*) Light with standard tyres	4.1 ± 0.05	4.5 ± 0.05
215/70 R15	PANORAMA with standard tyres	4.1 ± 0.05	4.5 ± 0.05
225/70 R15	3000 PTT(*) Light with oversize tyres, PANORAMA excluded	4.0 ± 0.05	4.0 ± 0.05
	3300 PTT(*) Light / 3500 PTT(*) Light with oversize tyres	4.1 ± 0.05	4.5 ± 0.05
225/70 R15 C	Winter tyres M+S class C on Camping vehicle	4.3 ± 0.05	4.75 ± 0.05
225/70 R15	PANORAMA with oversize tyres	4.1 ± 0.05	4.5 ± 0.05
215/70 R15 CP	Light range with Camping tyres	5.0 ± 0.05	5.5 ± 0.05
215/75 R16	Heavy range with standard tyres	4.5 ± 0.05	5.0 ± 0.05
225/75 R16	Heavy range with oversize tyres	4.5 ± 0.05	5.0 ± 0.05
225/75 R16 C	Winter tyres M+S class C on Camping vehicle	5.2 ± 0.05	5.2 ± 0.05
225/75 R16 CP	Heavy range with Camping tyres	5.5 ± 0.05	5.5 ± 0.05

(*) Total weight on ground

Add +0.3 bar to the prescribed inflation pressure when the tyres are warm. Recheck pressure value with cold tyres.

With snow tyres, add +0.2 bar to the inflation pressure value prescribed for standard tyres.

DIMENSIONS

VAN VERSION

Dimensions are expressed in mm and refer to the vehicle fitted with standard tyres.

Height is intended on an unladen vehicle.

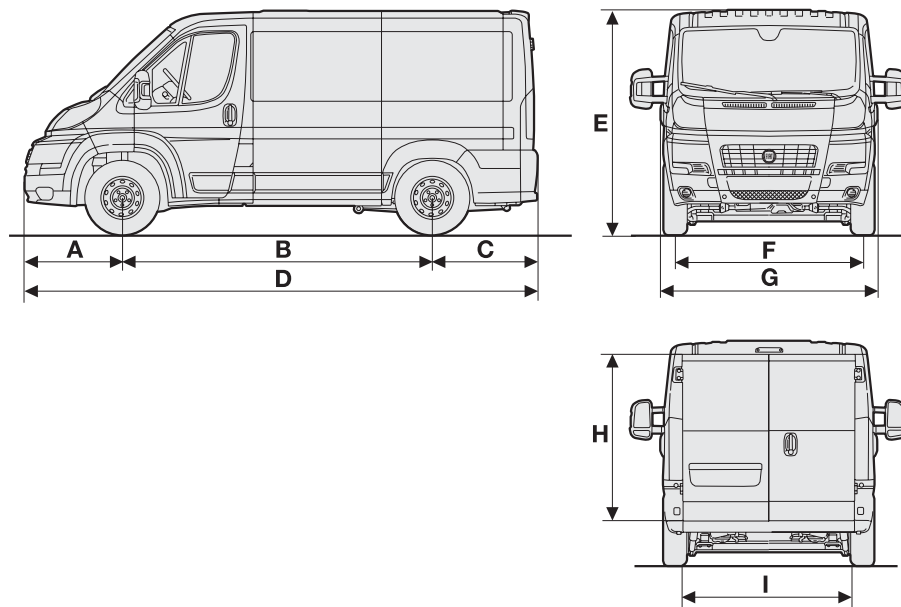


fig. 5

F0N0341m

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

Versions	Van			
	CHI	MHI MH2	LH2 LH3	XLH2 XLH3
A	948	948	948	948
B	3000	3450	4035	4035
C	1015	1015	1015	1380
D	4963	5413	5998	6363
E	2254	2254/2524	2524/2764	2524/2764
F	1810	1810	1810	1810
G	2050	2050	2050	2050
H	–	–	–	–
I	1790	1790	1790	1790

Dimensions vary according to the version, within the limits indicated above

TRUCK VERSION

Dimensions are expressed in mm and refer to the vehicle fitted with standard tyres.

Height is intended on an unladen vehicle.

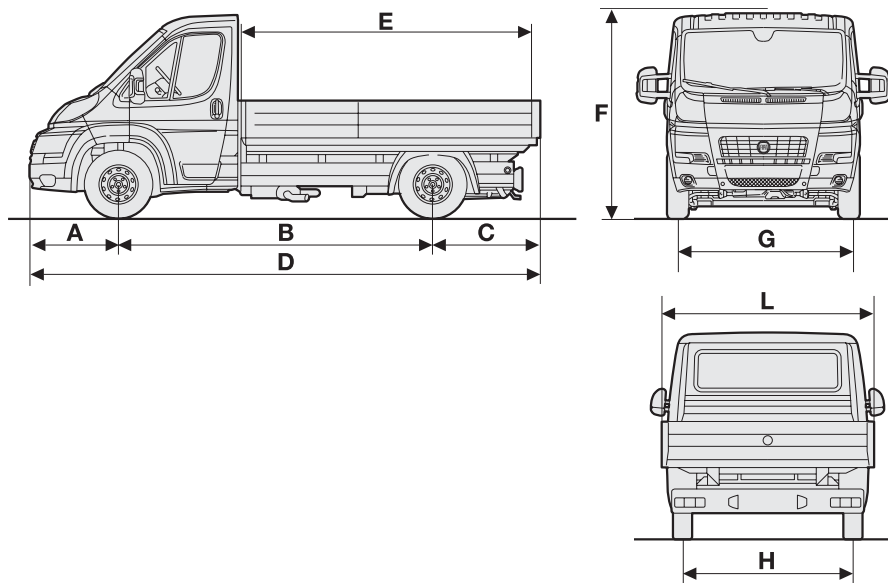


fig. 6

F0N0342m

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

Versions	Body				Chassis-cab chassis			
	CHI	MHI	LHI	XLHI	CHI	MHI MLHI	LHI	XLHI
A	948	948	948	948	948	948	948	948
B	3000	3450	4035	4035	3000	3450/3800	4035	4035
C	1345	1345	1345	1710	960	960	960	1325
D	5293	5743	6328	6693	4908	5358/5708	5943	6308
E	2798	3248	3833	4198	—	—	—	—
F	2254	2254	2254	2254	2254	2254	2254	2254
G	1810	1810	1810	1810	1810	1810	1810	1810
H	1790	1790	1790	1790	1790÷1980	1790÷1980	1790÷1980	1790÷1980
L	2100	2100	2100	2100	2050	2050	2050	2050

Dimensions vary according to the version, within the limits indicated above

Versions	Chassis cowl chassis				Chassis-cab special			
	CHI	MHI MLHI	LHI	XLHI	CHI	MHI MLHI	LHI	XLHI
A	925	925	925	925	948	948	948	948
B	3000	3450/3800	4035	4035	3000	3450/3800	4035	4035
C	860	860	860	1225	880	880	880	1245
D	4785	5235/5585	5820	6185	4828	5278/5628	5863	6228
E	—	—	—	—	—	—	—	—
F	—	—	—	—	2254	2254	2254	2254
G	1810	1810	1810	1810	1810	1810	1810	1810
H	1790÷1980	1790÷1980	1790÷1980	1790÷1980	1790÷1980	1790÷1980	1790÷1980	1790÷1980
L	2050	2050	2050	2050	2050	2050	2050	2050

Dimensions vary according to the version, within the limits indicated above

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

Versions	Chassis cowl special			
	CHI	MHI MLHI	LHI	XLHI
A	925	925	925	925
B	3000	3450/3800	4035	4035
C	880	880	880	1245
D	4805	5255/5605	5840	6205
G	1810	1810	1810	1810
H	1790÷1980	1790÷1980	1790÷1980	1790÷1980
L	2050	2050	2050	2050

Dimensions vary according to the version, within the limits indicated above

PERFORMANCE

Top speeds allowable after running in km/h.

		100 Multijet	120 Multijet	130 Multijet	160 Multijet
FURGONE	CHI-MHI	140	155	—	165
	MH2-LH2 XLH2	135	150	—	160
	LH3-XLH3	130	145	—	155
AUTOCARRI	CHI	140	155	160	161 (*) - 165 (▼)
	MHI-MLHI	140	155	160	161 (*) - 165 (▼)
	LHI-XLHI	140	155	160	161 (*) - 165 (▼)

(*) Heavy version

(▼) Light version

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

VAN WEIGHTS

Weights (kg) Versions 3,000 kg capacity (***)

Weight empty (including fluids,
90% fuel in the tank and no optional)

100 Multijet

120 Multijet

160 Multijet

1845 ÷ 1910

1860 ÷ 1925

1910 ÷ 1975

Payload (*) including the driver:

1090 ÷ 1155

1075 ÷ 1140

1025 ÷ 1090

Maximum admitted loads (**)

– front axle:

1630

1630

1630

– rear axle:

1650

1650

1650

– total:

3000

3000

3000

Towable loads

– trailer with brakes:

2000

2500

2500

– trailer without brakes:

750

750

750

Maximum load on tow hitch
(trailer with brakes):

100

100

100

Max. roof load
(uniformly distributed)

150

150

150

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

(***) The figures given refer to panelled and glazed vans with medium and short wheelbase, both high and low sided.

VAN WEIGHTS

Weights (kg) Versions 3,300 kg capacity (***)	100 Multijet	120 Multijet	160 Multijet
Weight empty (including fluids, 90% fuel in the tank and no optional)	1845 ÷ 1985	1860 ÷ 2000	1910 ÷ 2050
Payload (*) including the driver:	1315 ÷ 1455	1300 ÷ 1440	1250 ÷ 1390
Maximum admitted loads (**)			
– front axle:	1750	1750	1750
– rear axle:	1900	1900	1900
– total:	3300	3300	3300
Towable loads			
– trailer with brakes:	2000	2500	2500
– trailer without brakes:	750	750	750
Maximum load on tow hitch (trailer with brakes):	100	100	100
Max. roof load (uniformly distributed)	150	150	150

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

(***) The figures given refer to panelled and glazed vans with medium and short wheelbase, both high and low sided.

VAN WEIGHTS

Weights (kg) Versions 3,500 kg capacity (***)

Weight empty (including fluids,
90% fuel in the tank and no optional)

100 Multijet

120 Multijet

160 Multijet

1845 ÷ 1985

1860 ÷ 2000

1910 ÷ 2050

Payload (*) including the driver:

1515 ÷ 1655

1500 ÷ 1640

1450 ÷ 1590

Maximum admitted loads (**)

– front axle:

1850

1850

1850

– rear axle:

2000

2000

2000

– total:

3500

3500

3500

Towable loads

– trailer with brakes:

2000

2500

2500

– trailer without brakes:

750

750

750

Maximum load on tow hitch
(trailer with brakes):

100

100

100

Max. roof load
(uniformly distributed)

150

150

150

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

(***) The figures given refer to panelled and glazed vans with medium and short wheelbase, both high and low sided.

VAN WEIGHTS (HEAVY version)

Weights (kg) Versions 3,500 kg capacity (***)	120 Multijet	160 Multijet
Weight empty (including fluids, 90% fuel in the tank and no optional)	1940 ÷ 2090	1990 ÷ 2140
Payload (*) including the driver:	1410 ÷ 1560	1360 ÷ 1510
Maximum admitted loads (**)		
– front axle:	2100	2100
– rear axle:	2400	2400
– total:	3500	3500
Towable loads		
– trailer with brakes:	3000	3000
– trailer without brakes:	750	750
Maximum load on tow hitch (trailer with brakes):	120	120
Max. roof load (uniformly distributed)	150	150

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

(***) The figures given refer to panelled and glazed vans with medium and short wheelbase, both high and low sided.

VAN WEIGHTS (HEAVY version)

Weights (kg) Versions 4,000 kg capacity (***)

Weight empty (including fluids,
90% fuel in the tank and no optional)

120 Multijet

160 Multijet

Payload (*) including the driver:

Maximum admitted loads (**)

– front axle:

– rear axle:

– total:

Towable loads

– trailer with brakes:

– trailer without brakes:

Maximum load on tow hitch
(trailer with brakes):

Max. roof load
(uniformly distributed)

2010 ÷ 2135

2060 ÷ 2185

1865 ÷ 1990

1815 ÷ 1940

2100

2100

2400

2400

4000

4000

2500

2500

750

750

100

100

150

150

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

(***) The figures given refer to panelled and glazed vans with medium and short wheelbase, both high and low sided.

TRUCK BODY WEIGHTS

Weights (kg) Versions 3,000 kg capacity	100 Multijet	120 Multijet	160 Multijet
Weight empty (including fluids, 90% fuel in the tank and no optional)	1795 ÷ 1840	1810 ÷ 1855	1860 ÷ 1905
Payload (*) including the driver:	1125 ÷ 1160	1125 ÷ 1145	1095 ÷ 1140
Maximum admitted loads (**) – front axle:	1630	1630	1630
– rear axle:	1650	1650	1650
– total:	2920/3000	2935/3000	2935/3000
Towable loads – trailer with brakes:	2000	2500	2500
– trailer without brakes:	750	750	750
Maximum load on tow hitch (trailer with brakes):	100	100	100

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

TRUCK BODY WEIGHTS

Weights (kg)

Versions 3,300 kg capacity

Weight empty (including fluids,
90% fuel in the tank and no optional)

100 Multijet

120 Multijet

160 Multijet

1795 ÷ 1895

1810 ÷ 1910

1860 ÷ 1960

Payload (*) including the driver:

1405 ÷ 1435

1390 ÷ 1435

1340 ÷ 1440

Maximum admitted loads (**)

– front axle:

1750

1750

1750

– rear axle:

1900

1900

1900

– total:

3230/3300

3245/3300

3245/3300

Towable loads

– trailer with brakes:

2000

2500

2500

– trailer without brakes:

750

750

750

Maximum load on tow hitch
(trailer with brakes):

100

100

100

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

TRUCK BODY WEIGHTS

Weights (kg) Versions 3,500 kg capacity	100 Multijet	120 Multijet	160 Multijet
Weight empty (including fluids, 90% fuel in the tank and no optional)	1795 ÷ 1895	1810 ÷ 1910	1860 ÷ 1960
Payload (*) including the driver:	1535 ÷ 1605	1535 ÷ 1590	1540 ÷ 1640
Maximum admitted loads (**) – front axle:	1850	1850	1850
– rear axle:	2000	2000	2000
– total:	3330/3500	3345/3500	3345/3500
Towable loads – trailer with brakes:	2000	2500	2500
– trailer without brakes:	750	750	750
Maximum load on tow hitch (trailer with brakes):	100	100	100

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

TRUCK BODY WEIGHTS (HEAVY version)

Weights (kg)

Versions 3,500 kg capacity

Weight empty (including fluids,
90% fuel in the tank and no optional)

I 20 Multijet

I 60 Multijet

Payload (*) including the driver:

Maximum admitted loads (**)

– front axle:

– rear axle:

– total:

Towable loads

– trailer with brakes:

– trailer without brakes:

Maximum load on tow hitch
(trailer with brakes):

1895 ÷ 1985

1945 ÷ 2035

1515 ÷ 1605

1465 ÷ 1555

2100

2100

2400

2400

3500

3500

2500

2500

750

750

120

120

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

TRUCK BODY WEIGHTS (HEAVY version)

Weights (kg) Versions 4,000 kg capacity	I 20 Multijet	I 60 Multijet
Weight empty (including fluids, 90% fuel in the tank and no optional)	1895 ÷ 1985	1945 ÷ 2035
Payload (*) including the driver:	2015 ÷ 2105	1965 ÷ 2055
Maximum admitted loads (**)		
– front axle:	2100	2100
– rear axle:	2400	2400
– total:	4000	4000
Towable loads		
– trailer with brakes:	2500	2500
– trailer without brakes:	750	750
Maximum load on tow hitch (trailer with brakes):	100	100

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

CHASSIS-CAB CHASSIS WITH FLOOR WEIGHTS

Weights (kg)

Versions 3,000 kg capacity

	100 Multijet	120 Multijet
Weight empty (including fluids, 90% fuel in the tank and no optional)	1600	1615
Maximum admitted loads (**)		
– front axle:	1630	1630
– rear axle:	1650	1650
– total:	3000	3000
Towable loads		
– trailer with brakes:	2000	2500
– trailer without brakes:	750	750
Maximum load on tow hitch (trailer with brakes):	100	100

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

CHASSIS-CAB CHASSIS WITH FLOOR WEIGHTS

Weights (kg) Versions 3,300 kg capacity

	100 Multijet	120 Multijet
Weight empty (including fluids, 90% fuel in the tank and no optional)	1580 ÷ 1615	1595 ÷ 1630
Maximum admitted loads (**)		
– front axle:	1750	1750
– rear axle:	1900	1900
– total:	3300	3300
Towable loads		
– trailer with brakes:	2000	2500
– trailer without brakes:	750	750
Maximum load on tow hitch (trailer with brakes):	100	100

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

CHASSIS-CAB CHASSIS WITH FLOOR WEIGHTS

Weights (kg)

Versions 3,500 kg capacity

	100 Multijet	120 Multijet
Weight empty (including fluids, 90% fuel in the tank and no optional)	1580 ÷ 1615	1595 ÷ 1630
Maximum admitted loads (*)		
– front axle:	1850	1850
– rear axle:	2000	2000
– total:	3500	3500
Towable loads		
– trailer with brakes:	2000	2500
– trailer without brakes:	750	750
Maximum load on tow hitch (trailer with brakes):	100	100

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

CHASSIS-CAB CHASSIS WITH FLOOR WEIGHTS (HEAVY version)

Weights (kg) Versions 3,500 kg capacity	120 Multijet	160 Multijet
Weight empty (including fluids, 90% fuel in the tank and no optional)	1655 ÷ 1685	1705 ÷ 1735
Payload (*) including the driver:	1815 ÷ 1845	1765 ÷ 1795
Maximum admitted loads (**)		
– front axle:	2100	2100
– rear axle:	2400	2400
– total:	3500	3500
Towable loads		
– trailer with brakes:	3000	3000
– trailer without brakes:	750	750
Maximum load on tow hitch (trailer with brakes):	120	120

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

CHASSIS-CAB CHASSIS WITH FLOOR WEIGHTS (HEAVY version)

Weights (kg)

Versions 4,000 kg capacity

Weight empty (including fluids,
90% fuel in the tank and no optional)

120 Multijet

160 Multijet

1655 ÷ 1685

1705 ÷ 1735

Payload (*) including the driver:

2315 ÷ 2345

2265 ÷ 2295

Maximum admitted loads (**)

– front axle:

2100

2100

– rear axle:

2400

2400

– total:

4000

4000

Towable loads

– trailer with brakes:

2500

2500

– trailer without brakes:

750

750

Maximum load on tow hitch
(trailer with brakes):

100

100

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

CHASSIS-CAB CHASSIS WEIGHTS

Weights (kg) Versions 3,000 kg capacity	100 Multijet (□)	120 Multijet (□)	160 Multijet (□)
Weight empty (including fluids, 90% fuel in the tank and no optional)	1590 ÷ 1630	1605 ÷ 1635	1655 ÷ 1695
Maximum admitted loads (**)	1630	1630	1630
– front axle:	1650	1650	1650
– rear axle:	3000	3000	3000
– total:			
Towable loads			
– trailer with brakes:	2000	2500	2500
– trailer without brakes:	750	750	750
Maximum load on tow hitch (trailer with brakes):	100	100	100

(□) Chassis version

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

CHASSIS-CAB CHASSIS WEIGHTS

Weights (kg) Versions 3,300 kg capacity	100 Multijet (□)	100 Multijet (▼)	120 Multijet (□)	130 Multijet (□)	130 Multijet (▼)	160 Multijet (□)
Weight empty (including fluids, 90% fuel in the tank and no optional)	1590 ÷ 1640	1545 ÷ 1560	1605 ÷ 1655	1605 ÷ 1655	1560 ÷ 1580	1655 ÷ 1705
Maximum admitted loads (**) – front axle:	1750	1750	1750	1750	1750	1750
– rear axle:	1900	1900	1900	1900	1900	1900
– total:	3300	3300	3300	3300	3300	3300
Towable loads – trailer with brakes:	2000	2000	2500	2500	2500	2500
– trailer without brakes:	750	750	750	750	750	750
Maximum load on tow hitch (trailer with brakes):	100	100	100	100	100	100

(□) Chassis version

(▼) Special version

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

CHASSIS-CAB CHASSIS WEIGHTS

Weights (kg) Versions 3,500 kg capacity	100 Multijet (□)	100 Multijet (▼)	120 Multijet (□)	130 Multijet (□)	130 Multijet (▼)	160 Multijet (□)
Weight empty (including fluids, 90% fuel in the tank and no optional)	1590 ÷ 1640	1545 ÷ 1575	1605 ÷ 1655	1605 ÷ 1655	1560 ÷ 1590	1655 ÷ 1705
Maximum admitted loads (**) – front axle:	1850	1850	1850	1850	1850	1850
– rear axle:	2000	2000	2000	2000	2000	2000
– total:	3500	3500	3500	3500	3500	3500
Towable loads – trailer with brakes:	2000	2000	2500	2500	2500	2500
– trailer without brakes:	750	750	750	750	750	750
Maximum load on tow hitch (trailer with brakes):	100	100	100	100	100	100

(□) Chassis version

(▼) Special version

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

CHASSIS-CAB CHASSIS WEIGHTS (HEAVY version)

Weights (kg) Versions 3,500 kg capacity	120 Multijet (□)	160 Multijet (□)	120 Multijet (▼)	160 Multijet (▼)
Weight empty (including fluids, 90% fuel in the tank and no optional)	1675 ÷ 1710	1725 ÷ 1760	1610 ÷ 1630	1660 ÷ 1680
Payload (*) including the driver:	1790 ÷ 1825	1740 ÷ 1775	1870 ÷ 1890	1820 ÷ 1840
Maximum admitted loads (**)				
– front axle:	2100	2100	2100	2100
– rear axle:	2400	2400	2400	2400
– total:	3500	3500	3500	3500
Towable loads				
– trailer with brakes:	2500	2500	2500	2500
– trailer without brakes:	750	750	750	750
Maximum load on tow hitch (trailer with brakes):	120	120	120	120

(□) Chassis version

(▼) Special version

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

CHASSIS-CAB CHASSIS WEIGHTS (HEAVY version)

Weights (kg) Versions 4,000 kg capacity	120 Multijet (□)	160 Multijet (□)	120 Multijet (▼)	160 Multijet (▼)
Weight empty (including fluids, 90% fuel in the tank and no optional)	1675 ÷ 1710	1725 ÷ 1760	1610 ÷ 1630	1660 ÷ 1680
Payload (*) including the driver:	2290 ÷ 2325	2240 ÷ 2275	2370 ÷ 2390	2320 ÷ 2340
Maximum admitted loads (**)				
– front axle:	2100	2100	2100	2100
– rear axle:	2400	2400	2400	2400
– total:	4000	4000	4000	4000
Towable loads				
– trailer with brakes:	2500	2500	2500	2500
– trailer without brakes:	750	750	750	750
Maximum load on tow hitch (trailer with brakes):	100	1200	100	100

(□) Chassis version

(▼) Special version

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

CHASSIS WEIGHTS (HEAVY version)

Weights (kg) Versions 3,500 kg capacity	120 Multijet (□)	160 Multijet (□)	120 Multijet (▼)	160 Multijet (▼)
Weight empty (including fluids, 90% fuel in the tank and no optional)	1375 ÷ 1410	1425 ÷ 1460	1310 ÷ 1330	1360 ÷ 1380
Payload (*) including the driver:	2090 ÷ 2125	2040 ÷ 2075	2170 ÷ 2190	2120 ÷ 2140
Maximum admitted loads (**)				
– front axle:	2100	2100	2100	2100
– rear axle:	2400	2400	2400	2400
– total:	3500	3500	3500	3500
Towable loads				
– trailer with brakes:	2500	2500	2500	2500
– trailer without brakes:	750	750	750	750
Maximum load on tow hitch (trailer with brakes):	120	120	120	120

(□) Chassis version

(▼) Special version

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

CHASSIS WEIGHTS (HEAVY version)

Weights (kg) Versions 4,000 kg capacity	120 Multijet (□)	160 Multijet (□)	120 Multijet (▼)	160 Multijet (▼)
Weight empty (including fluids, 90% fuel in the tank and no optional)	1375 ÷ 1410	1425 ÷ 1460	1310 ÷ 1330	1360 ÷ 1380
Payload (*) including the driver:	2590 ÷ 2625	2540 ÷ 2575	2670 ÷ 2690	2620 ÷ 2640
Maximum admitted loads (**)				
– front axle:	2100	2100	2100	2100
– rear axle:	2400	2400	2400	2400
– total:	4000	4000	4000	4000
Towable loads				
– trailer with brakes:	2500	2500	2500	2500
– trailer without brakes:	750	750	750	750
Maximum load on tow hitch (trailer with brakes):	100	100	100	100

(□) Chassis version

(▼) Special version

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

CREW CAB WEIGHTS

Weights (kg)

Versions 3,300 kg capacity

Weight empty (including fluids,
90% fuel in the tank and no optional)

100 Multijet

120 Multijet

160 Multijet

1950 ÷ 2010

1965 ÷ 2025

2015 ÷ 2075

Payload (*) including the driver:

1290 ÷ 1350

1275 ÷ 1335

1225 ÷ 1285

Maximum admitted loads (**)

– front axle:

1750

1750

1750

– rear axle:

1900

1900

1900

– total:

3300

3300

3300

Towable loads

– trailer with brakes:

2000

2500

2500

– trailer without brakes:

750

750

750

Maximum load on tow hitch
(trailer with brakes):

100

100

100

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

CREW CAB WEIGHTS

Weights (kg) Versions 3,500 kg capacity	100 Multijet	120 Multijet	160 Multijet
Weight empty (including fluids, 90% fuel in the tank and no optional)	1950 ÷ 2010	1965 ÷ 2025	2015 ÷ 2075
Payload (*) including the driver:	1490 ÷ 1550	1475 ÷ 1535	1425 ÷ 1485
Maximum admitted loads (**)			
– front axle:	2100	2100	2100
– rear axle:	2400	2400	2400
– total:	3500	3500	3500
Towable loads			
– trailer with brakes:	2500	2500	2500
– trailer without brakes:	750	750	750
Maximum load on tow hitch (trailer with brakes):	120	120	120

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

CREW CAB WEIGHTS (HEAVY version)

Weights (kg)

Versions 3,500 kg capacity

Weight empty (including fluids,
90% fuel in the tank and no optional)

120 Multijet

160 Multijet

Payload (*) including the driver:

Maximum admitted loads (**)

– front axle:

– rear axle:

– total:

Towable loads

– trailer with brakes:

– trailer without brakes:

Maximum load on tow hitch
(trailer with brakes):

2005 ÷ 2105

2055 ÷ 2155

1395 ÷ 1495

1345 ÷ 1445

2100

2100

2400

2400

3500

3500

2500

2500

750

750

120

120

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

COMBI WEIGHTS

Weights (kg) Versions 3,000 kg capacity

	100 Multijet	120 Multijet	160 Multijet
Weight empty (including fluids, 90% fuel in the tank and no optional)	1935	1950	2000
Payload (*) including the driver:	1065	1050	1000
Maximum admitted loads (**)			
– front axle:	1600	1600	1600
– rear axle:	1650	1650	1650
– total:	3000	3000	3000
Towable loads			
– trailer with brakes:	2000	2500	2500
– trailer without brakes:	750	750	750
Maximum load on tow hitch (trailer with brakes):	100	100	100

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

COMBI WEIGHTS

Weights (kg) Versions 3,300 kg capacity

Weight empty (including fluids,
90% fuel in the tank and no optional)

100 Multijet

120 Multijet

160 Multijet

1935 ÷ 2045

1950 ÷ 2060

2000 ÷ 2100

Payload (*) including the driver:

1255 ÷ 1365

1240 ÷ 1350

1190 ÷ 1300

Maximum admitted loads (**)

– front axle:

1750

1750

1750

– rear axle:

1900

1900

1900

– total:

3300

3300

3300

Towable loads

– trailer with brakes:

2000

2500

2500

– trailer without brakes:

750

750

750

Maximum load on tow hitch
(trailer with brakes):

100

100

100

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

COMBI WEIGHTS

Weights (kg) Versions 3,500 kg capacity

	120 Multijet	160 Multijet
Weight empty (including fluids, 90% fuel in the tank and no optional)	2125	2175
Payload (*) including the driver:	1375	1325
Maximum admitted loads (**)		
– front axle:	2100	2100
– rear axle:	2440	2440
– total:	3500	3500
Towable loads		
– trailer with brakes:	2500	2500
– trailer without brakes:	750	750
Maximum load on tow hitch (trailer with brakes):	100	100

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

COMBI WEIGHTS (HEAVY version)

Weights (kg)

Versions 3,500 kg capacity

	120 Multijet	160 Multijet
Weight empty (including fluids, 90% fuel in the tank and no optional)	2100	2150
Payload (*) including the driver:	1400	1350
Maximum admitted loads (**)		
– front axle:	2100	2100
– rear axle:	2400	2400
– total:	3500	3500
Towable loads		
– trailer with brakes:	3000	3000
– trailer without brakes:	750	750
Maximum load on tow hitch (trailer with brakes):	120	120

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

PANORAMA WEIGHTS

Weights (kg) Versions 3,000 kg capacity	100 Multijet	120 Multijet	160 Multijet
Weight empty (including fluids, 90% fuel in the tank and no optional)	2200	2215	2265
Payload (*) including the driver:	800	785	735
Maximum admitted loads (**)			
– front axle:	1630	1630	1630
– rear axle:	1650	1650	1650
– total:	3000	3000	3000
Towable loads			
– trailer with brakes:	2000	2500	2500
– trailer without brakes:	750	750	750
Maximum load on tow hitch (trailer with brakes):	100	100	100

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

PANORAMA WEIGHTS

Weights (kg)

Versions 3,300 kg capacity

Weight empty (including fluids,
90% fuel in the tank and no optional)

100 Multijet

120 Multijet

160 Multijet

2200 ÷ 2285

2215 ÷ 2300

2265 ÷ 2350

Payload (*) including the driver:

1015 ÷ 1100

1000 ÷ 1085

950 ÷ 1035

Maximum admitted loads (**)

– front axle:

1750

1750

1750

– rear axle:

1900

1900

1900

– total:

3300

3300

3300

Towable loads

– trailer with brakes:

2000

2500

2500

– trailer without brakes:

750

750

750

Maximum load on tow hitch
(trailer with brakes):

100

100

100

(*) If special equipment is fitted (tow hitch, etc.), the unladen vehicle weight increases, thus reducing the specified payload.

(**) Loads not to be exceeded. The driver is responsible for arranging the loads so that they comply with these limits.

CAPACITIES

		100 Multijet	120 Multijet	130 Multijet	160 Multijet	Recommended fuels and genuine lubricants
Fuel tank:	litres	90 (*)	90 (*)	90 (*)	90 (*)	Diesel fuel for motor vehicles (EN590 Specification)
including a reserve of:	litres	10/12	10/12	10/12	10/12	
Engine cooling system:	litres	11 (▼)	11 (▼)	11 (▼)	11 (▼)	Mixture of 50% water and PARAFU UP
Engine sump:	litres	5.88	5.9	5.9	8.6	SELENIA WR
Engine sump and filter:	litres	6.38	6.5	6.5	9.7	
Gearbox/ differential casing:	litres	2.4 (□)	2,7 (□) Gearbox MLGU 2,9 (■) Gearbox M38	2.7 (□)	2.9 (■)	TUTELA CAR EXPERYA (□) TUTELA CAR MATRYX (■)
Hydraulic brake circuit:						TUTELA TOP 4
ABS:	litres	0.6	0.6	0.6	0.6	
ASR/ESP:	litres	0.62	0.62	0.62	0.62	
Hydraulic power steering:	litres	1.5	1.5	1.5	1.5	TUTELA CAR GI/E
Windscreen and rear window fluid reservoir:	litres	5.5	5.5	5.5	5.5	Mixture of water and TUTELA PROFESSIONAL SC 35
with headlight washer:	litres	5.5	5.5	5.5	5.5	

(*) For all versions it is possible to request 120 litre tank.
On "Free time" versions it is possible to request 60 litre tank.

(▼) With Webasto: 11.15 litres
Heater under the seat 600cc: 11.6 litres
Rear heater 900cc: 11.9 litres

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

FLUIDS AND LUBRICANTS

RECOMMENDED PRODUCTS AND THEIR SPECIFICATIONS

Use	Fluid and lubricant specifications for correct vehicle operation	Genuine fluids and lubricants	Change intervals
Oils for diesel engines	Synthetic-based engine oils, grade SAE 5W- 40, FIAT 9.55535- N2 qualification	SELENIA WR	As per Service Schedule

Should non-genuine SAE 5W-40 products be used, lubricants with minimum ACEA B4 properties are tolerated; in this event top engine performance is not guaranteed.

Using low-quality products, not compliant with ACEA B4 properties and specifications could cause engine damages not covered by warranty.

For very cold temperatures, consult Fiat Dealership for the proper **Selenia** product to use.

Use	Fluid and lubricant quality specifications for correct vehicle operation	Genuine fluids and lubricants	Applications
Lubricants and greases for transmission	Synthetic-based oil, grade SAE 75W-80 that passes API GL-4 specifications	TUTELA CAR EXPERYA	Mechanical gearbox and differential
	Synthetic-based oil, grade SAE 75W-85 that passes API GL-4 specifications	TUTELA CAR MATRYX	Mechanical gearbox and differential
	Molibdenum disulphide, lithium soap based grease. NL.GI. 2 consistency	TUTELA STAR 500	CV joints on wheel side
	Lithium soap based grease. NL.GI. 0 consistency	TUTELA MRM ZERO	CV joints on differential side
	Poly-urea oil synthetic-based grease suitable for high temperatures. NL.GI. 2 consistency	TUTELA STAR 325	CV joints on differential side
	Lubricant for power steering and automatic transmissions that passes ATF DEXRON III specifications	TUTELA GI/E	Hydraulic power steering
Brake fluids	Synthetic fluid FMVSS no. 116 DOT 4, ISO 4925 SAE J1704, CUNA NC 956-01	TUTELA TOP 4	Brake and clutch hydraulic controls
Protective agent for radiators	Protective with antifreeze action, red colour based on inhibited monoethylen glycol and organic formula, that passes CUNA NC 956-16, ASTM D 3306 specifications	PARAFLU UP (*)	Cooling circuits, proportion: 50% water and 50% PARAFLU UP (□)
Additive for diesel fuel	Additive for diesel fuels with protective action for Diesel engines	TUTELA DIESEL ART	To be mixed with diesel fuel (25 cc per 10 litres)
Windscreen/rear window washer fluid	Mixture of alcohol, water and surfactants CUNA NC 956-II	TUTELA PROFESSIONAL SC 35	To be used diluted or undiluted in windscreen/rear window washer/wiper systems

(*) IMPORTANT Do not top up or mix with fluids having characteristics different from those specified.

(□) For particularly hard climate conditions, we recommend use of a 60% PARAFLU UP and 40% demineralized water mixture.

DASHBOARD
AND CONTROLS

SAFETY
DEVICES

CORRECT USE
OF THE VEHICLE

WARNING
LIGHTS AND
MESSAGES

IN AN
EMERGENCY

VEHICLE
MAINTENANCE

TECHNICAL
SPECIFICATIONS

INDEX

FUEL CONSUMPTION

The fuel consumption figures given in the table below are determined on the basis of the homologation tests set down by specific European Directives.

The procedures below are followed for measuring consumption:

- urban cycle: cold starting followed by driving that simulates urban use of the vehicle;

- extra-urban cycle: frequent accelerating in all gears, simulating extraurban use of the vehicle; the speed varies between 0 and 120 km/h;
- combined consumption: is calculated weighing about 37% of urban cycle consumption and about 63% of extraurban consumption.

IMPORTANT The type of route, traffic situations, weather conditions, driving style, general conditions of the vehicle, trim level/equipment/accessories, load, climate control system, roof rack, other situations that affect air drag may lead to different fuel consumption levels than those measured.

COMBI Versions – According to European Directive in force (litres/100km)

	Loading Capacity	Consumption		
		Urban	Extra-urban	Combined
100 Multijet	Light (Short Wheel-Base) (*)	8.2	6.8	7.3
	Light (Medium-Wheel Base) (*)	8.5	7.0	7.6
120 Multijet	Light (Short Wheel-Base) (*)	8.3	6.5	7.2
	Light (Medium-Wheel Base) (*)	8.8	6.8	7.5
	Heavy (●)	8.9	6.7	7.5
160 Multijet	Light (Short Wheel-Base) (*)	9.4	6.9	7.8
	Light (Medium-Wheel Base) (*)	9.9	7.2	8.2
	Heavy (●)	10.2	7.6	8.6

(*) Departure in 2nd gear

(●) With specific pneumatic and transmission ratios

PANORAMA Versions - According to European Directive in force (litres/100km)

	Loading Capacity	Consumption		
		Urban	Extra-urban	Combined
100 Multijet	Light (all types) (*)	8.9	7.3	7.9
120 Multijet	Light (all types) (*)	9.3	6.9	7.8
160 Multijet	Light (all types) (*)	10.2	7.5	8.6

(*) Departure in 2nd gear

CO₂ EMISSIONS

The CO₂ emissions, shown in the following chart, refer to combined consumption.

COMBI Versions - According to European Directive in force (g/km)

	Loading Capacity	Emissions
100 Multijet	Light (Short-Wheel Base) (*)	193
	Light (Medium-Wheel Base) (*)	200
120 Multijet	Light (Short-Wheel Base) (*)	190
	Light (Medium-Wheel Base) (*)	199
	Heavy (●)	199
160 Multijet	Light (Short-Wheel Base) (*)	207
	Light (Medium-Wheel Base) (*)	216
	Heavy (●)	226

(*) Departure in 2nd gear (●) With specific pneumatic and transmission ratios

PANORAMA Versions - According to European Directive in force (g/km)

	Loading Capacity	Emissions
100 Multijet	Light (all types) (*)	208
120 Multijet	Light (all types) (*)	206
160 Multijet	Light (all types) (*)	226

(*) Departure in 2nd gear



EC - DECLARATION OF CONFORMITY

We,

Magneti Marelli Sistemi Elettronici S.p.A.
Viale A. Borletti 61/63, 20011 Corbetta, Italy

declare **under our sole responsibility** that the product:

Product Name: **NBCI250L4**

Product Description: **Infotainment system for OEM application**
is in conformity with the essential requirements of the R&TTE Directive
1999/5/EC.

The product has been tested against the following standards and specifications:

EMC (art. 3.1b): 95/54/CE directive

Safety (art. 3.1a): 95/56/CE directive

Radio Spectrum (art. 3.2): EN 300 330

The product is marked with CE marking and Notified Body number according to the Directive 1999/5/EC.

CE 0678

Place, Date of Issue

Corbetta, February 2006

Giuseppe Bergamaschi
Director of Quality Department

EMCC DR. RAŠEK

Kennnummer / Identification Number 0678

anerkannt als Benannte Stelle der Bundesrepublik Deutschland unter der Richtlinie 1999/5/EG, vertreten durch die
recognised as Notified Body for the Federal Republic of Germany under Directive 1999/5/EC, represented by



Regierungsbehörde für
Telekommunikation und Post

EG KONFORMITÄTSBESCHEINIGUNG EC CERTIFICATE OF CONFORMITY

Registriernummer:
Registration No.:

G101453R

Anzahl der Anlagen: 1
No. of Annexes:

Bescheinigungsinhaber:
Certificate Holder:

IXFIN MAGNETI MARELLI S.p.A.
Viale A. Borletti, 61/63
20011 Corbetta (MI), Italy

Produktbezeichnung:
Product Designation:

TRF 192.02, TRF 350.02, TRF 843.02

Produktbeschreibung:
Product Description:

Funkanlage geringer Leistung
Low Power Device

ProduktHersteller:
Product Manufacturer:

IXFIN MAGNETI MARELLI S.p.A.
Viale A. Borletti, 61/63
20011 Corbetta (MI), Italy

Prüfergebnis:

Mit den nach Anhang IV der Richtlinie 1999/5/EG vorgelegten
Konstruktionsunterlagen ist ordnungsgemäß nachgewiesen worden, dass
die Anforderungen der Richtlinie erfüllt sind. Das Produkt ist in
Übereinstimmung mit den grundlegenden Anforderungen des Artikels 3
der Richtlinie 1999/5/EG. Eine Liste der Dokumente, die die Basis für die
Bewertung bilden ist in der Anlage dieser Bescheinigung enthalten.

Examination Result:

With the technical construction file presented according to Annex IV of Directive 1999/5/EC
it has been properly demonstrated that the requirements of the Directive have been met.
The product is in conformity with the essential requirements of Article 3 of Directive
1999/5/EC. A list of documentation forming the basis for the examination is given in the Annex
of this Certificate.

EMCCert DR. RAŠEK

- Zertifizierungsinstitut -

Böhlwiese 5
91320 Ebermannstadt
Germany

Tel.: 09194-9331 Fax: -796484

Ort, Ausstellungsdatum

Place, Date of Issue

Unterschiedet von / Signed by Eddo de Buhr
Benannte Stelle / Notified Body



EMCCert DR. RAŠEK • Böhlwiese 5, 91320 Ebermannstadt, Germany • Tel.: +49-9194-9331 • Fax: +49-9194-7964-84
Mail: emc_cert@emcc.de • URL: http://www.emcc.de

INDEX

TECHNICAL
SPECIFICATIONS

VEHICLE
MAINTENANCE

IN AN
EMERGENCY

WARNING
LIGHTS AND
MESSAGES

CORRECT USE
OF THE VEHICLE

SAFETY
DEVICES

DASHBOARD
AND CONTROLS

Anlage 1 zur EG Konformitätsbescheinigung
Nr. G101453R vom 2003-10-06
Seite 1 von 1

Annex 1 of EC Certificate of Conformity
No. G101453R of 2003-10-06
Page 1 of 1

Konstruktionsunterlagen

Technical construction file

Als wesentliche Teile der gemäß Anhang IV der Richtlinie 1999/5/EG vorgelegten Konstruktionsunterlagen zum Nachweis der Übereinstimmung mit den grundlegenden Anforderungen gelten:
Relevant parts of the technical construction file presented according to Annex IV of Directive 1999/5/EC for demonstration of compliance with the essential requirements are:

1. Prüfbericht(e): R20471 Edition 2
Test report(s): E20471 Edition 2

vom: 2002-07-11
dated: 2002-07-11

2. Technische Dokumentation:

- Technical documentation:
- Schematic diagram
 - Parts List
 - PCB layout

3. Konformitätserklärung
Declaration of Conformity

vom: 2003-05-10
dated:

Declaration of Conformity

I hereby declare that the product

TRF 843 (remote control)

(Name of product, type or model, batch or serial number)

satisfies all the technical regulations applicable to the product within the scope of Council Directives 73/23/EEC, 89/336/EEC and 99/5/EC;

ETSI EN 300 220-3 V1.1.1.: september 2000

ETSI EN 301 489-3: august 2000

EN 60950

(Title(s) of regulations, standards, etc.)

All essential radio test suites have been carried out.

NOTIFIED BODY: EMCert Dr. Rasek

- Address:

Boelwiese 5

91320 Ebermannstadt

Germany

Identification Number: 0678

MANUFACTURER or AUTHORISED REPRESENTATIVE:

- Address:

IXFIN MAGNETI MARELLI S.p.A.

Viale A. Borletti, 61/63

20011 Corbetta (MI)

ITALY

This declaration is issued under the sole responsibility of the manufacturer and, if applicable, his authorised representative.

- Point of contact:

Ing. G. Bergamaschi Tel. +39.02.97221 Fax +39.02.97227740

(Name, telephone and fax number)

Corbetta 10.05.2003

(Place, date of issue)

(Signature)

IXFIN MAGNETI MARELLI

Viale A. Borletti, 61/63

20011 Corbetta (MI)

ITALY

Declaration of conformity TRF843.doc

Page 1 of 1

INDEX

- A**BS 102
- Accessories purchased by
the user 109
- Additional climate control system
(rear)..... 73
- Additional rear heater 72
- Air bags (front)..... 123
- Air bags (side)..... 125
- Air cleaner..... 201
- Air vents 47
- Armrest
– front 38
- Ashtray..... 87
- ASR 105
– activation/deactivation 105
- At the filling station 125
- Automatic climate control system .. 55
- Automatic headlight sensor
(daylight sensor)..... 92
- B**attery
– checking the charge 202
- jump starting 158
- recharging..... 185
- replacing 202
- battery disconnection function... 83
- Bodywork
– maintenance 208
- version codes 212
- Bonnet 98
- Brake Assist
(brake assist in an emergency)..... 103
- Brake fluid level..... 200
- Brakes
– fluid level 200
- technical data 218
- Bulb (replacement)
– bulb types 168
- general instructions..... 168
- C**eilings lights
– front 81
- rear 82
- Chassis (marking) 213
- Checking fluid levels..... 196
- Child restraint systems
(specifications for use) 119
- Cigar lighter 87
- CO₂ exhaust emissions 265
- Code card 8
- Consumption
– engine oil 198
- fuel 264
- Containing running costs 138
- Controls 82
- Correct use of the vehicle..... 133
- Cruise Control 79
- Current outlet..... 88
- D**ashboard (left hand drive version) 5
- Dashboard (right hand drive version) 6
- Dashboard and controls..... 4
- Dead lock device
– activation/deactivation..... 94
- Digital display..... 20
- Dimensions 223
- Dipped beam headlights
– bulb replacement 171

– control	74	F iat CODE system	7	Glove compartment/oddment compartment	86
Direction indicators		Fix & Go (device).....	163	Government type-approval radio-controlled remote control...	266
– control	75	Flashing the headlights	75		
– front bulb replacement.....	170	Fluids and lubricants	262	H andbrake	136
– rear bulb replacement.....	173	Folding top	89	Hazard lights	82
– side bulb replacement.....	172	Follow me home (device)	76	Headlight washer	
Doors	92	Front ceiling lights		– control	78
E lectronic alarm.....	13	– bulb replacement	176	Headlights.....	101
Engine		– control	81	– aiming device	101
– identification code	214	Front fog lights		– beam adjustment	101
– marking	213	– bulb replacement	172	Head restraints	
– specifications	216	– control button	83	– front	40
Engine compartment		Fuel		Heating and ventilation	47
– washing	209	– fuel cut-off switch	84	Heating system	47
Engine coolant gauge	19	– gauge	19		
Engine coolant level	199	Fuel consumption	264	I dentification data	212
Engine oil		Fuel cut-off switch	84	Ignition switch	15
– checking level	198	Fuel filler cap	111	In an emergency	157
– consumption	198	Fuel gauge	19	Instrument panel	
– gauge	20	Fuses (replacement)	176	(left hand drive version)	16
– technical data.....	262			Instrument panel	
EOBD system	106	G earbox		(right hand drive version)	17
ESP system	103	– use of the manual gearbox	137	Instruments	18
External lights	74	Glass/can holders	87	Interior fittings	85

Interiors	209
Isofix	124
J acking the vehicle	186
K ey with remote control	9
Key without remote control	11
L evels	
– brake fluid	200
– engine coolant	199
– engine oil	198
– power steering fluid	201
– windscreen/rear window/ headlight washer	200
Load limiters	116
M ain beam headlights	
– bulb replacement	171
– control	75
– flashing	75
Manual climate control system	51
Mobile footboard	95
Multifunction display	26
Multimeter	91
N umber plate light	175

O ddment compartment under the front passenger's seat	86
Oddment compartments	85
Operation at low temperatures	110
P aint	208
Parking	136
Parking sensors	107
Performance	229
Plates	
– body paint	213
– identification data	212
Pollen filter	202
Power steering fluid level	201
Power windows	
– controls	97
Pretensioners	116
Protecting the environment	112
R adio-controlled remote control	
– government type-approval	266
Radio transmitters and cellular telephones	110
Rain sensor	78
Reading/writing desk	88
Rear ceiling lights	

– bulb replacement	176
– control	82
Rear double door	96
Rear fog lights	
– bulb replacement	173
– control button	83
Rearview camera	40-89
Rearview mirrors	45
– door mirrors	45
– driving mirror	45
– electric	46
Refrigerated compartment	85
Refuelling	111
Rev counter	18
Reversing light	173
Rims	
– understanding rim marking	220
Roof rack/ski rack	100
S afety devices	113
Seat adjustment	37
Seat belts	114
– general warnings	117
– load limiters	116
– maintenance	109

– pretensioners	100-116
– use	98-114
Seats	
– adjustment.....	37
– cleaning	210
S.B.R. system.....	115
Self-standing supplementary heater ...	66
Side sliding door.....	95
Side/taillights	
– control	74
– front bulb replacement.....	170
– rear bulb replacement.....	173
– changing side bulb.....	175
Sliding side window	95
Smart washing	77
Snow chains	143
Sound system	108
Speed block.....	92
Starting the engine.....	134
– bump starting	159
– diesel engines	134
– emergency start-up	158
– ignition switch	15
– jump starting	158
– stopping the engine	135
– warming up the engine	135

Steering column lock	15
Steering wheel adjustment	44
Storing the vehicle	144
Sun visors	88
Supplementary heater.....	55
Suspensions	218
Symbols	7
T echnical specifications.....	211
Third brake light	175
Tips on loading.....	137
Top speeds	229
T owing a trailer	
– tow hitch installation	140
T owing the vehicle	186
T ransmission	217
T yre pressure	222
T yres	
– changing	159
– snow tyres	143
– standard	221
– understanding tyre marking	219
U nder-seat basket.....	41
U sing the manual gearbox	137

V ehicle inactivity.....	144
V ehicle maintenance	189
– heavy-duty.....	195
– routine maintenance.....	195
– scheduled service	190
– Service Schedule	191-193
V entilation	47
W arning lights and messages	145
W eights	230
W heel geometry.....	219
W heel replacement	159
W heels	
– changing	159
W indow washing.....	77
W indows (cleaning)	209
W indscreen washer	
– control	77
– fluid level	200
W indscreen wipers	
– blades	207
– control	77
– nozzles	207
W indscreen/rear window/ headlight washer fluid level.....	200
W riting/reading desk.....	88

PROVISIONS FOR THE PROCESSING OF A VEHICLE AT THE END OF ITS LIFE-CYCLE

For years now Fiat has been developing its global commitment towards the safeguarding and protection of the Environment through the continuous improvement of its production processes and the making of increasingly more “eco friendly” products. With a view to guaranteeing the best possible service to clients in full observance of environmental standards and in response to the obligations imposed by European Directive 2000/53/EC on end-of-life vehicles, Fiat offers its clients the possibility to hand in their vehicle* at the end of its life span without additional costs.

The European Directive, in fact, provides for the take-back of the vehicle without the last holder or owner of the same incurring expenses due to the fact that the market value of the vehicle is zero or negative. In particular, in almost all of the countries of the European Union, up until 1st January 2007, take-back of the vehicle free of charge only applies to vehicles registered from 1 July 2002 on, while, from 2007 on, take-back will be carried out free of charge, independently of the year of registration, provided that the vehicle still contains all its essential component parts (especially engine and body) and is free from additional waste materials.

Our contracted network of authorised treatment facilities has been carefully selected in order to provide a quality service to our customers by de-polluting and recycling “End of Life Vehicles” to approved environmental standards. To find out the location of your nearest authorised treatment facility, offering free of charge take-back, simply contact one of our dealers or refer to the Fiat web site or call the toll free number 00800 3428 0000.

* Passenger transportation vehicles to seat a max. of nine persons, having a total admissible weight of 3.5 t

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.





SELENIA®

At the heart of your engine.



Always ask your mechanic for ***SELENIA®***

Oil change? The experts recommend Selenia.

*The engine of your car is factory filled with **Selenia**.
This is an engine oil range which satisfies the most advanced
international specifications. Its superior technical characteristics
allow **Selenia** to guarantee the **highest performance**
and **protection of your engine**.*

The Selenia range includes a number of technologically advanced products:

SELENIA PERFORMER MULTIPOWER

Particularly ideal for the protection of new generation petrol engines, very effective even in the most severe weather conditions. It guarantees a reduction in fuel consumption (Energy conserving) and it is also ideal for alternative engines.

SELENIA K

is the synthetic lubricant with innovative technology, which ensures improved cold starting for petrol engines and the utmost protection also under typically "urban" conditions of use. Owing to its 5W-40 viscosimetric grade and its special formulation it more effectively meets the emission limits required by new European regulations and exceeds the major international specifications.

SELENIA WR

Oil specifically designed for common rail Multijet engines. Particularly effective during cold starts, it guarantees maximum wear protection and hydraulic tappets control, reduction in consumption and stability at high temperatures.

SELENIA DIGITECH

Fully synthetic lubricant for petrol and diesel engines. Its advanced technology guarantees maximum protection, a reduction in consumption and reliability in extreme climate conditions.

The range also includes Selenia StAR, Selenia Racing, Selenia 20K Alfa Romeo, Selenia TD, Selenia Performer 5W-40
For further information on Selenia products visit the web site www.fl-selenia.com.

COLD TYRE PRESSURE (bar)

Tyres	Use	Front	Rear
215/70 R15	3000 PTT(*) Light with standard tyres, PANORAMA excluded 3300 PTT(*) Light / 3500 PTT(*) Light with standard tyres	4.0 ± 0.05	4.0 ± 0.05
		4.1 ± 0.05	4.5 ± 0.05
215/70 R15	PANORAMA with standard tyres	4.1 ± 0.05	4.5 ± 0.05
225/70 R15	3000 PTT(*) Light with oversize tyres, PANORAMA excluded 3300 PTT(*) Light / 3500 PTT(*) Light with oversize tyres	4.0 ± 0.05	4.0 ± 0.05
		4.1 ± 0.05	4.5 ± 0.05
225/70 R15 C	Winter tyres M+S class C on Camping vehicle	4.3 ± 0.05	4.75 ± 0.05
225/70 R15	PANORAMA with oversize tyres	4.1 ± 0.05	4.5 ± 0.05
215/70 R15 CP	Light range with Camping tyres	5.0 ± 0.05	5.5 ± 0.05
215/75 R16	Heavy range with standard tyres	4.5 ± 0.05	5.0 ± 0.05
225/75 R16	Heavy range with oversize tyres	4.5 ± 0.05	5.0 ± 0.05
225/75 R16 C	Winter tyres M+S class C on Camping vehicle	5.2 ± 0.05	5.2 ± 0.05
225/75 R16 CP	Heavy range with Camping tyres	5.5 ± 0.05	5.5 ± 0.05

(*) Total weight on ground

Add +0.3 bar to the prescribed inflation pressure when the tyres are warm. Recheck pressure value with cold tyres.

With snow tyres, add +0.2 bar to the inflation pressure value prescribed for standard tyres..

ENGINE OIL CHANGE

	100 Multijet	120 Multijet	130 Multijet	160 Multijet
	litres	litres	litres	litres
Engine sump and filter	6.38	6.5	6.5	9.7

FUEL CAPACITIES (litres)

	100 Multijet - 120 Multijet - 130 Multijet - 160 Multijet
Tank capacity	90 (*)
Reserve	10 / 12

Refuel diesel engines with diesel fuel for motor vehicles only (EN 590 Specifications)

(*) For all versions it is possible to request 120 litre tank.

On "Free time" versions it is possible to request 60 litre tank

Fiat Group Automobiles S.p.A. - Customer Services - Technical Services - Service Engineering - Largo Senatore G. Agnelli, 5 - 10040 Volvera - Torino (Italia)

Print n. 603.81.357 - 04/2009 - 5 edition

The data contained in this publication is intended merely as a guide. FIAT reserves the right to modify the models and versions described in this booklet at any time for technical and commercial reasons.

If you have any further questions please consult your FIAT dealer.

Printed in recycled paper without chlorine.