


Matrix Foot-rest removal to fit vent for footwell heater



Remove 6mm Nut, bit fiddly, have a magnet handy to fish it out, in case you drop the nut,


Plastic Pin pulls out. May require a bit
of wiggling around



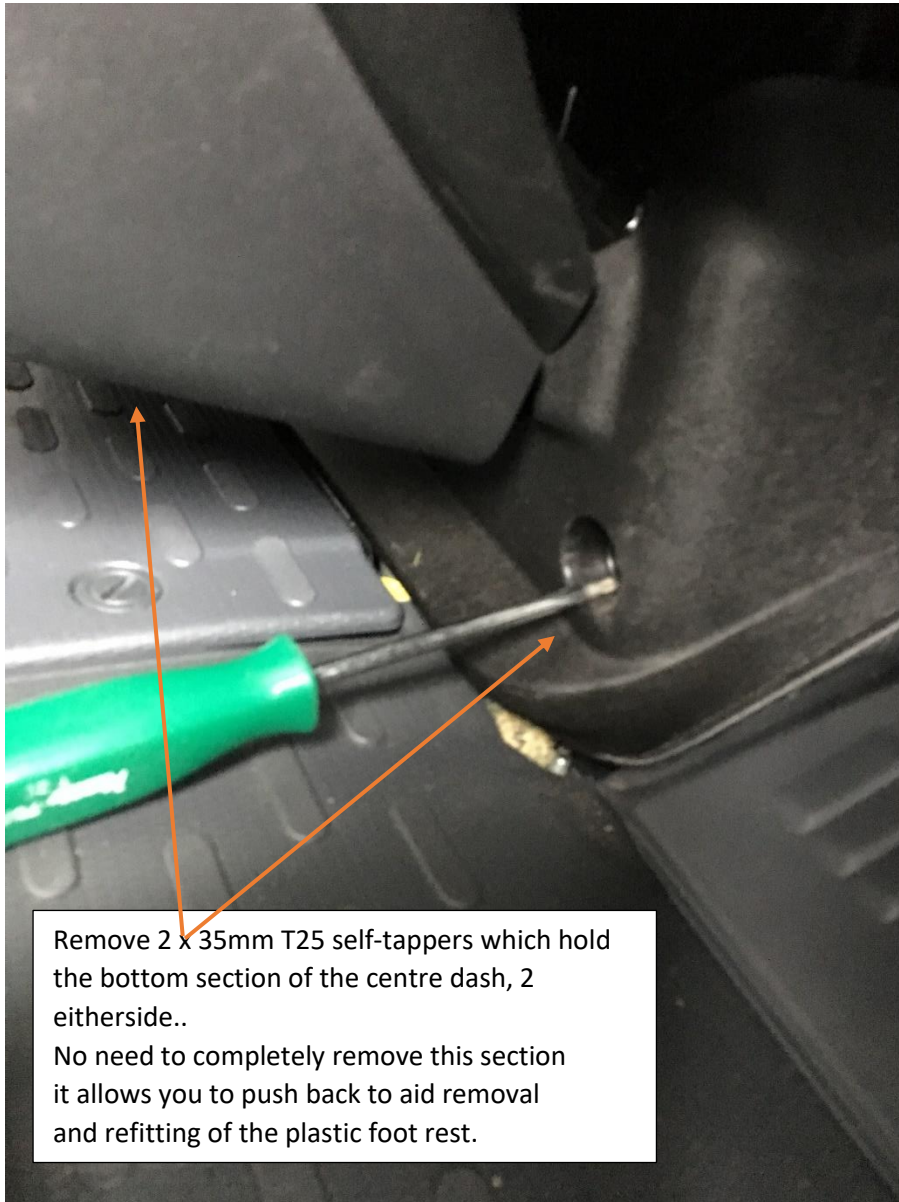

Remove 2 x 35mm T25 self-tappers which hold the bottom section of the centre dash, 2 either side..

No need to completely remove this section it allows you to push back to aid removal and refitting of the plastic foot rest.

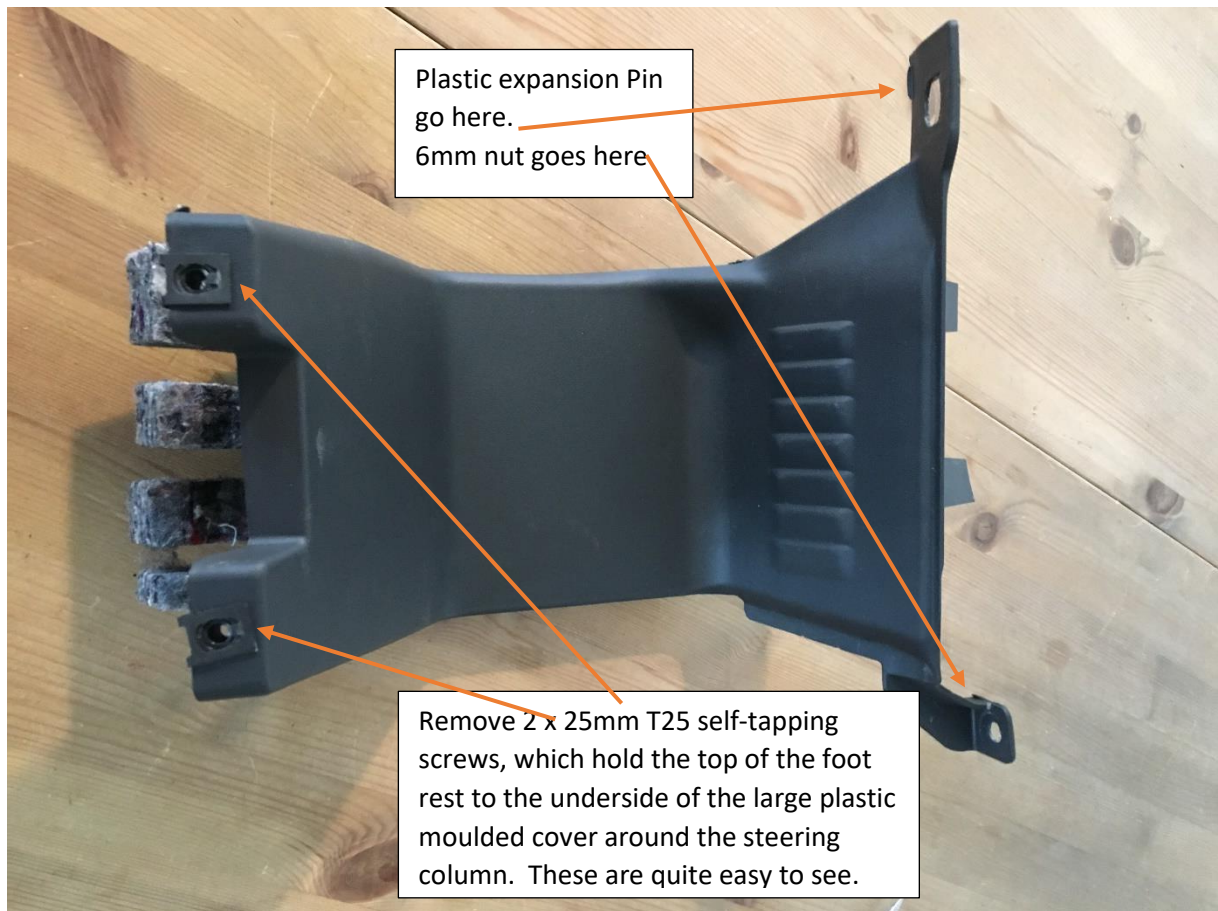




Remove 2 x 25T self-tapping screws,
one either side. This allows the large
plastic cover to drop down. You simply
lift it completely out the way.


This is normally a small storage pocket, to the right of the steering column




The 2nd 2mt self-tapping screw

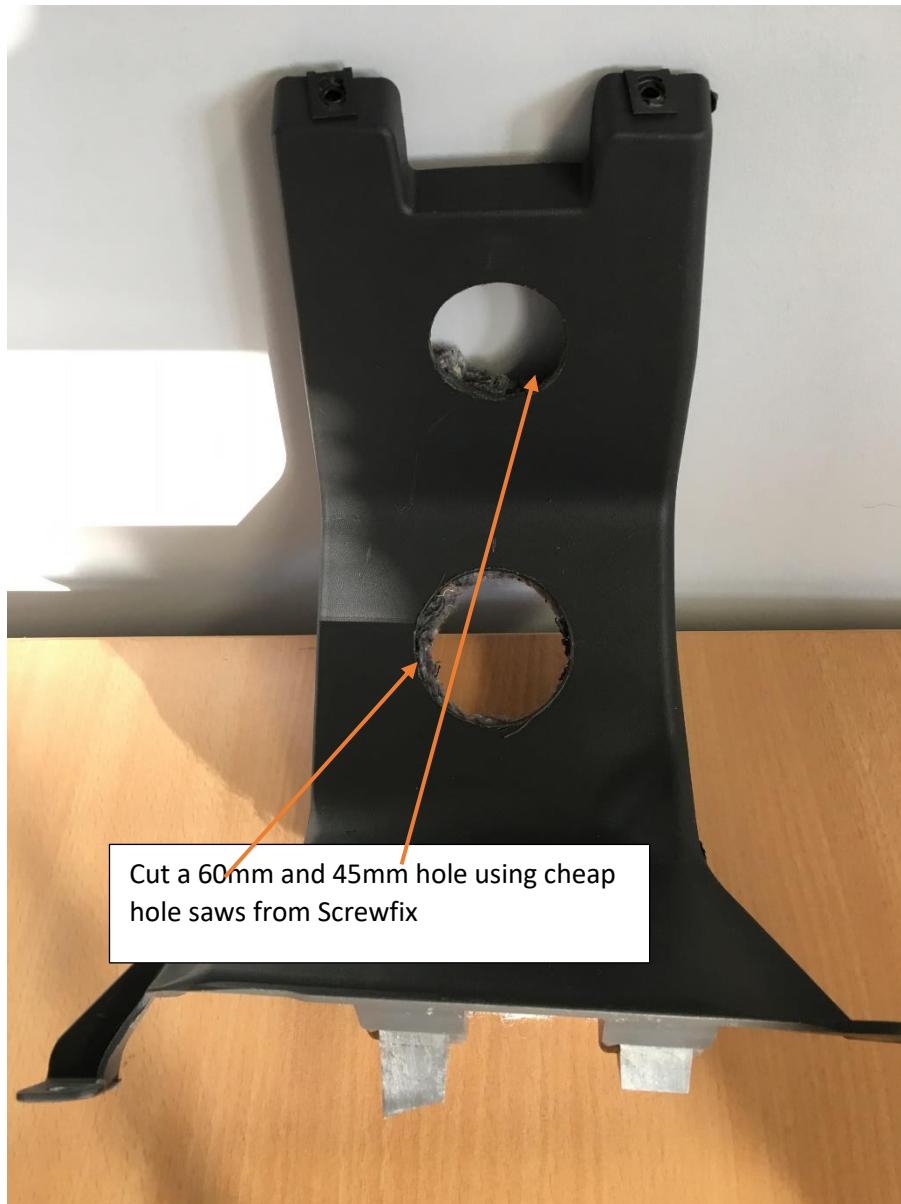

Cut a 60mm and 45mm hole using cheap hole saws from Screwfix

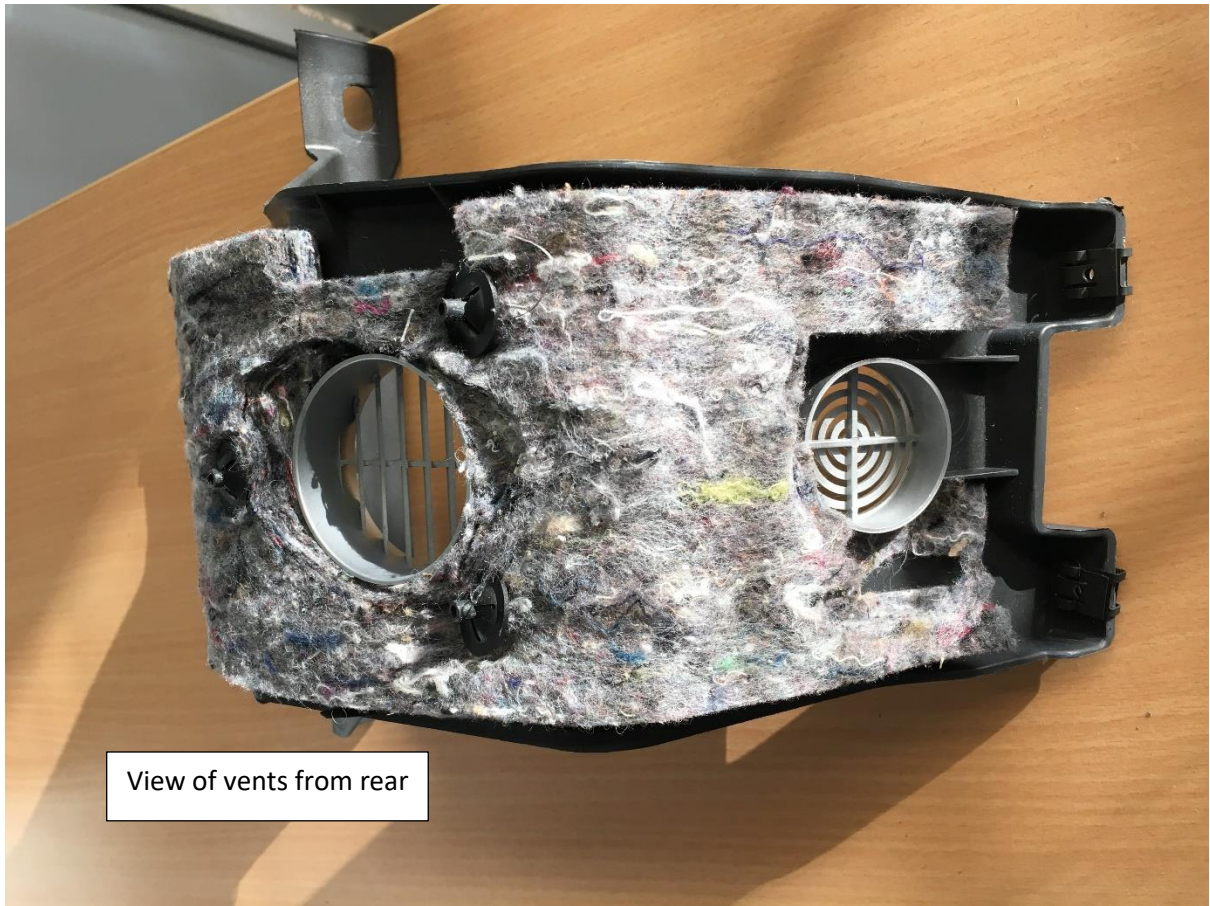

View of vents from rear

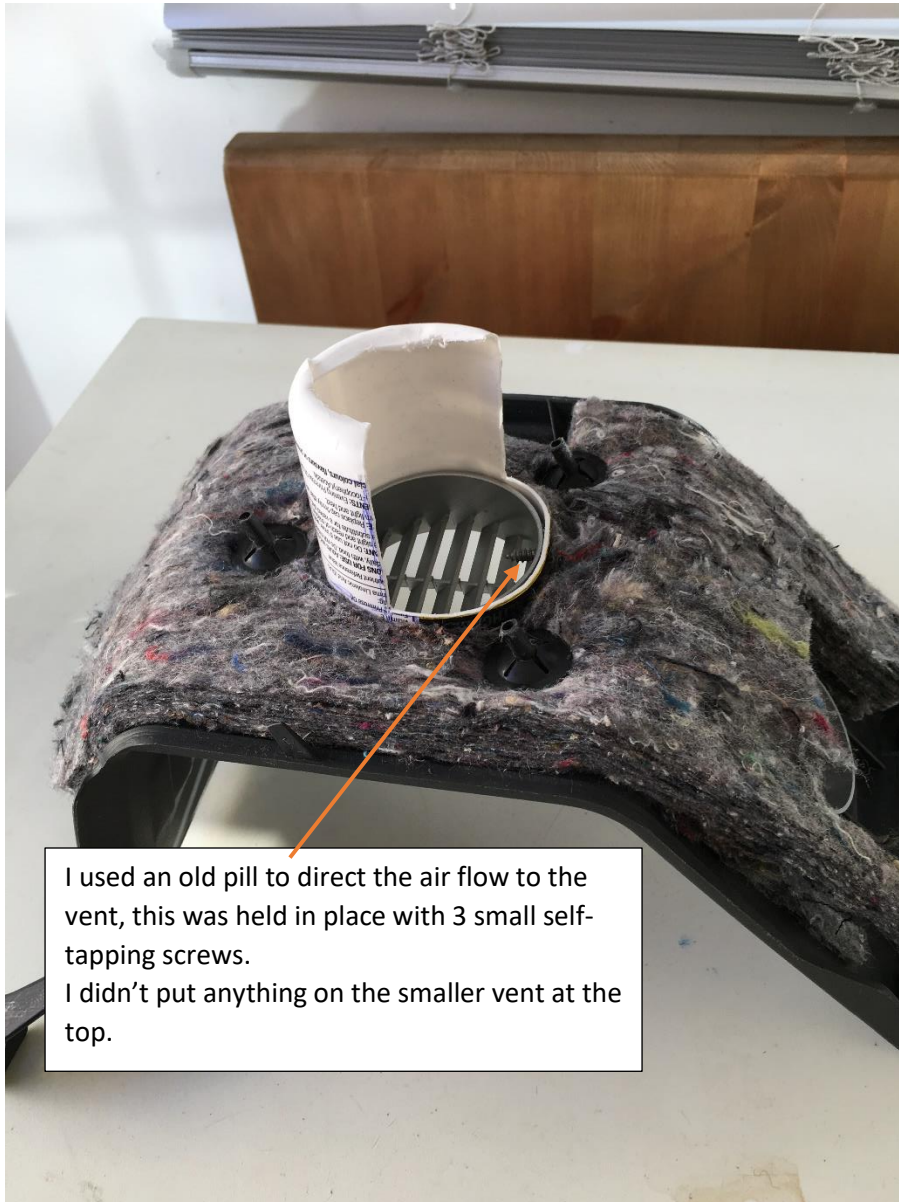

I used an old pill to direct the air flow to the vent, this was held in place with 3 small self-tapping screws.
I didn't put anything on the smaller vent at the top.





Fitted back in place



Job done, you wouldn't believe it.
I now have lovely warm feet